

SCAN ME



# PYLE

PyleUSA.com



## *PGMC3WPS4*

Game Console Handle Wireless Controller  
with LED Lights, Built-in Speaker 6-Axis Sensor

***USER GUIDE***

**Please read this instruction manual thoroughly before using the unit. Please keep for future reference.**

### **Contents:**

- 1 Wireless Controller
- 1 Changing Cable
- 1 User Manual



### **A complete guide for beginners to pair and operate**

There are two pairing method for this product:

Wireless BT pairing and wired direct connection (data cable included can also be used as charging cable)

### **Wireless Pairing Operation Steps**

1. Using the **PGMC3WPS4** controller on video game console for the first time, connect the **PGMC3WPS4** controller to the console using USB cable included to complete device registration. The **PGMC3WPS4** controller will connect to the video game console automatically in the future.
2. Press "**SHARE+HOME KEY**" simultaneously for 2 seconds, blue light will flash quickly, now you can pair the controller with the console.
3. If it still does not work, you may need to restart it or charge it fully.

### **Wired Operation Steps**

PC can be connected directly with the data cable.

The driver will install automatically (The wireless connection also supports PS3, but does not support mobile phones, TV Box).

## How To Use the Wing Button

1. The four-wing buttons on the back can replace the function of any button within 1, 2, 4, 3.
2. **First, make sure to format the controller first with this process:**
  - Press the share and any wing button together, then release the wing button and share button in sequence (wing button must be released first).
3. **Now you can set any button you want to be replaced by the wing button with this process:**
  - Press the share and any button within 1, 2, 4, 3 then press any wing button, finally release the wing button first then other buttons. The setting will be successful.

① L1 L2 PC MODE

③ ACTION KEYS


② R1 R2 PC MODE

④ ARROW KEY



## How To Use The Wing Button

- Those four wing buttons on the back can replace the function of any button within 1, 2, 4, 3.
- Make sure to format the controller first with this process.
- Press the share and any wing button together, then release the wing button and share button in sequence.  
(wing button must be released first)
- Now you can set any button you want to be replaced by the wing button with this process.
- Press the share and any button within 1, 2, 4, 3, then press any wing button, finally release the wing button first then other buttons, the setting will be successful.

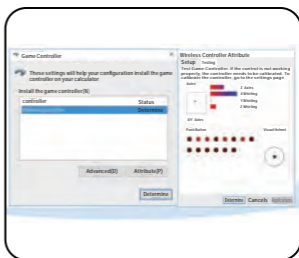

### California Prop 65 Warning

#### WARNING:


This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

## Controller button corresponding table

| PS4 |   |    |    |    | L1 | R1    | L2 | R2 | share | option | L3 | R3 | P4 | T-PAD |
|-----|---|----|----|----|----|-------|----|----|-------|--------|----|----|----|-------|
| f   | 1 | 2  | 3  | 4  | 5  | 6     | 7  | 8  | 9     | 10     | 11 | 12 | 13 | 14    |
| PC  | b | L4 | R4 | r5 | L5 | ----- |    |    |       |        |    |    |    |       |

### FRONT

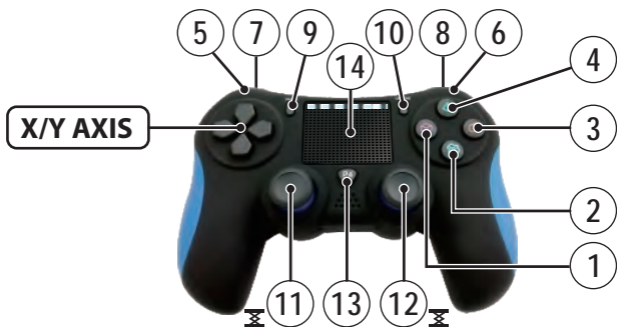

### BACK



# PYLE

PyleUSA.com



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

**PYLE**

***Questions? Issues?***

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)