

Visit Our Website



SCAN ME
PyleUSA.com

PYLE

PyleUSA.com



PKBRD4112



PKBRD6111/PKBRD6111.5



PKBRD4911PK

PKBRD4112 - PKBRD6111 - PKBRD4911PK
Digital Musical Karaoke Keyboard

USER GUIDE

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.
RETAIN THIS OWNER'S MANUAL FOR FUTURE REFERENCE.**

IMPORTANT NOTICE FOR SAFETY USE

Please read the following information before use.

1. **Power Adaptor Information:** This product does not include a power adaptor. You can use the adaptor from your mobile phone.
Ensure the adaptor specifications are: INPUT: 100-240V- 50/60Hz
OUTPUT: DC 5V, 1000mA or above, and it should have CE or UL approval.
The adaptor used with this product should be regularly examined for potential hazards, such as damage to the cable, cord, plug, or enclosure. If such damage is found, do not use the product until the damage has been properly repaired.
2. **Charging Indicator:** The WHITE power **ON/OFF** button also functions as the charging indicator. The button will light up red while the piano is charging. When the built-in Li-ion battery is fully charged, the red light will turn off. It takes about 4 hours to fully charge the battery.
3. **Battery Maintenance:** If the piano is not used for more than two months, please charge it every two months to maintain the performance and service life of the built-in Li-ion battery.
4. **Charging Safety:**
 - This product must be charged by adults.
 - The Li-ion battery is fixed inside the toy. Do not attempt to remove it or expose it to fire or high temperatures, as it may cause an explosion hazard.
5. **USB Cable Usage:** This product includes a USB cable. If using a different USB cable, ensure it is free from damage. It is recommended to use the original USB cable and adaptor from your mobile phone. Inferior USB cables and adaptors may cause noise and other potential hazards while using the keyboard.
6. **Age Suitability:** This product is not suitable for children under 3 years old.
7. **Volume Precautions:** Do not play the music loudly for prolonged periods. Excessively loud music can damage your hearing.
8. **Placement Restrictions:**

Do not place this product in the following locations:

 - Humid or dusty places.
 - Kitchens or areas with cooking fumes.
 - Near air conditioners, electric blankets, or exposed to direct sunlight or any other source of heat.

9. **Electronic Interference:** Do not place this product near TVs, radios, or other electronic devices that may cause audio or video interference.
10. **Unplugging Adaptor:** Unplug the adaptor before cleaning the product or when it will not be used for an extended period.


Illustration

- | | | |
|---|---------------------------|----------------------|
| 1. Power on/off/
Charging Indicator | 9. Tone | 19. Keyboard drum |
| 2. Volume | 10. Rhythm | 20. Metronome |
| 3. Tempo | 11. Record | 21. Key light on/off |
| 4. Transpose | 12. Sustain | 22. Audio in jack |
| 5. Start/Stop | 13. Vibration | 23. Microphone jack |
| 6. Digital Number | 14. SYNC | 24. DC 5V jack |
| 7. Demo | 15. Bass Chord ON/OFF | |
| 8. Teaching Function
(OKON, Follow, Guide) | 16. Rhythm Volume Control | |
| | 17. Single finger chord | |
| | 18. Fingered chord | |

POWER SUPPLY

DC adaptor: Use only a DC adaptor with a USB connector with an output voltage of DC 5V and current of 1000mA or above. Using other voltage adaptors may cause malfunction.

Attention: Charge the piano for 3-4 hours before the first use. The power on/off button will light up in red during charging and turn off when fully charged.

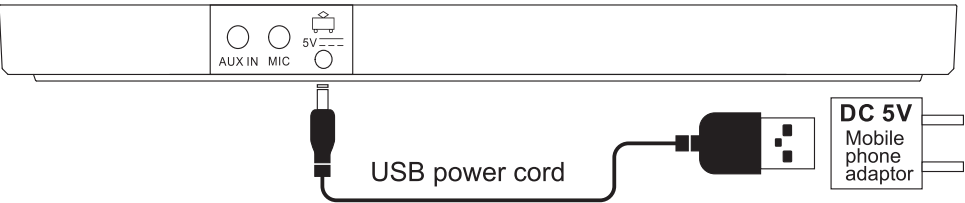

TURN ON FOR PLAYING

Press the power on/off button and play any white or black keys. If a piano sound is heard, the keyboard works.

⚠ WARNING: Cancer and Reproductive Harm - www.P65warnings.ca.gov

Sleep Function:

1. The keyboard will automatically enter sleep mode if not played for more than 3 minutes.
2. To wake it up, press any white or black key.

HOW TO PLAY

1. **Power on/off/Charging Indicator:** The WHITE power on/off button is also the charging indicator. It lights up in red when charging and turns off when fully charged.
2. **Volume Control:** Press the + or – button to adjust the volume.
3. **Tempo Control:** Press the + or – button to adjust the tempo.
4. **Transpose Control:** Press the + or – button to adjust the tune.
Tune range is from +6 to -6.
5. **Start/Stop Control:** In modes like TEACHING, REC, PLAY, DEMO, RHYTHM, METRONOME, press this button to exit the mode. If no mode is selected, press this button to start RHYTHM mode.
6. **Digital Buttons:** Use these to choose TONE, RHYTHM, or DEMO numbers.
Press + or - for more than 2 seconds to increase or decrease the numbers shown in the LED. Ensure inputs are within limits, e.g., DEMO limit is 49.
7. **Demo:** There are 50 demos. Press DEMO to play songs in continuous playback mode starting from song No. 00. Select songs using digital buttons or + and - buttons. Press DEMO again or Start/Stop to stop.
8. **Teaching Function:** Three modes with key lighting guide, using 50 teaching songs (same as demos).
 - A. OKON (One key for one note):** Press this button and choose the DEMO number with the digital buttons. Background music will play, and you can play any keys, which will be corrected automatically. The correct key will light up to guide the next note.
 - B. Follow:** Press FOLLOW and choose the DEMO number. Background music will play, and the correct key will light up, waiting for you to play.
The background music will stop until the correct key is pressed.
 - C. Guide:** Press GUIDE and choose the DEMO number. Background music will play, and you play along. If you forget the next note, stop for 3 seconds, and the correct note will light up. Adjust tempo according to your speed for practice.

Note: *You can also choose demo songs by pressing the white or black keys, from 00 to 49, starting from the first key on the left side up to the 50th key. The demo number will be shown in the LED display.*

9. **Tone:** Default tone is piano. There are 100 tones. Press TONE and use digital buttons to choose the tone from 00 to 99.
10. **Rhythm:** There are 100 rhythms. Press Start/Stop to start rhythm playing and use digital buttons to choose the rhythm from 00 to 99.
11. **Record and Play:** Press REC to record up to 85 notes. Press PLAY to play the recorded music. Press REC again to clear all records.
12. **Sustain (Available in BF-5301CL/BF-5302CL/BF-7301CL/BF-7302CL)**
Press this button to extend the sound of the key.
13. **Vibration (Available in BF-5301CL/BF-5302CL/BF-7301CL/BF-7302CL)**
Press this button for a vibrating sound.
14. **SYNC (Available in BF-6301CL/BF-6302CL/BF-8301CL/BF-8302CL)**
Rhythm and chord will synchronize with the tone. Press this button and choose Rhythm and Tone numbers. Choose Single Finger Chord or Fingered Chord to play chords and tones simultaneously.
15. **Bass Chord ON/OFF (Available in BF-6301CL/BF-6302CL)**
Switches chord sound from BASS to PIANO.
16. **Rhythm Volume Control (Available in BF-8301CL/BF-8302CL)**
Adjust rhythm volume by pressing + or -.
17. **Single Finger Chord:** Refer to appendix 3 for fingering. Press RHYTHM and choose any rhythm, then press SINGLE to enter this mode. Play one of the 20 keys on the left to start the chord. Press SINGLE again to exit.
18. **Fingered Chord:** Refer to appendix 3 for fingering. Press RHYTHM and choose any rhythm, then press FINGER to enter this mode. Play three keys of the 20 keys on the left to start the chord. Press FINGER again to exit.
19. **Keyboard Drums/Animal Sounds:** Refer to appendix 4 for the list of keyboard drums/animal sounds. There are 61 voices for percussion and animal sounds with 61 different keys. Press DRUM again to exit this function.
20. **Metronome (Available in BF-5301CL/BF-5302CL/BF-7301CL/BF-7302CL)**
Press this button to start beats from 1/4, repeating at 120 beats per minute. Adjust tempo with + or -. Choose from 1/4, 2/4, 3/4, or 4/4 beats. Press the button multiple times to cycle through the beats.

- 21. **Key Light ON/OFF:** The key light is on by default. Press this button to turn off the light.
- 22. **Audio In Jack:** Connect to a mobile phone/iPad/MP3 via audio cable for playing more songs. Volume control is through the connected device.
- 23. **Microphone:** Connect the microphone to the MIC jack at the back of the piano before use.
- 24. **DC Jack:** Connect the round pin of the USB power cord to the DC jack for charging.

TROUBLESHOOTING

PROBLEM	SOLUTION
No sound after pressing the power ON/OFF	Check if the DC adaptor is correctly plugged in. Check if the USB cable is properly connected on both ends.
The keyboard stops during playing.	Check if the power supply is disconnected. Check if the USB cable is disconnected or improperly plugged.

OPERATION NOTICE

- 1. **Interference:** Keep the product away from electric appliances like radios, televisions, or tuners to avoid interference with audio or video signals.
- 2. **Power Socket:** Use the nearest power socket for easy disconnection in case of malfunction or emergency.
- 3. **Unplugging:** Always unplug the adaptor when not in use.
- 4. **Disassembly:** Do not open or disassemble the product.
There are no user-serviceable parts inside. Stop using the product if it behaves abnormally.

Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.



PyleUSA.com/register

Appendix 1 (50 Demos)

DEMO No.	SONG LIST	LED DISPLAY
D00	Kang Ding Love Song	KANGDI
D01	Santa Claus Is Coming To Town	CHRIST
D02	Fur Elise	FALICE
D03	Mariage D'amour	WEDDIN
D04	Schubert Serenade	SBTXYQ
D05	Song Of Seashore	HAIBIN
D06	Come Home	GOHOME
D07	Turkish March	TURKEY
D08	Blue Love	BLUELO
D09	Bogey	BOGEYI
D10	Cha Cha	CHACHA
D11	Spanish Coffee	COFFEE
D12	Clarinet Polka	BOERKA
D13	Gqtyzg	GQTYZG
D14	Lanjinl	LANJLI
D15	Shuibian	SHUIBI
D16	Troika	THREEC
D17	Espana Cani	SPAINC
D18	Let It Be	LETITB
D19	Katiusha	KAQIUS
D20	Jaunty	Jaunty
D21	Night On The Grassland	NightO
D22	Often Go Home To Look At	OftenG
D23	Auspicious Day	Auspic
D24	Childhood	Chidho
D25	The Bending Moon	TheBen
D26	Liuyang River	Liuyan
D27	Aobaoshan	Aobaos
D28	How Many Peach Blossom	HowMan
D29	Ging Zang A Plateau	GingZa
D30	Alishan Girl	Alisha
D31	Liang Zhu	LiangZ
D32	Why Are the Flowers So Red	FlwRed
D33	Good Life Of Peace	GdLife
D34	Jasmine	Jasmin
D35	The Penghu Bay	PenhuG
D36	Sweet Honey	SweetH
D37	Happy Old Family	HappyO
D38	Trials of a long journey	Journe
D39	Same Song	SameSo
D40	Yang On A Horse To Transport Grain	YangOn
D41	Rugged Mountain Path	Rugged
D42	Step Higher	StepHi
D43	Farewell	Farewe
D44	Camptown Races	CampRa
D45	Small Basket	SBaskt
D46	New Century	NewCen
D47	Nanni Bay	NanniB
D48	Beijing Welcomes You	Beijin
D49	Cloud To Chase The Moon	CloudM

Appendix 2 (100 Tones)

TONES NO.	INSTRUMENT LIST	LED DISPLAY	TONES NO.	INSTRUMENT LIST	LED DISPLAY
T00	Acoustic Grand Piano	GPIANO	T50	BASBAN	BASBAN
T01	Violin	VIOLIN	T51	GUIMUB	GUIMUB
T02	Guitar	GUITAR	T52	GUIBEL	GUIBEL
T03	Trumpet	TRUMPE	T53	GUIORG	GUIORG
T04	Harp	HARP	T54	GUIJAZ	GUIJAZ
T05	Strings	STRING	T55	GUIVIO	GUIVIO
T06	Bell	BELL	T56	GUIHAR	GUIHAR
T07	Organ	ORGAN	T57	GUISTR	GUISTR
T08	Bass	BASS	T58	UITRU	UITRU
T09	Saxphone	SAX	T59	UITUB	UITUB
T10	Music Box	MUBOX	T60	GUIHOR	GUIHOR
T11	Horn	HORN	T61	UISAX	UISAX
T12	Banjo	BANJO	T62	UIOBO	UIOBO
T13	Oboe	OBOE	T63	GUICLU	GUICLU
T14	Jazz Giutar	JGUITA	T64	GUIFLU	GUIFLU
T15	Flute	FLUTE	T65	GUIBAN	GUIBAN
T16	Clarinet	CLARIN	T66	BELMUB	BELMUB
T17	Tuba	TUBA	T67	BELORG	BELORG
T18	Synth Piamub	PIAMUB	T68	BELJAZ	BELJAZ
T19	Synth Piabel	PIABEL	T69	BELVIO	BELVIO
T20	PIAORG	PIAORG	T70	BELHAR	BELHAR
T21	PIAGUI	PIAGUI	T71	BELSTR	BELSTR
T22	PIAJAZ	PIAJAZ	T72	BELTRU	BELTRU
T23	PIABAS	PIABAS	T73	BELTUB	BELTUB
T24	PIAVIO	PIAVIO	T74	BELHOR	BELHOR
T25	PIAHAR	PIAHAR	T75	BELSAX	BELSAX
T26	PIASTR	PIASTR	T76	BELOBO	BELOBO
T27	PIATRU	PIATRU	T77	BELCLA	BELCLA
T28	PIATUB	PIATUB	T78	BELFLU	BELFLU
T29	PIAHOR	PIAHOR	T79	BELBAN	BELBAN
T30	PIASAX	PIASAX	T80	BANMUB	BANMUB
T31	PIAOBO	PIAOBO	T81	BANORG	BANORG
T32	PIACLA	PIACLA	T82	BANJAZ	BANJAZ
T33	PIAFLU	PIAFLU	T83	BANVIO	BANVIO
T34	PIABAN	PIABAN	T84	BANHAR	BANHAR
T35	BASMUB	BASMUB	T85	BANSTR	BANSTR
T36	BASBEL	BASBEL	T86	BANTRU	BANTRU
T37	BASORG	BASORG	T87	BANTUB	BANTUB
T38	BASGUI	BASGUI	T88	BANHOR	BANHOR
T39	BASJAZ	BASJAZ	T89	BANSAX	BANSAX
T40	BASVIO	BASVIO	T90	BANOBO	BANOBO
T41	BASHAR	BASHAR	T91	BANCLA	BANCLA
T42	BASSTR	BASSTR	T92	BANFLU	BANFLU
T43	BASTRU	BASTRU	T93	HARMUB	HARMUB
T44	BASTUB	BASTUB	T94	HARORG	HARORG
T45	BASHOR	BASHOR	T95	HARJAZ	HARJAZ
T46	BASSAX	BASSAX	T96	HARVIO	HARVIO
T47	BASOBE	BASOBE	T97	HARSTR	HARSTR
T48	BASCLA	BASCLA	T98	HARTRU	HARTRU
T49	BASFLU	BASFLU	T99	HARTUB	HARTUB

Appendix 2 (100 Rhythms)

RHYTHM NO.	RHYTHM LIST	LED DISPLAY	RHYTHM NO.	RHYTHM LIST	LED DISPLAY
R00	CLUP POP	CLUBPO	R50	FRWSWI	FRWSWI
R01	EURO POP	EUROPO	R51	DISSWI	DISSWI
R02	90'S POP	90SPOP	R52	WORSWI	WORSWI
R03	8 BEAT	8BEAT	R53	SAMSWI	SAMSWI
R04	8 BTBLD1	8BTBLD	R54	SWISWI	SWISWI
R05	8 BTBLD2	8BTBLD	R55	TANSWI	TANSWI
R06	60'S 8 BEAT	60S8BE	R56	CHASWI	CHASWI
R07	16 BEAT	16BEAT	R57	VIESWI	VIESWI
R08	16 BEATBLD	16BEAT	R58	BSASWI	BSASWI
R09	16 BTSHFL	16BTSH	R59	BALSWI	BALSWI
R10	POP 1	POP1	R60	CLUBLU	CLUBLU
R11	POP2	POP2	R61	EURBLU	EURBLU
R12	70'S ROCK	70SROC	R62	90'S BLU	90'S BLU
R13	POP BLD	POPBLD	R63	8 BEBLU	8 BEBLU
R14	16 BTSOUL	16BTSO	R64	8 BEBLU 1	8 BEBLU 1
R15	SOUL POP	SOULPO	R65	8 BEBLU 2	8 BEBLU 2
R16	OLDIESHFL	OLDIES	R66	60'S BLU	60'S BLU
R17	N.O.R&R	NORAR	R67	16 BBLU 1	16 BBLU 1
R18	BLUEGRAS 1	BLUEGR	R68	16 BBLU 2	16 BBLU 2
R19	BLUEGRAS 2	BLUEGR	R69	16 BBLU 3	16 BBLU 3
R20	FR WALTZ	FRWALT	R70	POPBLU 1	POPBLU 1
R21	DISCO	DISCO	R71	POPBLU 2	POPBLU 2
R22	WORD POP	WORDPO	R72	70'S BLU	70'S BLU
R23	SAMBA	SAMBA	R73	POPBLU	POPBLU
R24	SWING	SWING	R74	16 BBLU	16 BBLU
R25	TANGO	TANGO	R75	SOUBLU	SOUBLU
R26	CHACHA	CHACHA	R76	OLDBLU	OLDBLU
R27	VIENWLTZ	VIENWL	R77	NORBLU	NORBLU
R28	BSANVA	BSANVA	R78	BLUBLU 1	BLUBLU 1
R29	BALADI	BALADI	R79	BLUBLU 2	BLUBLU 2
R30	CLUSWI	CLUSWI	R80	FRWBLU	FRWBLU
R31	EURSWI	EURSWI	R81	DISBLU	DISBLU
R32	90'S SWI	90SSWI	R82	WORBLU	WORBLU
R33	8BTSWI 1	8BESWI	R83	SAMBLU	SAMBLU
R34	8BTSWI 2	8BESWI	R84	SWIBLU	SWIBLU
R35	8BTSWI 3	8BESWI	R85	TANBLU	TANBLU
R36	60'S SWI	60SSWI	R86	CHABLU	CHABLU
R37	16 BSWI 1	16BSWI	R87	VIEBLU	VIEBLU
R38	16 BSWI 2	16BSWI	R88	BSABLU	BSABLU
R39	16 BSWI 3	16BSWI	R89	BALBLU	BALBLU
R40	POPSWI 1	POPSWI	R90	CLUVIE	CLUVIE
R41	POPSWI 2	POPSWI	R91	EURVIE	EURVIE
R42	70'S SWI	70SSWI	R92	SPOVIE	SPOVIE
R43	POPSWI	POPSWI	R93	BEAVIE	BEAVIE
R44	16 BSWI	16BSWI	R94	TBLVIE 1	TBLVIE 1
R45	SOUSWI	SOUSWI	R95	TBLVIE 2	TBLVIE 2
R46	OLDSWI	OLDSWI	R96	S8BVIE	S8BVIE
R47	NORSWI	NORSWI	R97	BEAVIE 1	BEAVIE 1
R48	BLUSWI 1	BLUSWI	R98	BEAVIE 2	BEAVIE 2
R49	BLUSWI 2	BLUSWI	R99	BTSVIE	BTSVIE

Appendix 3 (Single Finger Chord)

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Finger Chord

Chord Type Root	M	m	7	m7	dim7	M7	m7-5	dim	aug	sus4	7sus4	m add9	mM7	7-5	add9
C															
C♯(D♭)															
D															
(D♯)/E♭															
E															
F															
F♯(G♭)															
G															
(G♯)/A♭															
A															
(A♯)/B♭															
B															

Appendix 4 (61 keys, drums combination and animal sounds list)

NO.	DRUMS LIST	Pictures	NO.	DRUMS LIST	Pictures
1	Bass Drum 1		32	High Agogo	
2	Side Stick		33	Low Agogo	
3	Acoustic Snare		34	Cabasa	
4	Hand Clap		35	Maracas	
5	Electric Snare		36	Short Whistle	
6	Low Floor Tom		37	Long Whistle	
7	Closed Hi-Hat		38	Short Guiro	
8	High Floor Tom		39	Long Guiro	
9	Pedal Hi-Hat		40	Claves	
10	Low Tom		41	Hi Wood Block	
11	Open Hi-Hat		42	Low Wood Block	
12	Low-Mid Tom		43	Chicken	
13	Hi-Mid Tom		44	Pig	
14	Crash Cymbal 1		45	Bird	
15	High Tom		46	Cat	
16	Ride Cymbal 1		47	Cow	
17	Chinese Cymbal		48	Dog	
18	Ride Bell		49	Duck	
19	Tambourine		50	Frog	
20	Splash Cymbal		51	Horse	
21	Cow Bell		52	Sheep	
22	Crash Cymbal 2		53	High Q	
23	Vibraslap		54	Slap	
24	Ride Cymbal 2		55	Scratch Push	
25	Hi Bongo		56	Scratch Pull	
26	Low Bongo		57	Sticks	
27	Mute Hi Conga		58	Square Click	
28	Open Hi Conga		59	Metronome Click	
29	Low Conga		60	Metronome Bell	
30	High Timbale		61	Acoustic Bass Drum	
31	Low Timbale				



PKBRD4112

Portable Electronic Piano Keyboard with Built-in Rechargeable Battery and Wired Microphone (49 Keys)

Features:

- 2-in-1 Karaoke Keyboard: Play & Sing-Along!
- Includes Wired Handheld Microphone
- Compact & Portable Musical Piano
- Simple Electronic Plug-in Operation
- Portable Piano, Built-in Rechargeable Battery
- Integrated Button Drum Pad
- Built-in Full Range Stereo Speakers
- Connect & Stream Audio from External Devices
- Works with Smartphones, Tablets, Laptops, Computers
- Multiple Preset Selectable Keyboard Sound, Tone & Rhythm Styles
- Record & Playback Mode
- Adjustable Volume Control
- Auto Power OFF, Power Saving Function
- Perfect for Home Theater Living Room Performances
- Fun for Kids of All Ages: Children & Adults

Technical Specs:

- (49) Keyboard Keys
- (16) Preset Selectable Tones
- (8) Preset Selectable Audio Rhythms
- Audio Interface: Aux (3.5mm) Input Jack / Mic Input
- Max Sound Level: Up to 98 dB
- USB/Power Cable Length: 3.9' ft.
- Construction Material: Engineered ABS
- Built-in Rechargeable Battery: 3.7V Li-iOn
- Power Supply: 110/240V (DC 5V)
- Piano Dimensions(LxWxH): 20.8"x 7.1"x 2.1"-inches



PKBRD6111 - PKBRD6111.5

**Portable Electronic Piano Keyboard with Built-in Rechargeable Battery
and Wired Microphone (61 Keys)**

Features:

- 2-in-1 Karaoke Keyboard: Play & Sing-Along!
- Includes Wired Handheld Microphone
- Compact & Portable Musical Piano
- Simple Electronic Plug-in Operation
- Portable Piano, Built-in Rechargeable Battery
- Integrated Button Drum Pad
- Built-in Full Range Stereo Speakers
- Connect & Stream Audio from External Devices
- Works with Smartphones, Tablets, Laptops, Computers
- Multiple Preset Selectable Keyboard Sound, Tone & Rhythm Styles
- Digital LED Display
- Adjustable Volume Control
- Record & Playback Mode
- Music Sheet Stand Holder
- Auto Power OFF, Power Saving Function
- Perfect for Home Theater Living Room Performances
- Fun for Kids of All Ages: Children & Adults

Technical Specs:

- (61) Keyboard Keys
- (16) Preset Selectable Tones
- (10) Preset Selectable Audio Rhythms
- Audio Interface: Aux (3.5mm) Input Jack / Mic Input
- Max Sound Level: Up to 110 dB
- USB/Power Cable Length: 3.9' ft.
- Construction Material: Engineered ABS
- Built-in Rechargeable Battery: 3.7V Li-iOn
- Power Supply: 110/240V (DC 5V)
- Piano Dimensions (LxWxH): 28.7" x 9.0" x 2.6" -inches



PKBRD4911PK

Portable Kids Electronic Piano Keyboard with Built-in Rechargeable Battery and Wired Microphone (49 Keys)

Features:

- 2-in-1 Karaoke Keyboard: Play & Sing-Along!
- Includes Wired Handheld Microphone
- Smart Piano Teaching Function with Piano Key Lighting
- Compact & Portable Musical Piano
- Simple Electronic Plug-in Operation
- Portable Piano, Built-in Rechargeable Battery
- Integrated Button Drum Pad
- Built-in Full Range Stereo Speakers
- Connect & Stream Audio from External Devices
- Works with Smartphones, Tablets, Laptops, Computers
- Multiple Preset Selectable Keyboard Sound, Tone & Rhythm Styles
- Adjustable Volume Control
- Record & Playback Mode
- Auto Power OFF, Power Saving Function
- Perfect for Home Theater Living Room Performances
- Fun for Kids of All Ages: Children & Adults

Technical Specs:

- (49) Keyboard Keys
- (100) Preset Selectable Tunes
- (100) Preset Selectable Audio Rhythms
- (50) Preset Selectable Demos
- Audio Interface: Aux (3.5mm) Input Jack / Mic Input
- Max Sound Level: Up to 98 dB
- USB/Power Cable Length: 3.9' ft.
- Construction Material: Engineered ABS
- Built-in Rechargeable Battery: 3.7V Li-iOn
- Power Supply: 110/240V (DC 5V)
- Piano Dimensions (LxWxH): 20.8" x 7.0" x 2.1" -inches

PYLE

PyleUSA.com



Questions or Comments?

We are here to help!

Phone: 1.718.535.1800

PyleUSA.com/ContactUs