

**nutrarchef™**



**PKCRM08**  
**Electric Griddle**  
**USER GUIDE**

Visit Our Website



**SCAN ME**  
nutrarchefkitchen.com

## About NutriChef

### A mission born out of need

NutriChef was created on the principle that healthy home cooking should be attainable to all, regardless of skill level and economic status. Starting in 2014, we noticed the disconnect in our lives and in the lives of those around us. We were so busy, always rushing forward, and our health and personal lives suffered. We needed to find some way to slow down and put our health first, all without sacrificing convenience or taste. Could we somehow create healthier versions of our favorite foods, easily in our own kitchens? The answer was a resounding yes, and NutriChef was born.

### We create products that make life a little easier and a little healthier

Our brand was created out of a desire to provide an alternative to fast food convenience and reintroduce people to home cooking. A healthy home-cooked meal is what brings families and friends together. We believe strongly in the value of simple pleasures. An evening spent cooking and sharing a meal of wholesome, nourishing foods is a memory in the making.

### We believe a moment shared is priceless

Today, we have built upon our original mission and now in addition offer products that make the art of entertaining a simpler one. Entertaining and hosting family and friends are one of the great joys of life. Why waste a moment stuck in the kitchen? We offer products that free you up to socialize, while never sacrificing quality or taste.



# TABLE OF CONTENTS

FEATURES AND TECHNICAL SPECS	4
GENERAL PRECAUTIONS	5
BEFORE FIRST USE	7
DESCRIPTION	7
OPERATING	8
CLEANING	9
STORAGE	9
REGISTER PRODUCT	9

## Initial Use Odor Warning

*Your new appliance may produce a burnt plastic-like smell during initial use due to protective coatings. This odor is temporary and will vanish after a few uses. Use in well-ventilated areas.*

## IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

 **WARNING:** Cancer and Reproductive Harm - [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)

## **Features:**

- Easy-Serve Pan Style Griddle Plate
- Compact, Quick & Convenient Cooktop
- Hassle-Free Plug-in Operation
- Non-Stick Coated Plate Surface
- High-Powered Heating Element
- Power ON/OFF Switch
- Stain Resistant & Easy-to-Clean
- Automatic Temperature Control
- Cool-Touch Handle for Safe Food Handling
- Great for Cooking Breakfast Eggs, Crepes, Pancakes
- Perfect for Any Countertop, Tabletop, Kitchen Top

## **What's in the Box:**

- Crepe Griddle Plate
- Food Bowl
- Spatula



## **Technical Specs:**

- Heating Element Power: 800 Watt
- Griddle Plate Size: 8" -inches
- Construction Materials: Die Cast Aluminum
- Power Cable Length: 2.5' Feet
- Power: 120V
- Dimensions (L x W x H): 15.3" x 7.9" x 2.3" -inches



## GENERAL PRECAUTIONS

- **Please read the entire instruction manual before use.**
- The appliance is for home use only. Do not use for industrial purposes.
- The appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with or use the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- **The appliance is intended to be used in household and similar applications such as:**
  - Staff kitchen areas in shops, offices, and other working environments;
  - Farmhouses;
  - By clients in hotels, motels, and other residential-type environments;
  - Bed and breakfast-type environments.
- The appliance should be placed on a level, heat-resistant, stable surface.
- Do not leave your home while the appliance is in use.  
Ensure that it is unplugged.
- Always unplug the appliance when it is not in use.  
Do not pull the cord to unplug the appliance.
- Unplug the appliance and let it cool down before moving it to another place.
- Never let the turned-on appliance be unattended.
- Exercise caution when the appliance is being used near children.
- **ATTENTION!** The cooking plate gets hot during operation. To avoid burns, do not touch the hot surface; operate only with the handle.

- Keep the appliance 3 feet away from combustible materials such as furniture, cushions, bedding, paper, clothes, curtains, etc.
- Do not use the appliance in rooms with explosive gas or while using flammable solvents, varnish, or glue.
- Do not cover the appliance with any items (blanket, towel, etc.) to avoid damage or fire.
- Never expose the appliance to falls or being kicked.
- If the surface of the appliance is cracked, unplug it to avoid the possibility of electric shock and return it to an authorized service center.
- Do not insert any objects into the appliance.
- Do not use sharp or abrasive objects in contact with the cooking plates, as this will damage the non-stick surface.
- Use only attachments recommended by the manufacturer.
- Never use the appliance with wet hands.
- Never use the appliance in wet places (bathroom, etc.).
- Do not use the appliance in the immediate surroundings of a bath, shower, or swimming pool.
- Never immerse the appliance or power cord in water.
- If the appliance comes into contact with water, unplug it immediately. Do not use it again until it has been checked by an authorized service center.
- Never use the appliance with a tight cord.
- Before using an extension cord, make sure it is suitable for such a load; otherwise, it may overheat and cause a risk of fire.
- Never use a damaged appliance or appliance with a damaged cord/plug.
- Never use the appliance near or on hot surfaces.
- Always unplug the appliance before cleaning.
- Do not use any abrasive, chemical, or alcohol-containing cleansers or polish for cleaning the appliance.
- Clean the appliance after each use. Do not let burnt crumbs accumulate on the cooking plate.
- Use the appliance only for its intended purpose.
- Repair the appliance only at an authorized service center. Do not repair the appliance yourself. If the appliance has been opened, the guarantee will be canceled.

- While using the appliance, please observe safety precautions.
- Incorrect operation and improper handling can lead to malfunction and injury.
- If the appliance has been used in violation of the instructions, the guarantee will be canceled and the consumer will repair the appliance at their expense.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Avoid children playing with the appliance or packaging.

### **BEFORE FIRST USE**

- Remove the appliance from the package. Do not leave the packaging (plastic bags, polystyrene, etc.) within the reach of children since they could be dangerous. Clean the appliance with a wet soft cloth and wipe it dry.
- Before first operating, make sure that the voltage in your wall outlet is the same as on the appliance's rating label.

### **DESCRIPTION**

1. Cooking plate
2. Power switch and heating indicator
3. Handle
4. Plate for batter
5. Cord with plug



## OPERATING

- Prepare the batter according to the recipe for pancakes.  
Mix all ingredients until smooth, like the consistency of thick cream.
- Before use, preheat the appliance. Place the appliance on a level, heat-resistant, stable surface. Plug the power cord into the power outlet. Turn on the power switch. The heating indicator will light up. After preheating for about 3 minutes, the appliance is ready to use.

**Note:** *The power switch has a backlight that lights up when the appliance is turned on. During the first use, there may be light smoke. This is normal due to the initial heating of the internal components.*

- Pour batter into a plate for batter. Set it near the appliance. Apply a thin layer of oil (vegetable or butter) with a soft brush or sponge onto the cooking plate.
- Turn the preheated cooking plate over and dip it into the plate for batter. The time should not be too long while doing this, about 3 seconds. Remove the cooking plate from the plate, and turn it over quickly. The batter should completely cover the cooking plate with a thin layer.

**Note:** *To avoid burning the power connector contacts, it is recommended to turn the power switch to the off position before removing the appliance and turn it on after setting the appliance.*

- In about 30-60 seconds, depending on the recipe and consistency, the batter will change color and the edges of the pancake will slightly deform. Pry the edge with a spatula and flip the pancake to the other side. Wait 30-40 seconds and put the pancake on a dish.
- You can vary the cooking time depending on different recipes, ingredients, or personal preference.
- When the batter is almost used up, the cooking plate can touch the bottom plate, which is not recommended. In this case, you can pour the remaining batter onto the cooking plate.
- Unplug the appliance.

## CLEANING

- Unplug the appliance and let it cool down.
- Wipe the appliance with a wet soft cloth/sponge and then wipe it dry.
- Do not clean the cooking plate with hard brushes or scrubs to avoid damaging the coating.
- **Warning!** Do not wash the appliance under running water.

## STORAGE

- Unplug the appliance. Keep it in a dry, cool place, away from children.
- Do not press the appliance with heavy objects to avoid damage.

### • SAVE THIS INSTRUCTION

**Please remember to respect local regulations:**

hand in non-working electrical equipment to an appropriate waste disposal center. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection service.



## Register Product

Thank you for choosing Nutrichef. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your Nutrichef purchase in perfect condition.



[nutrichefkitchen.com/  
register](https://nutrichefkitchen.com/register)

**nutrichef™**



**Questions or Comments?**

**We are here to help!**

**Phone: 1.718.535.1800**

**[nutrichefkitchen.com/ContactUs](http://nutrichefkitchen.com/ContactUs)**