


CHAPTER VI FAILURE ANALYSIS AND TROUBLESHOOTING

MALFUNCTION	CAUSE	SOLUTION
DOES NOT WORK	Plugged out	Planted Plug
	Power Switch is off	Power Switch On
	Damaged cord or plug	Return to maintenance center
INDICATOR LIGHT DOESN'T TURN ON WHEN TURNING ON POWER SWITCH	Switch contact not good	Ask maintenance center for service
	Switch contact not good, switch no power, or indicator light broken	

Note: If any of the above failures cannot be eliminated or there is any other failure, please contact the maintenance point or distributor of our company. Any person other than professionals shall not disassemble this product without permission.

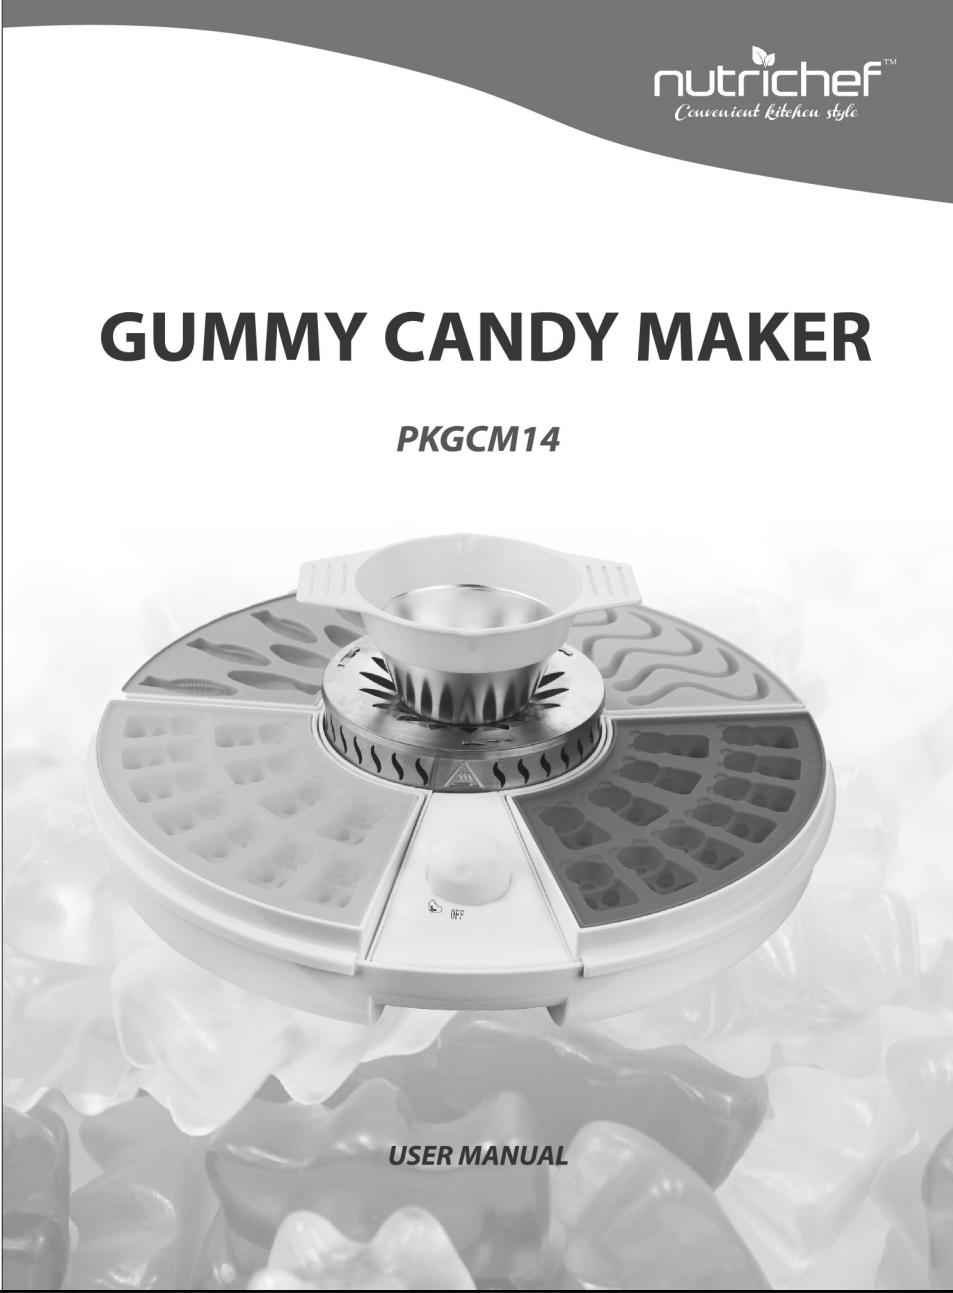

INTRODUCTION

Thank you for purchasing the GUMMY CANDY MAKER from Nutrarchef!
Now you can make your own gummy fish and worms right at home in a fun and easy way. Make your candies in your flavors, or use the same process to make gummy vitamins and energy chews!

Please read through the Instructions before use and keep it properly
If there is any difference between the product and the pictures herein, the product shall govern.

(The technical specifications in the instructions are subject to change without notice)

Contents

Chapter I Safety Precautions	3
Chapter II Parts and Functions	4
Chapter III Usage and Recipes	5 - 6
Chapter IV Cleaning and Maintenance	7
Chapter V Production Safety Index	7
Chapter VI Malfunction Analysis and Exclusion	8

CHAPTER IV CLEANING AND MAINTENANCE

- WARNING: Metal and plastic around heating zone will be very hot.**
1. Disconnect from the electrical outlet by unplugging the appliance before cleaning.
 2. Please clean the product in time after using.
 3. Turn control dial to "O" (OFF). Unplug the appliance from the outlet. Allow to cool for 20 minutes at least before cleaning. DO NOT touch until cool.
 4. Remove all parts from heated base.
 5. Dispose of any remaining mixture by emptying into a bag or trash receptacle.
 6. It is not recommended that you pour the leftover mixture down the sink.
 7. Hand wash pot, molds and bracket in warm, soapy water with a non-abrasive cloth.
 8. Dry parts thoroughly with a soft, non-abrasive cloth.
 9. DO NOT put any parts in a dishwasher, except for the silicone molds. The silicone molds may be washed in the dishwasher if you wish.
 10. NEVER immerse heated base or cord in water.
 11. This product should be stored in a dry place and avoid direct exposure to ultraviolet light.
 12. Make sure that product is clean and dry before storage
 13. This warranty is good for one year after the date of the purchase of the product.
 14. Guarantee only for the purchase of a product to buy the signature and seal of the guarantee card.
 15. Do not disassemble it by yourself, it may cause the invalidation of product guarantee.

CHAPTER V SAFETY INDICATORS

Product Model:	PKGCM14
Rated Power:	100 Watts
Rated Voltage:	120V~ 50/60Hz
Reference Standard:	GB4706.1 GB4706.14
Continuous Operating Time:	4 Hours
Interval:	1 Hour

RECIPES

Making sweet or sour gummy creatures is easy and fun for the whole family! In addition to traditional gummy candies, you can also make your own nutritious gummy vitamins or energy-boosting gummies with electrolytes!

NOTE: The capacity of pot is approximately 240 ml.

Basic Operation

Flip knob between the best choice position.

· 1/2 cup cold water. Mix flavored and unflavored gelatin in pot.

· 1 packet flavored gelatin (3 oz.) Add cold water and stir, then flip the "on" button on. 4 packets unflavored, gelatin (1 full box) the heated base and stir until mixture is runny. Carefully pour mixture into molds and let chill.

Note: For sour gummies, add 1/2 packet of flavored drink mix to dry gelatin mix.

VITAMIN GUMMIES

· 4 packets unflavored, 1 packet gelatin, Flip knob between the best choice position and allow to heat ahead.

· 1/2 c juice, Whisk together the juice, honey and gelatin in pot.

· 2 Tbsp honey (optional), Continue to heat and stir until mixture is runny.

· Vitamin of your choice, (vitamin c, multi vitamins, probiotics, magnesium, etc.) Remove from heat and stir in the amount of vitamins of your choosing. Carefully pour mixture into molds and let chill.

ENERGY GEL CHEWS

· 4 packets unflavored, Flip knob between the best choice position. 1 packet gelatin, heat ahead.


· 1/2 cup energy drink, Whisk together the energy drink and gelatin in pot.

· Vitamin of your choice, (vitamin c, multi vitamins, macrobiotics, magnesium, etc.) Continue to heat and stir until mixture is runny. Remove from heat and stir in the amount of vitamins per day you wish to use times. Carefully pour mixture into molds and let chill.

CHAPTER I SAFETY PRECAUTIONS

- When using electrical appliances, basic safety precautions should always be followed, including the following
- Check that your mains voltage corresponds to AC120V/50/60Hz 100W.
- If need maintain, please contact our service department, or return the appliance to the nearest authorized service facility. Do not disassemble the appliance yourself to avoid danger.
- Before installing any part of the product, please be sure to disconnect the power.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Looking for the professional to replace. Do not disassemble the appliance yourself to avoid danger.
- When using the appliance, do not touch the hot surface. As to avoid burn wait at least 20 minutes until it cools down before touching the unit.
- Never immerse or wash host in water and other liquid.
- Never put any parts in a dishwasher
- Never use near water.
- Never use an abrasive sponge or cloth on the appliance
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not overload wall outlet, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.
- This appliance should not be used for purposes other than stated in the instructions accompanying this appliance.
- Unplug from outlet when not in use and before removing parts for cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- An extension cord or longer detachable cord is not recommended for use with this appliance.
- If a long detachable power-supply cord or extension cord is used: 1) the marked electrical rating of the cord or extension cord should be at least as great as the electric rating of the appliance; 2) The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.
- Extreme caution should be used when moving appliance with hot food.
- Please keep out of reach of children and pets. This product is not intended for use by children, by persons with reduced physical, sensory or mental capabilities, or lacking experience or knowledge,
- For household use only.
- Never leave appliance unattended while in use.
- Do not operate the appliance with wet hands, and do not move when the electric is on.
- Forbid using the MAX power to make gummy. Otherwise the food will be burnt and pot melted.
- Do not let drip on switch parts and power cord. This will reduce insulation performance and make the risk of arc, short circuit and electric shock.
- After use, please unplug the power plug, so as to avoid accidents.
- To ensure that the voltage used with the machine marked with the rated voltage in line. Do not share a socket with other electrical appliances
- Do not put the cord on the countertop or table top where it can be pulled on by children
- This appliance is not a toy, not intended for use by young children or the cognitively challenged without supervision.
- Close supervision is necessary when the appliance is used by or near children. So as to avoid burning, keep out of reach of children.
- Don't idle the heating tube for a long time. Occasionally there is oil splash particles or smoke in the heating tube, electricity to a high temperature, then it will volatilize automatically.
- Do not put these into the appliance, including but not limited to paper, card, plastic cement, cloth, charcoal, inflammable plastic.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system
- Before first use, rinse pot and molds with boiling water.

CHAPTER II COMPONENTS AND FUNCTIONS

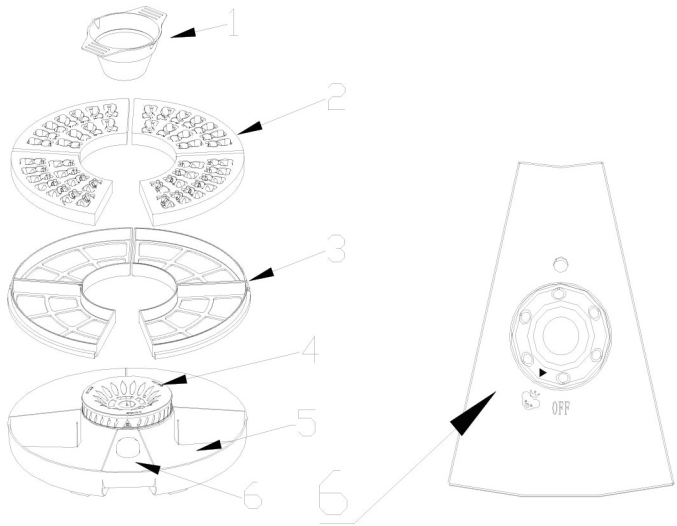

NO.	COMPONENT	FUNCTION
1	Pot	Melt Food
2	Silicon Mold	Heat Food
3	Silicon Bracket	Prop Up Tray
4	Host	Heat Food
5	Tray	Place Food & Fix Silicon Bracket
6	Thermal Switch	Adjust Temperature

CHAPTER III USAGE AND RECIPES

INSTALL: Make sure that the product is not connected to the power

WARNING

If the power cord is bare or damaged, please do not use, must find a same power line to replace, in order to avoid the accident, please find a professional, or service department for replacement.

1. Find a dry, heat-resistant, level surface near an electrical outlet. It must meet the following conditions: the space is higher than the product not less than 100 cm, the space that back of appliance and the wall is not less than 25 cm.

2. Before first use, wipe down heated base with a damp, non-abrasive cloth and dry thoroughly. Be very careful to not get any water in the heated base, or unit will not function. Disinfect mold and hold and pot with boiling water and wash with water.

3. Put the host on the level surface table, Then install the net cover concave downward above heater rotary. Make sure that the product is not connected to the power. Install the net cover with hand cut resistant gloves.

4. Then fill tray 3/4 full with ice, The silicon bracket tray are respectively installed in the base fixed position inside, and then install the silicon mold inside the silicon bracket

5. Put pot in the groove of net cover, keep balanced.

6. For first using, turn on the switch preheating for 3 minutes. Rule out the gas and smog from metal jacketing of heating tube, this is normal phenomenon. Then you can make gummy.

7. Gummy marker use advanced quartz heating tube, heated evenly, high thermal efficiency, convenient operation, unique design, do not produce oil spray and combustion exhaust gas, natural and environment. Make every inch of the ingredients can burst out the original delicious, Bring your life convenient and fun.

Place the pot on the heated base. Using your own recipe, or following recipe included in this instruction manual, prepare your gelatin mixture in the heating pot. Be very careful not to over-fill the pot. Do not exceed the 1 pot capacity. Capacity of pot is 240 ml, the best choice is seven-eighths of the pot.

1. Steam may be released from food during cooking. For your safety, avoid contact with steam, as it is very hot and can cause burns.

2. Be careful to watch the pot and stir mixture if necessary. DO NOT let mixture boil over, as this could cause burns.

3. In five to ten minutes, when mixture is runny, carefully pour into the molds through the spout on the pot. If using the second pot to make a second flavored gummy, switch pots out so that the second is on the heated base.

When finished filling molds, flip the switch to the off "O" position and unplug the power.

4. In 5 to 10 minutes, your gummies will have solidified and will be ready to be removed from the silicone molds.

5. Once the appliance is cool, empty remaining gelatin mixture into a bag or trash receptacle and follow the directions in the Cleaning & Maintenance section to clean your GUMMY CANDY MAKER.

HELPFUL TIPS

NEVER leave the unit unattended while operating.

For gummy vitamins or energy chews, see recipes section

The ice cubes in the interlocking trays provide the temperature needed for the gelatin mixture to set. To ensure that gummies set quickly, replace ice cubes in the interlocking trays as they melt.