

# PYLE

PyleUSA.com



## *PLRVST400*

RV Wall Mount Audio/Video Receiver

AV Stereo Headunit with Wireless BT Streaming,  
Multimedia Disc Player, HDMI ARC, AUX/MP3/USB Reader

## USER MANUAL

 
## CONTENT

Installation .....	3	Pausing Playing .....	9
Front-Mount .....	3	Previewing all Tracks .....	9
Mounting .....	4	Repeating the Same Track .....	9
Wiring Connection .....	5	Playing all Tracks in Random .....	9
Operation .....	6	Ejecting a Disc .....	9
Location of Keys .....	6	Selecting Directory UP/DOWN .....	9
Turn ON/OFF the Unit .....	7	Selecting Files by	
Settings Adjustment .....	7	AS/PS Button .....	9
Loudness .....	7	USB Play Operation .....	10
Loc ON/OFF .....	7	Supported MP3/WMA Decoding Modes .....	10
Stereo/Mono Function .....	7	Disc Notes .....	10
Liquid Crystal Display (LCD) .....	7	DVD Video Menu Play .....	11
Alarm ON/OFF .....	7	Bluetooth Operation .....	15
Setting Alarm Time .....	7	Remote Control .....	16
Stop the Alarm Output .....	7	Troubleshooting .....	18
Brightness of the LCD .....	7	Specification .....	19
Clock Display .....	7		
Clock Setting .....	7		
Volume Control .....	7		
ARC function .....	7		
Auxiliary AV Input Function .....	7		
Reset Function .....	8		
<b>Radio Operation</b> .....	<b>8</b>		
Switching to Radio Mode .....	8		
Selecting the Radio Band .....	8		
Selecting Station .....	8		
Auto Store & Preset Scan .....	8		
Manually Store Station			
& Recall Preset Station .....	8		
CD/MP3/WMA Operation .....	8		
Switching to Disk mode .....	8		
Selecting Tracks .....	9		

# INSTALLATION

## Notes:

- Choose the mounting location where the unit will not interfere with the normal driving function of the driver.
- Before finally installing the unit, connect the wiring temporarily and make sure it is all connected properly to the unit and if the system works properly.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires drilling of holes or other modifications of the vehicle.
- Install the unit where it does not get in the driver's way and cannot injure the passenger if there is an emergency stop.
- If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.



- Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.

## FRONT - MOUNT

This unit can be properly installed from "Front" (conventional DIN Front-mount) utilizing threaded screw holes at the sides of the unit chassis. For details, refer to the following illustrated installation methods.

## INSTALLATION OPENING

This unit can be installed in any dashboard or wall where there's an opening as the image shown:

## ATTENTIONS OF INSTALLATION



1. This player should be installed by professional technician.
2. Please read the instruction and operation of equipment carefully before installing.
3. Make sure to connect other wires before power connection.
4. To avoid short circuit. Please make sure all the exposed wires are insulated.
5. Please fix all the wires after installation.
6. Please make connection to the player accordingly to this instruction manual.  
**Wrong connection may cause damage.**
7. This player only fit for 12V DC device and please make sure your car belongs to this kind of cathode grounding electrical system.
8. **Please connect the wires correctly.**  
Wrong connection will cause malfunction or damage to the electrical system.

# INSTALLATION


## MOUNTING



**CAUTION:** Do not install radio without rear cover installed. No user serviceable parts inside. Rear cover provides protection against potential fire hazard.

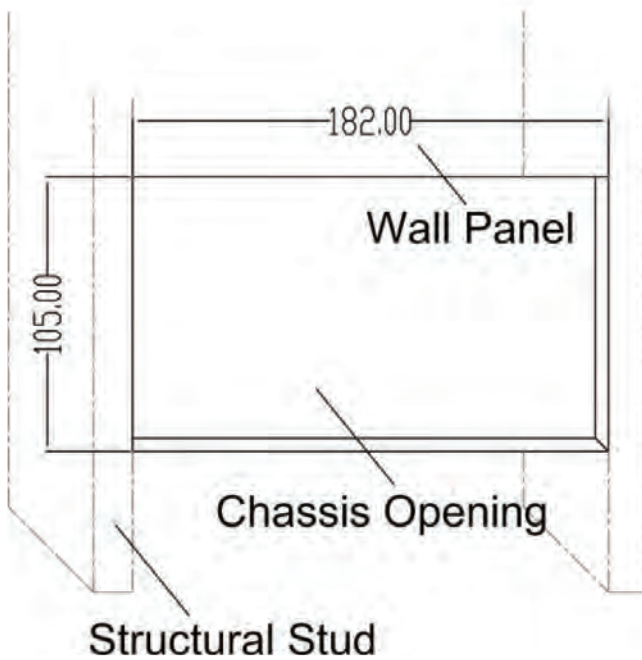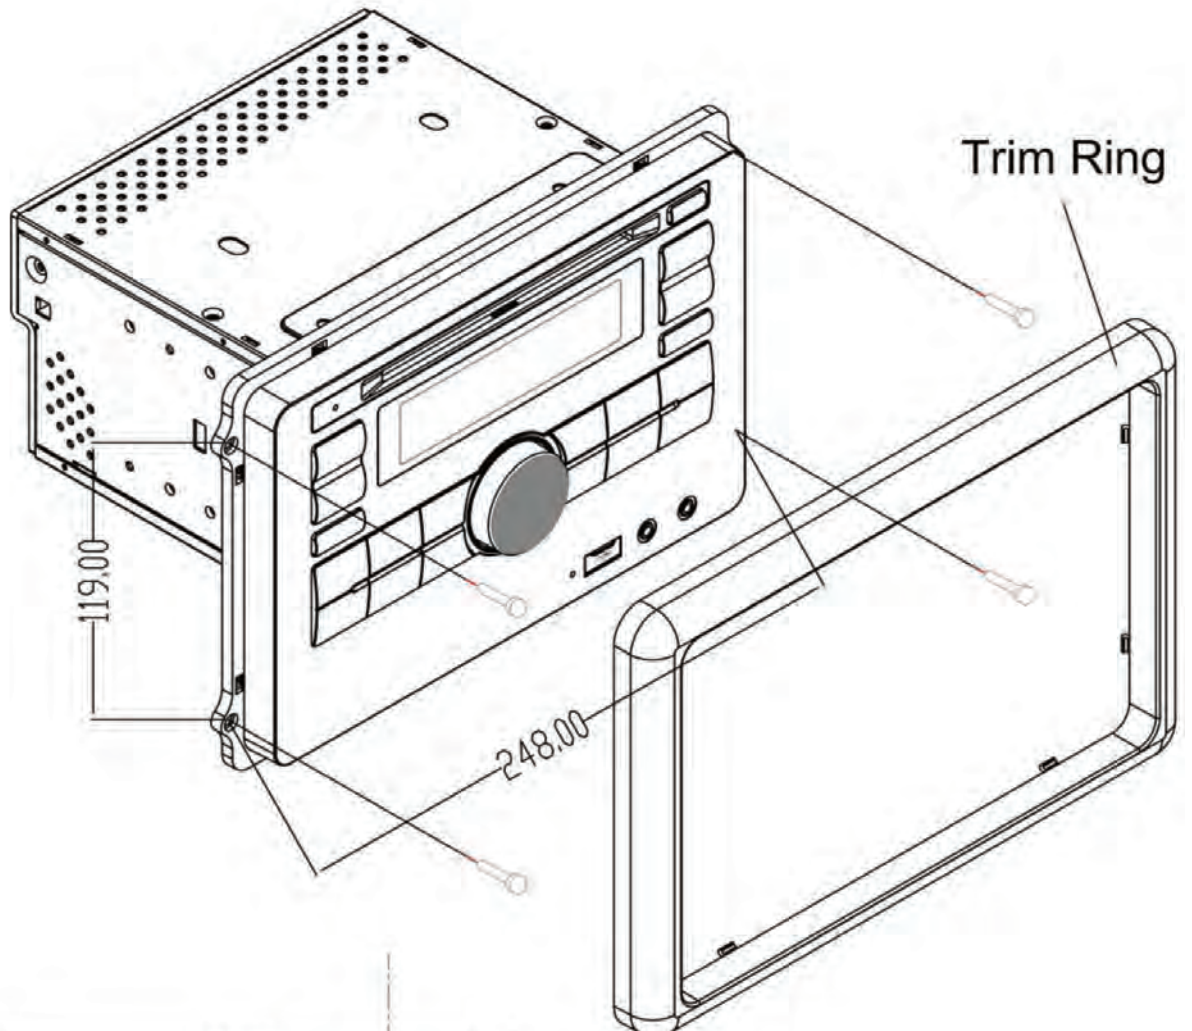

# WIRING CONNECTION

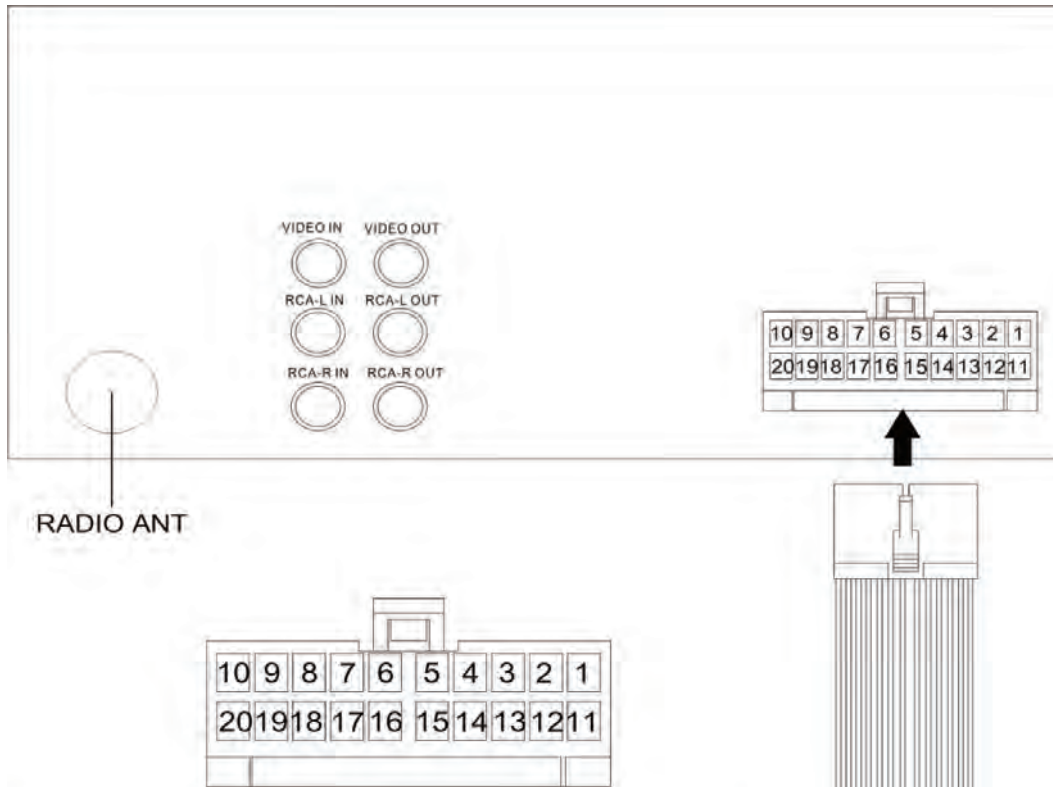

## WIRE INSERTION VIEW


PIN NO	WIRE COLOR	DESCRIPTION
1	ORANGE	C RIGHT SPEAKER (+)
2	ORANGE / BLACK	C RIGHT SPEAKER (-)
3	PINK	ILLUMINATION CONTROL
4		
5	BLUE	POWER ANTENNA
6		
7	GRAY / BLACK	A RIGHT SPEAKER (-)
8	GRAY	A RIGHT SPEAKER (+)
9	PURPLE / BLACK	B RIGHT SPEAKER (-)
10	PURPLE	B RIGHT SPEAKER (+)
11	BROWN	C LEFT SPEAKER (+)
12	BROWN / WHITE	C LEFT SPEAKER (-)
13		
14	RED	ACC
15	YELLOW	B+
16	BLACK	GROUND
17	WHITE / BLACK	A LEFT SPEAKER (-)
18	WHITE	A LEFT SPEAKER (+)
19	GREEN / BLACK	B LEFT SPEAKER (-)
20	GREEN	B LEFT SPEAKER (+)

**The receiver features independent channel volume control. To adjust the volume for each audio zone, you must press the desired lettered zone button on the front panel zone -- to adjust the designated channel volume (Front panel zone/ speaker buttons: A / B / C).**



# OPERATION

## LOCATION OF KEYS

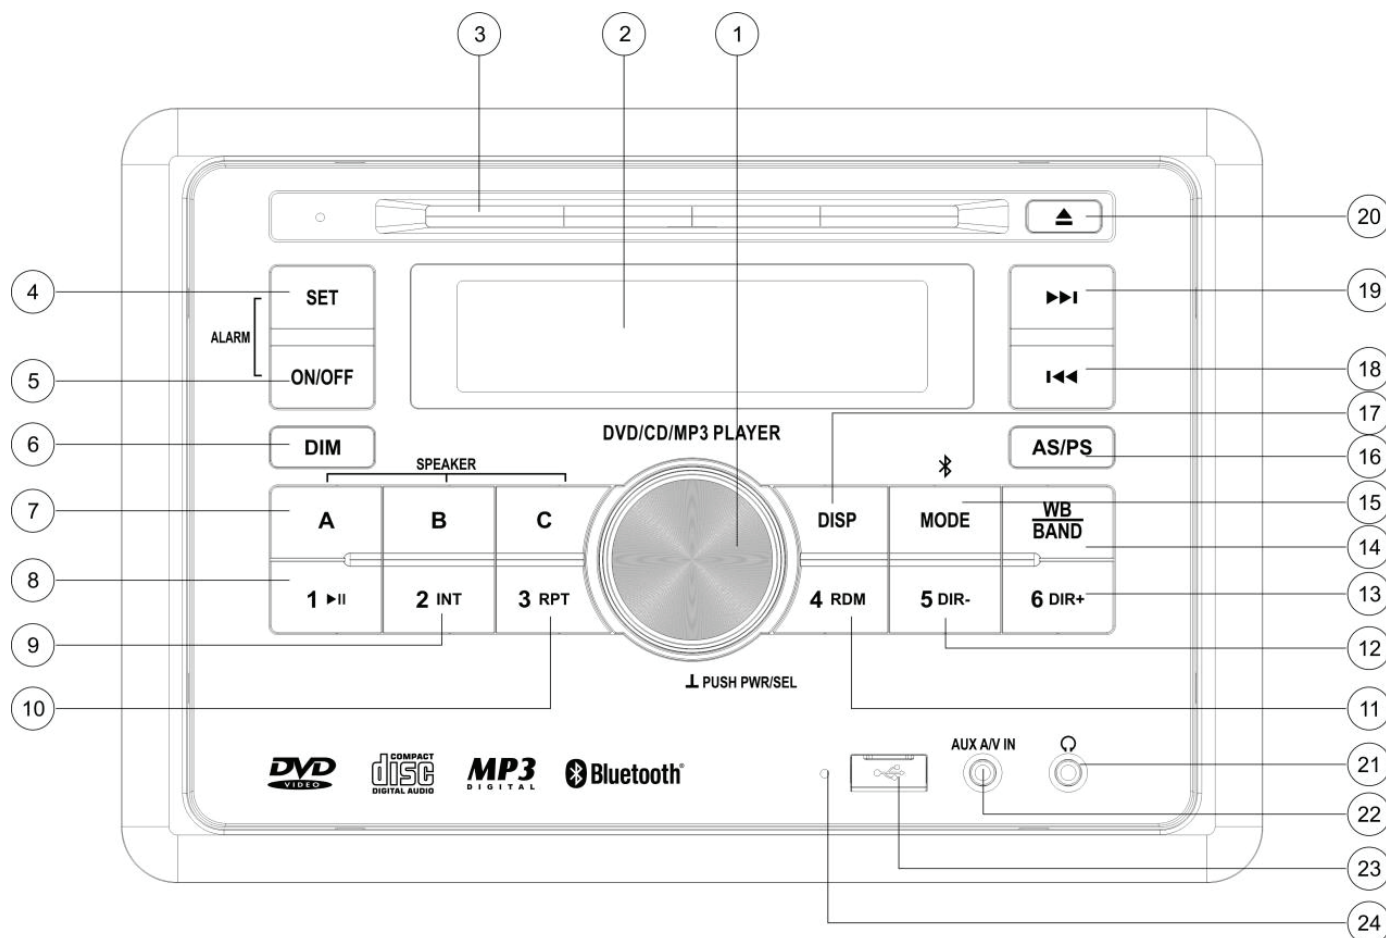

- |                             |                    |
|-----------------------------|--------------------|
| 1. VOL/PWR/SEL (Audio knob) | 17. DISP           |
| 2. LCD                      | 18. I<<            |
| 3. DISC SLOT                | 19. >>I            |
| 4. ALARM SET                | 20. ▲ (Eject)      |
| 5. ALARM ON/OFF             | 21. EARPHNE OUTPUT |
| 6. DIM (Dimmer)             | 22. AV IN Jack     |
| 7. SPEAKER A/B/C            | 23. USB INTERFACE  |
| 8. 1 PAU (Pause/Play)       | 24. RESET button   |
| 9. 2 INT                    |                    |
| 10. 3 PRT                   |                    |
| 11. 4 RDM                   |                    |
| 12. 5 DIR-                  |                    |
| 13. 6 DIR+                  |                    |
| 14. WEATHER BAND/BAND       |                    |
| 15. MODE                    |                    |
| 16. AS/PS                   |                    |

## OPERATION

### TRUN ON/OFF THE UNIT

Press **PWR** button (1) to turn on the unit. When the unit is on. Press and hold **PWR** button (1) for 2 seconds to turn the unit off.

### SOUND ADJUSTMENT

Press **SEL** button (1) shortly to select below settings:

BAS → TRE → LOUD → EQ → LOC → ST → VOL

MCU version → DVD version

BAS: Bass

TRE: Treble

LOUD: Loudness

EQ: Equalization

LOC: Local

VOL: Volume

In each item, by rotating the audio knob (1) it is possible to adjust the desired sound quality or setting.

### LOUDNESS

**LOUD On:** Boosting the low frequency gain for 15dB around in small volume.

**LOUD Off:** Don't boost the low frequency gain.

### LOC ON/OFF

**LOC On:** To reduce the receiving sensitivity when you search station. That means you can receive the station that sounds good.

**LOC Off:** Don't reduce receiving sensitivity when you search the station. That means you can receive more stations.

### STEREO/MONO FUNCTION

**STEREO:** Receiving FM stereo signal.

**MONO:** Change to monochrome when the signal is not good. Changing it to MONO mode will reduce the noise.

### ALARM ON/OFF

Press **ALARM ON/OFF** button (5) to turn on/off alarm function.

### SETTING THE ALARM TIME

Press and hold the **ALARM SET** button (4) for 2 seconds. The "HH" will flash.

Rotate the **VOL** control (1) to adjust the hour. Press **ALARM SET** again the "MM"

will flash. Rotate the **VOL** control (1) to adjust the minutes. Press the **ALARM SET** button (4) again to store the alarm time.

### STOP THE ALARM OUTPUT

When time ran to the alarm time. The head unit will output the alarm sound. Press the **ALARM ON/OFF** button(5) to stop the alarm output.

### BRIGHTNESS OF THE LCD

Press the **DIM** button (6) to adjust the LCD brightness from "DIMMER 1" (brightest) to "DIMMER 2"(less bright)

### CLOCK DISPLAY

Press **DISP** button (17) to display the time. 5 seconds later it will turn to current position.

### CLOCK SETTING

Press and hold the **DISP** button (17) for 2 seconds to access clock setting mode. The "HH" will flash. Rotate the **VOL** control (1) to adjust the hour. Press **DISP** again the "MM" will flash. Rotate the **VOL** control (1) to adjust the minutes. Press the **DISP** button again to exit clock setting mode.

### VOLUME CONTROL

There are 3 pair speakers output . Press **A/B/C** button to adjust **A/B/C** speaker's volume independently.

### ARC FUNCTION

Connecting the head unit and TV set used a **HDMI** wire. Press **MODE** button switch to ARC mode. The TV set's sound will transmit to the head unit's speakers.

### AUXILIARY A/V INPUT FUNCTION

Press the **MODE** button (15) to access **AUX1**(front) or **AUX2**(rear) input mode. The unit can be connected to the **Audio/Video** input through the AV IN jack (22) or Inputs on the back of the unit.

## OPERATION

### RESET FUNCTION

**RESET** button (24) must be activated with either a ballpoint pen or thin metal object. The **RESET** button is to be activated for the following reasons:

- Initial installation of the unit when all wiring is completed.
- All the function buttons do not operate.
- Error symbol on the display.

**Note:** When **RESET** button is pressed. All the memory will be lost.

### RADIO OPERATION

#### SWITCHING TO RADIO MODE

Press **MODE** button (15) to select radio mode.

#### SELECTING THE RADIO BAND

Press **BAND** button (14) shortly to select the below band:

→ FM1 → FM2 → FM3 → WB → AM1 → AM2 →

**Note:** Press and hold **BAND** button for 2 seconds and it will directly skip to the **WB**.

#### SELECTING STATION

Press button (19) or button (18) shortly to activate automatic seek function. It will search up/down a station automatically. Press for 2 seconds until "MANUAL" appears on the display, and the manual tuning mode is selected. In this mode you can turn up/down a step frequency one by one till searched a station. If both buttons have not been pressed for 5 seconds it will return to seek tuning mode.

#### AUTO STORE & PRESET SCAN

##### Auto Store

Press **AS/PS** button (16) for 2 seconds, the radio searches from the 87.5 MHz frequency and checks the signal strength until one cycle search is finished. And then some strong stations are stored into the corresponding preset number button. In the first cycle in **LOCAL ON** mode to receive the stronger station. If it is less than 18 station it will search stations in 2nd cycle in **LOCAL OFF** mode.

#### Preset scan

Press **AS/PS** button (16) shortly to scan preset station. The radio is holding at that preset number for 5 seconds with release mute, then searches again.

#### MANUALLY STORE STATION & RECALL PRESET STATION

To receive a station, Press one of the preset button (1~6) for 2 seconds. The current station is stored into the number button. Shortly press the preset button (1~6) to directly listen the station that saved in the corresponding preset button.

#### In WEATHER BAND.

1 button(20): 162.550MHz

2 button(21): 162.400MHz

3 button(22): 162.475MHz

4 button(23): 162.425MHz

5 button(24): 162.450MHz

6 button(25): 162.500MHz

The next station is 162.525 MHz.

Press **▶▶/◀◀** button to change stations.

#### CD/MP3/WMA OPERATION SWITCHING TO DISC MODE

**If there is no DISC inserted in the driver:**

Gently insert the **DISC** with the printed side uppermost into the **DISC** compartment until you feel some resistance. The **DISC** is drawn into the driver automatically. **DISC** playback begins.

**If a DISC is already inserted in the driver:**

Keep pressing **MODE** button (15) shortly until the **DISC** mode display appears.



## OPERATION

### SELECTING TRACKS

Press **◀◀** button (18) or **▶▶** button (19) to move to the previous track/file or the following track/file.

Hold **◀◀** / **▶▶** button to fast reverse or fast forward. DISC play starts from when you release the button.

### PAUSING PLAYING

Press **PAU** button (8) to pause playing. Press it again to resume play.

### PREVIEWING ALL TRACKS

Press **INT** button (9) to play first several seconds of each track/file. Press again to stop intro and listen to track/file.

### REPEATING THE SAME TRACK

Press **RPT** button (10) to continuously repeat the same track/file. Press it again to repeat all the tracks/files.

### PLAYING ALL TRACKS IN RANDOM

Press **RDM** button (11) to play all tracks/files in random order. Press again to cancel the random function.

### EJECTING A DISC

Press **▲** button (20) to stop disc playing and eject the disc.

### SELECTING DIRECTORY UP/DOWN

Press **DIR-/DIR +** button (12/13) to select Previous/next directory. If the MP3/WMA disc does not contain any directory, there is no function of pressing **DIR-/DIR+** button.

### SELECTING FILES BY AS/PS BUTTON

When **MP3/WMA** playing. Press **AS/PS** button(16) to search file.

**There are 3 ways to search file:**

1. File number searching.
2. File name searching.
3. Folder searching.

### File Number Searching

Press **AS/PS** button one time to enter into "Searching file number" mode. Rotating audio knob (1) to select the file number then press the audio knob (1) to play.

If the file number was selected. The unit wait for audio knob (1) for second. The unit searches the file after few seconds, even if the audio knob (1) button is not pressed.

**You also can select the file by using the numeric buttons which shown on the panel. But please pay attention to the following numbers:**

**MODE: 7**

**◀◀ : 8**

**▶▶ : 9**

**DISP : 0**

### File Name Searching

Press **AS/PS** button two times.

It Shows **"\*"** on the **LCD**.

Pressing the corresponding buttons listed on the Table 1 below.

### KEY Assigned IN Searching mode (Table1)

AMS	Mode Select
SEL	ENTER
1	A, B, C, 1
2	D, E, F, 2
3	G, H, I, 3
4	J, K, L, 4
5	M, N, O, 5/Directory DOWN
6	P, Q, R, 6/Directory UP
MODE	S, T, U, 7
TUNE/SEEK/TRACK DOWN	V, W, X, 8
TUNE/SEEK/TRACK UP	Y, Z, SPACE, 9
DISP	_, -, +, 0
AUDIO KNOB	CHARACTER SELECT All the CHARACTER above

### Explain as follows:

- Use the corresponding buttons to select the characters A to Z, blank, 0 to 9, **\_**, **-**, **+**. (Of course you can use knob (1) to select the characters A to Z, blank, 0 to 9, **\_**, **-**, **+**.)
- Press knob (1) to start the file search.

## OPERATION

### FOLDER SEARCHING

Press AS/PS button three times.

It enters into "Folder searching" mode. Rotate the audio knob (1) to select desired folder.

After that press audio knob (1) to enter the folder. Rotating audio knob (1) to select desired file and then press audio knob (1) again to play.

### USB PLAY OPERATION

In the front panel of the unit, there is an **USB** interface (23). You can connect an **USB** driver through this interface (23).

When you connect an **USB** driver through the interface, the unit will search the **MP3/WMA** files in the **USB** driver and start to play. If in other mode, you can also press **MODE** button (15) to select USB mode.

The **USB** operation is the same with the **CD/MP3/WMA** operation described.

#### Note:

- The main unit can only support the standard USB-memory disc which is approved by Microsoft.
- USB MP3 player is not a standard which means different brand name or different models have their own standard. So our product cannot support every MP3 player.
- When connecting an MP3 player using a normal battery in the player (non rechargeable battery), remove the battery from the MP3 player then connect it to the USB interface. Otherwise, it may cause battery burst.

### SUPPORTED MP3/WMA DECODING MODES

The main unit supports **MP3/WMA** (Windows Media Audio) decoding modes.

Standard	Bit Rate (kbps)	Supports Mode
MPEG1 Audio Layer 3 (44.1kHz)	32,48,64,96, 128,192,256, 320	Stereo
Windows Media Audio (44.1kHz)	64,96,128,192	Stereo

### The USB solution can support:

1. **Folder:** 500 max.
2. **File:** 999 max.
3. **Depth of folder:** 8 layers
4. **Size:** 32 GB

### CAUTION

When there are important files in the USB device, do not connect it to the main unit to play. And don't play the **CD-R/RW** disc that has important files in it. Any wrong operation may cause files loss.

Our company assumes no responsibility for this.

### DISC NOTES

#### A. Notes on discs:

**Attempting to use non-standard shape discs (e.g. square, star, heart) may**

1. Damage the unit. Be sure to use round shape CD discs only for this unit.
2. Do not stick paper or tape, etc, onto the label side or the recording side of any discs, as it may cause a malfunction.
3. Dirt, dust, scratches and warping discs will cause misoperation.

#### B. Notes on CD-Rs

(recordable CDs)/CD-RWs (rewritable CDs):

1. **Be sure to use discs with following marks only for the unit to play:**



## OPERATION

- The unit cannot play a CD-R and CD-RW that is not finalized. (Please refer to the manual of your CD-R/CD-RW recorder or CD-R/CD-RW software for more information on finalization process).
- Depending on the recording status, conditions of the disc and the equipment used for the recording, some CD-Rs/CD-RWs may not be played on this unit. (see \*1)

\*1: To have more reliable play back, please see following recommendations:

- Use CD-RWs with speed 1x to 4x and write with speed 1x to 2x.
- Use CD-Rs with speed 1x to 8x and write with speed 1x to 2x.
- Do not play a CD-RW which has been written for more than 5 times.

### C. Notes on MP3 files (MP3 Version Only):

- The disc must be in the ISO9660 level 1 or level 2 format, or Juliet or Romeo in the expansion format.
- When naming a MP3 file, be sure the file name extension is ".MP3".
- For a non-MP3 file, even though the file name extension is ".MP3", the unit cannot recognize it.

### DVD VIDEO MENU PLAY


When playing a DVD disc in the DVD player:

- The disc will be played automatically and stop at menu picture.
- Use ◀▶, ▲▼ cursor buttons on the remote control to move between the highlight bars in the menu.
- Press **ENTER** button on the remote control to confirm the selected item.

### REPEAT PLAY

For different kinds of disc, pressing **REPEAT** button has different effects.

### FOR DVD:

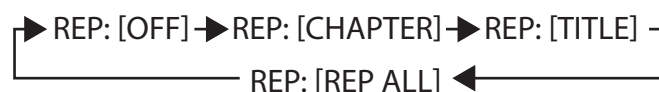

### Note:

**REPEAT feature does not support VCD2.0 (with PBC ON).**

### ON-SCREEN DISPLAY FUNCTION

Press the **DISP** button during playback to display the console information of the current disc on the screen.

### For DVD:

Once you press **DISP** button you will see the information as the following order.

```
DVD TT 1/2 CH 1/1 00:00:01
DVD TT 1/2 CH 1/1 C- 00:13:53
1/1 ENG 5.1CH 1/4 ENG OFF
DVD TT 1/2 CH 1/1 T 00:00:03
DVD TT 1/2 CH 1/1 T- 00:29:27
DVD TT 1/2 CH 1/1 C 00:01:02
```

#### 1. Item: TT

**Function:** Display the current title number and total title number.

#### 2. Item: CH

**Function:** Display the current chapter number and total chapter number.

#### 3. Item: ⌚

**Function:** Display the played time of the whole disc.

**4. C-:** Display the remaining time of the current chapter.

**5. T:** Display the player time of time current title.

**6. T-:** Display the remaining time of the current title.


**7. C:** Display the played time of the current chapter.

**8.** 1/1 ENG 5.1CH 1/4 ENG OFF

## OPERATION

Display the current disc's LANGUAGE, AUDIO TYPE, SUBTITLE LANGUAGE and PLAY ANGLE.

### For VCD:



VCD TT 1/2 CH 1/1 00:03:15  
VCD TT 1/2 CH 1/ C- 00:13:53  
VCD TT 1/2 CH 1/1 T 00:00:03  
VCD TT 1/2 CH 1/1 T- 00:29:27  
DVD TT 1/2 CH 1/1 C 00:01:02


The meaning of the menu is the same with the DVD menu above.

### GO TO FUNCTION FOR DVD:

Press GOTO button, the screen will display the following message:

Use the number keys to input the desired Title, Chapter or Time, then press ENTER key to confirm.

### FOR VCD (WITH PBC OFF)/CD:

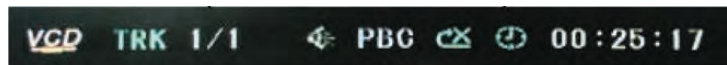


VCD TRK 1/1 PBC 00:25:17

You can input the Track and Time then press ENTER key to confirm.

### ZOOM FUNCTION

Allows the picture to be increased in size. Press ZOOM button on the remote control to toggle among 2 scale, 3 scale and 4 scale, 1/2 scale, 1/3 scale, 1/4 scale. When the scale is 1/4 times, press ZOOM button again to cancel the zoom function.

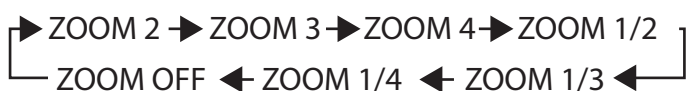

ZOOM 2 → ZOOM 3 → ZOOM 4 → ZOOM 1/2  
ZOOM OFF ← ZOOM 1/4 ← ZOOM 1/3 ←

During Zoom mode, press ←/→ ↑/↓ buttons to move pictures up, down, left, or right direction.

### SPECIAL FUNCTIONS FOR DVD

Press SUB-T during playback. The following information will be shown on the screen.



: OFF

 
Each time the button is pressed, the subtitle language changes in sequential order.

#### Notes:

- The language number is different according to the disc.
- Some discs only contain one subtitle

### LANGUAGE

Press AUDIO on the remote control during playback. The following information will be shown on the screen.



: [1 JAPAN]

Each time the button is pressed, the audio soundtrack language changes in sequential order

#### Notes:

- The language number is different according to the disc.
- Some discs only contain one soundtrack language.

### FREQUENTLY ASKED QUESTIONS

- DVD disc inserted and cannot be played and shows "region error". It is because that the DVD player and the discs all have the "REGION CODE". If the region number described on the DVD disc does not correspond to the region number of this DVD player, the unit will not play the disc.
- When inserting a DVD disc, there is a window shown on the screen that requires entering 4 characters password, why? It is because that the current disc has "Parental Control" level, and the player's parental level is set below the level of the disc, you should enter the correct password to play the disc normally.

#### Note:

For how to set the "Parental Control" level, please refer to "SETUP\LOCK" in the following page.



## OPERATION

### ATTACHMENT: PARENTAL CONTROL

DVD discs have a parental level assigned to the disc. The range of parental controls is from 1 to 8. The player can be set in a similar way. If the player's parental level is set to 8 it will play all discs. If the player's parental level is set below 8, only discs with a lower or equal parental level will play. For example if the player is set to 5, only discs with parental control ratings of 5, 4, 3, 2, & 1 will play.

To play a higher rated disc you must change the player's rating to a higher number. For example, consider a disc that generally is suitable for most audiences, and is rated as level 2 for the most part. However in the middle there are also scenes rated at 5 & 7 (not suitable for children). Alternative scenes with lower rating are included. The player plays the highest rated scene that the parental setting allows. A section of the disc can have several different sequences that vary in parental control level. In the above example of a disc with parental control, the player will show a different section depending on the parental control level set in the player's menu. In this way parents can control the content of films and there is no indication that any censorship has occurred. The meaning of the levels 1 to 8 varies depending upon the country and the type of content on the disc.

#### The parental control levels are:

Unlock

1 KID SAFE

2 G

3 PG

4 PG 13

5 PG-R

6 R

7 NC 17

8 ADULT

### SPECIAL FUNCTIONS FOR VCD AND CD

For VCD and CD discs, there is one special function "Program Play" which makes it different from DVD discs.

- The function is effective in **PBC OFF** mode. Press **PROG** button to activate program edit interface.

Prog-.,			
1[ ]	5[ ]	9[ ]	13[ ].,
2[ ]	6[ ]	10[ ]	14[ ].,
3[ ]	7[ ]	11[ ]	15[ ].,
4[ ]	8[ ]	12[ ]	16[ ]
Plar		Clear.,	

- To set the program menu, please refer to the operation of the audio files in the media player below.

#### Note:

- After you have programmed the tracks, press **PROGRAM** button can switch between program play and normal play.
- Press **OK** button to exit the edit interface.

### DATA DISC PLAY OPERATION

When you insert a data disc including audio (MP3, WMA), movie (MPEG), picture (JPG) files into the disc slot, the following media play window will be shown on the screen:

Prog-.,							
T	C	T	C	T	C	T	C.,
1	:	5	:	9	:	13	__:
2	:	6	:	10	:	14	__:
3	:	7	:	11	:	15	__:
4	:	8	:	12	:	16	__:
Play				Clear.,			



## OPERATION

1. Use ◀/▶ or ▲/▼ cursor button to select the items you want to program.
2. The items you selected will become highlight.
3. Input the sequence number you want to program by numeric buttons (0- 9,10+) on the remote control.
4. Press **OK** or select “play” operation button on the bottom area to program playback.

### NOTE:

For audio **CD**, the play interface and operation is similar with the Music page operation. For details, please refer to the description of Music page above.

### USB PLAY OPERATION

On the front panel of the unit, there is an **USB** interface. An **USB** driver can be connected through this interface.

1. When insert USB drive into the USB interface, the unit will read the USB automatically.
2. If the USB have been inserted into the unit. Press **MODE** button to select the USB mode. Then the USB will be played.

### Note:

When reading the USB device, please don't touch or take out the USB. If following the instruction above, the unit can't read the USB, please check if the USB is in good condition, or tack out the USB then insert it into the USB interface once more.

- The main unit can only support the standard USB-memory disc which is approved by Microsoft.
- USB MP3 player is not a standard which means different brand name or different models have their own standard. So our product cannot support every MP3 player.
- When connecting an MP3 player and there has normal battery in the player (non rechargeable battery), you should remove the battery from the MP3 player then connect it to the USB interface. Otherwise, it may cause battery burst.

- When in **USB** play mode, be sure not to remove the **USB** driver from the **USB** interface. In **DVD** mode, when the disc is playing or in the stop mode, press **SETUP** on the remote control to enter setup menu.
- When the cursor is on the topside, use ◀/▶ buttons to move between the different pages.
- Press ↓ button to move the cursor to the setup page below and then you can use ↑/↓ buttons to move between the different setup options.
- Press ➡ button to display the choice list for each setup option and then use ◀/▶ buttons and **ENTER** button to change your selection.

### SYSTEM SETUP

When you open the setup menu, you will see the system setup page first:

#### SYSTEM SETUP

**TV SYSTEM**  
**SCREEN SAVER**  
**TV TYPE**  
**PASSWORD**  
**RATING**  
**DEFAULT**

1. **TV SYSTEM:** Change the TV mode among **NTSC**, **PAL** and **AUTO**.
2. **SCREEN SAVER:** Change the **SCREEN SAVER** on or off.
3. **TV TYPE:** Change the TV TYPE among 4:3PS, 4:3LB and 16:9.
4. **PASSWORD:** Change the **PASSWORD** lock or unlock, the default **PASSWORD** is “0000”
5. **RATING:** Change the parental **RATING** among 1KID SAFE, 2G, 3PG, 4PG13, 5PG-R, 6R, 7NC-17, 8ADULT.
6. **DEFAULT:** Restore the system setup to the default setup.

## OPERATION

### LANGUAGE SETUP

- When you open the setup menu, you will see the language setup page

### LANGUAGE SETUP




You can change the **OSD / AUDIO/ SUBTITLE / MENU** language between **ENGLISH / GERMAN / SPENISH / FRENCH / PORTUGUESE / ITALIAN / (RUSSIAN)** only for **MENU LANG**)

### AUDIO SETUP

- When you open the **AUDIO** menu, you will see the following picture:

### AUDIO SETUP

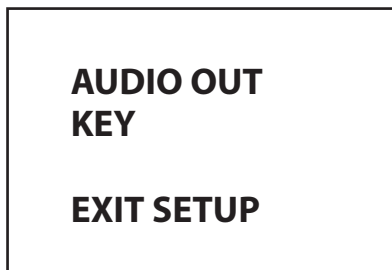

1. **AUDIO OUT:** Change among **SPDIF/OFF, SPDIF/RAW** and **SPDIF/PCM**.
2. **KEY:** Change among **-4, -2, 0, +2, +4**.  
If it appears that your **DVD** unit is faulty, first consult this checklist. It may be that something simple has been overlooked.

Under no circumstances should you try to repair the player yourself, as this will invalidate the warranty. Only qualified service personnel can remove the cover or service this player.

### BLUETOOTH OPERATION

#### • PRE-PAIR FOR BLUETOOTH OPERATION

- I. When using Bluetooth, please make sure the mobile phone supports Bluetooth function.
- II. For the different kind of mobile phone, Bluetooth emissive power has some difference. To get the best conversation quality, it is commended that the distance between the mobile phone and the unit is within 3m. and please don't put any metal object or any obstacle between the path of the mobile phone and the unit.







#### • PAIRING

1. On the mobile phone, select the Bluetooth set up. (Please refer to the instruction manual of your mobile phone on how to operate Bluetooth.)
2. "**CAR KIT**" should appear in the list on your mobile phone, please select "**CAR KIT**" and then input password "**0000**". If it needs a password.
3. When successful paired, the **BT** mark will be displayed on **LCD**.


#### • Bluetooth audio (A2DP function)

Press **MODE** button (15) switch to BT mode. It will play a song automatically. Press **PAU** button (8) to pause/play the song. Press button (19) or button (18) to select next/previous song.

# REMOTE CONTROL

REF	DESCRIPTION	TUNER	CD/MP3/USB	DVD
1	MUTE	Silence Audio output	Silence Audio output	Silence Audio output
2	POWER 	Turn the radio on or/standby	Turn the radio on or/standby	Turn the radio on or/standby mode.
3	0-9	Press 1-6 to access preset station: Press and hold to store the station to 1~6 button.	Enter track number to access track directly.	Enter track number to access track directly.
4	LOUD/E-Q	Press to select desired	Press to select desired	Press to select desired
5	SEL	Access the Bass, Treble, Balance... setting.	Access the Bass, Treble, Balance... setting.	Access the Bass, Treble, Balance... setting.
6	STOP		Stop the playing	Stop the playing
7	OK		Confirm the Track/Chapter selected	Confirm the Track/Chapter selected with the numeric buttons
8			Move to desired menu item and than press OK confirm	Use with DVD menu to move to the desired menu item and then press OK to confirm .
9	DISP	Press to show the time. Press and hold to set the clock.	Press to show the time. Press and hold to set the clock.	Press to show the time. Press and hold to set the clock.
10		Press to auto-seek station up/down Press and hold to manual tuning.	Press to select next/previous track. Press and hold to Fast Forward 2X,4X,8X,20X / Fast reverse. 2X, 4X,8X,20X	Press to select next/previous track. Press and hold to Fast Forward 2X,4X,8X,20X / Fast reverse. 2X, 4X,8X,20X
11	GO TO		Select exact time, track or chapter for playback.	Select exact time, track or chapter for playback.
12	TITLE			Press to view title menu. Then use directional arrows and PLAY button to play selected title. May not be supported by all discs.
13	SUB-T			Changing the SUBTITLE language if available.
14	AUDIO/MO/ST	Press to change the mode between mono and stereo in FM band.		Changing the AUDIO soundtrack on multi-audio soundtrack DVD disc.
15		Use  for manual tuning	Fast Forward 2X, 4X, 8X, 20X. Fast Reverse 2X, 4X, 8X, 20X.	Fast Forward 2X, 4X, 8X, 20X. Fast Reverse 2X, 4X, 8X, 20X.
16	ZOOM			Zoom picture or press repeatedly to change magnification level.
17	SETUP		View SETUP menu	View SETUP menu
18	RDM		Play all tracks in random order.	
19	REP		Repeat track.	Repeat track
20			Pause/resume playback	Pause/resume playback.
21	VOL +/-	Adjust volume up/down.	Adjust volume up/down.	Adjust valume up/down.
22	BAND	Select FM1, FM2. FM3. AM1,AM2 radio bands.		
23	AS/PS	Press to Preset Scan. Press and hold to Auto store stations	Press AS/PS button one time to access track number searching mode. Use 0-9 to select dersired track then press SEL to play. Press AS/PS button 2 times to access searching mode. Use VOL+/- to select dersired filename then press SEL to play. Press AS/PS button 3 times to access Folder searching mode. Use VOL +/- button to select dersired folder/file then press SEL to play.	Press AS/PS button one time to access Track/Chapter number searching mode. Use 0~9 to select dersired Track / Chapter then press SEL to play.
24	MENU			Access main DVD menu
25	MODE	Change the source.	Change the source.	Change the source.
26	LOC	Turn on/off the local function		

# REMOTE CONTROL

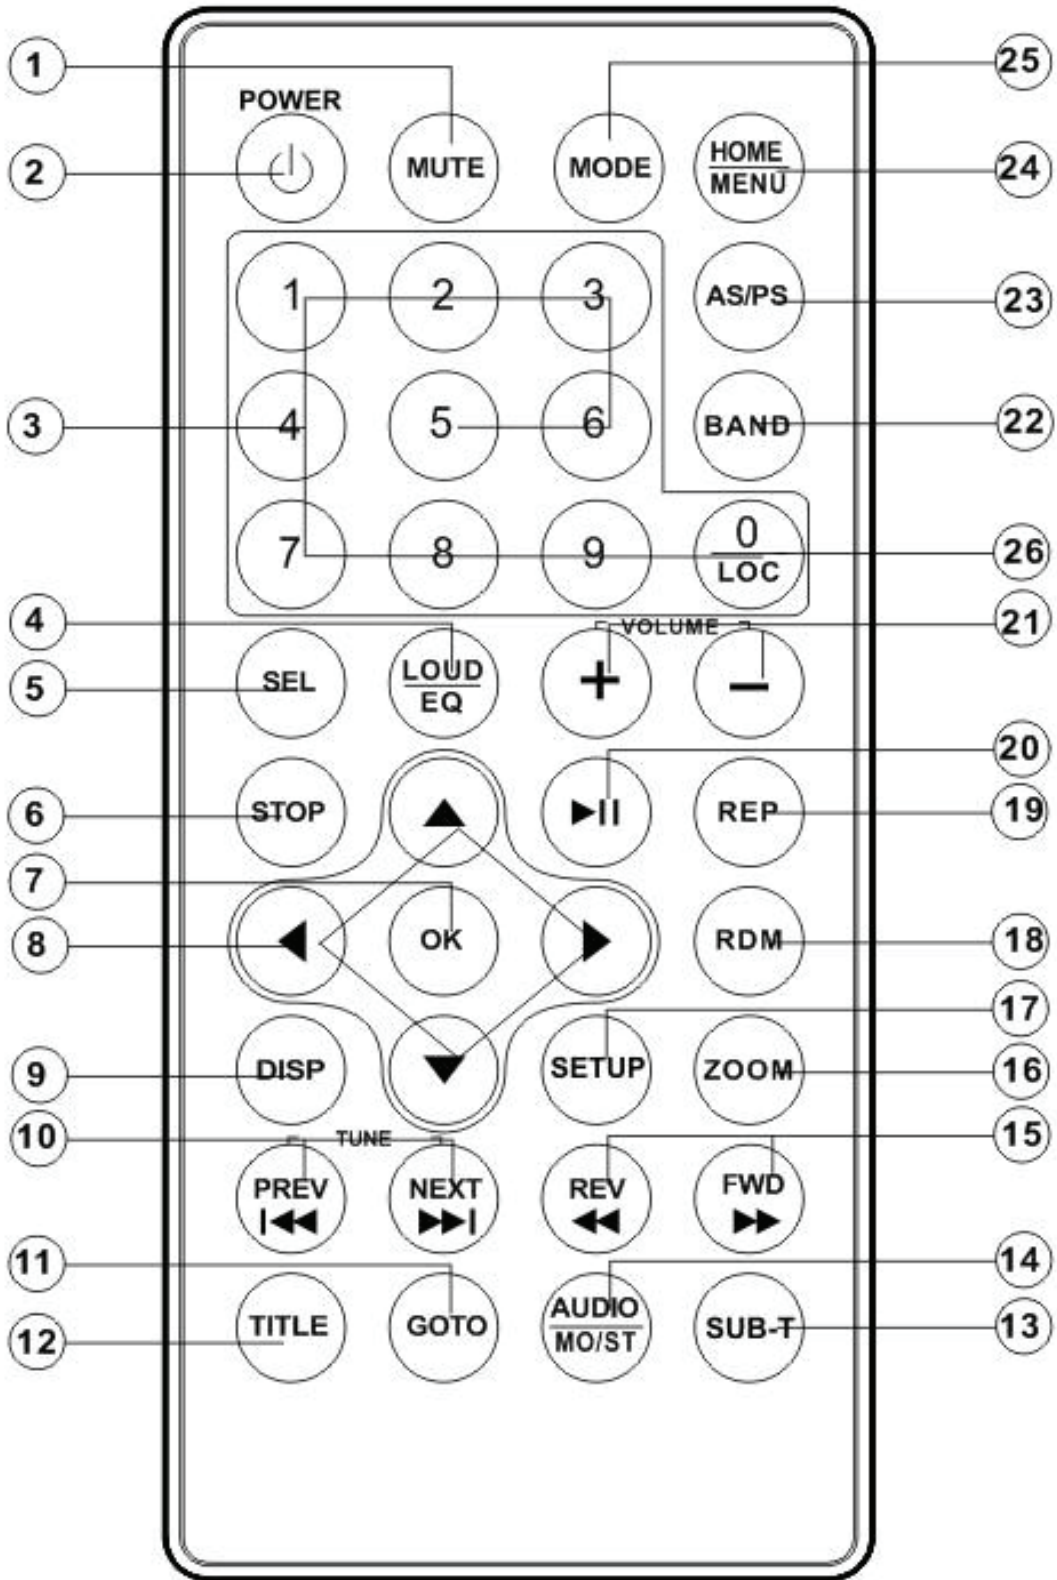

## TROUBLESHOOTING

Before going through the checklist, check the wiring connection. If any of the problems persist after checklist has been made, consult your nearest service dealer.

Symptom	Cause	Solution
No power.	The car ignition switch is not on.	If the power supply is connected to the car accessory circuits, but the engine is not moving, switch the ignition key to "ACC".
	The fuse is blown.	Replace the fuse.
Disc cannot be loaded or ejected.	Presence of CD disc inside the player.	Remove the disc in the player, then put a new one.
	Inserting the disc in reverse direction.	Insert the compact disc with the label facing upward.
	Compact disc is extremely dirty or defective disc.	Clean the disc or try to play a new one.
	Temperature inside the car is too high.	Cool off or until the ambient temperature return to normal.
	Condensation.	Leave the player off for an hour or so, then try again.
No sound.	Volume is in minimum	Adjust volume to a desired level.
	Wiring is not properly connected.	Check wiring connection.
Sound skips.	The installation angle is more than 30 degree.	Adjust the installation angle less than 30 degree.
	The disc is extremely dirty or defective disc.	Clean the compact disc, then try to play a new one.
The operation keys do not work.	The built-in microcomputer is not operating properly due to noise.	Press the RESET button. Front panel is not properly fix into its place.
The radio does not Work. The radio station automatic selection does not work.	The antenna cable is not connected.	Insert the antenna cable firmly.
	The signals are too weak.	Select a station manually.



# **PLRVST400**

## **RV WALL MOUNT AUDIO/VIDEO RECEIVER**

**AV Stereo Headunit with Wireless BT Streaming, Multimedia Disc Player,  
HDMI ARC, AUX/MP3/USB Reader**

### **Features:**

- Audio + Video Digital Mobile Receiver System
- Built-in Bluetooth Wireless Receiver for Music Streaming
- Universal Standard Size: Console/ Wall Panel Installation
- Multi Speaker '3-Zone' Audio Source Control
- Digital LCD Display with AM/FM Radio
- Front-Loading CD/DVD Player
- Versatile Digital Media File Support
- Connect & Stream Audio from External Devices
- Aux (3.5mm) Input Jack
- RCA (L/R) Audio Output Connectors
- RCA (L/R) Audio Input Connectors
- HDMI Connector ARC (Audio Return Channel)
- RCA Video Input/Output Connectors
- USB Flash Drive Reader
- Built-in Weatherband Radio Functionality
- Sound Configuration & EQ Adjustment
- Front Panel Button Control Center
- Integrated Alarm Clock
- Headphone Jack, 3.5mm
- Used for RV, Travel Trailers, Motor Homes, Campers & More

### **Bluetooth Connectivity:**

- Built-in Receiver for Wireless Audio Ability
- Works with All of Your Favorite Devices (iPhone, Android, Smartphone, iPad, Tablet, etc.)
- Bluetooth Version: 2.1
- Wireless Range: 30'+ ft.
- Bluetooth Network Password: '0000' (4 Zeroes)

### **What's in the Box:**

- A/V Receiver System
- Power & Wiring Harness
- Remote Control

### **Technical Specs:**

- MAX Power Output: 4 x 50 Watt
- Universal Size Standard: Double DIN
- Sound Mode: Stereo/Mono
- Frequency Response: 40Hz-18kHz (+/-3dB)
- Impedance: 4 Ohm
- S/N Ratio: 60dB
- Stereo Separation: >50dB, @ 1kHz
- Tone Control: Bass/Treble +/-10dB
- PLL Synthesizer Stereo Radio
- Electronic Shockproof (ESP) Function
- Maximum USB Flash Support: 32GB
- Radio Station Memory: Up to 30 Presets
- Digital Audio File Support: MP3, WMA
- Digital Video File Support: MP4, AVI, MOV, MPG, FLV, XVID
- CD/DVD Disc Compatibility Support: CD-R, CD-RW, VCD, DVD, MP3-CD
- Power: DC 12V
- Current Drain/Power Consumption: 10 Amp (Max.)
- Chassis Dimensions: 7.0" x 6.3" x 3.9"



# PYLE

PyleUSA.com



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

PYLE