 



PYLE[®]
view

**Operating
Instructions**


PLVWR1440

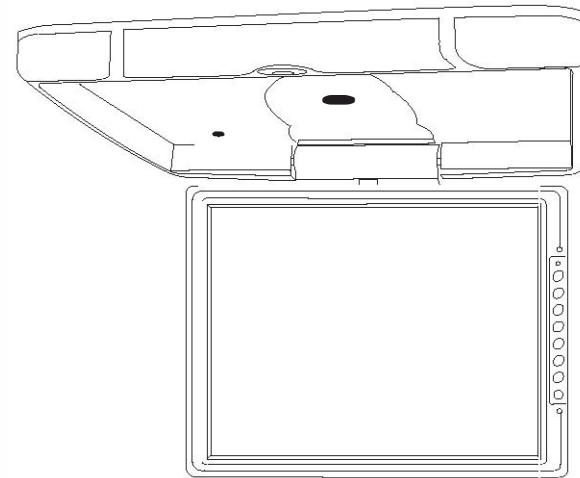

 14" High Resolution TFT Roof Mount Monitor

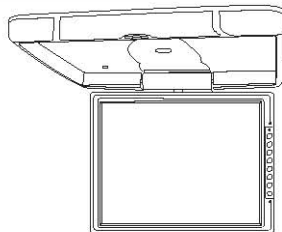

Wiring diagram

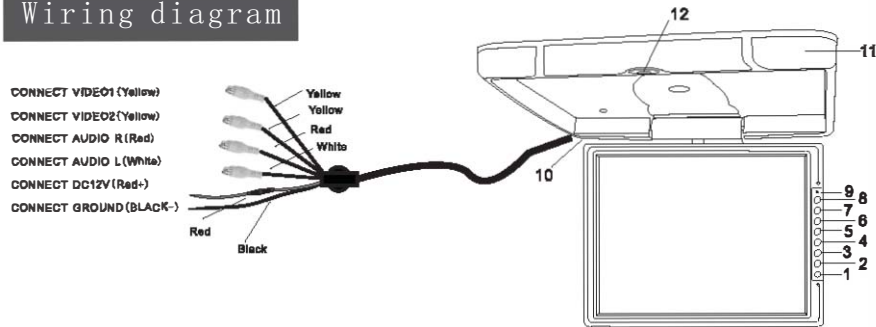 


Specifications

Type: TFT LCD
 Pixs:1024*768
 Display Format: 4:3
 Power Supply: DC 12V
 Dual Video Input
 L/R Audio Input
 System: PAL/NTSC
 Built-in IR transmitter
 Built-in Dome lamp
 Storage Temperature: -10 °C ~ +60 °C
 Power source/Consumption:DC12V+/-20%,≤15W

Key functions

- | | |
|-----------------------------------|----------------------------|
| 1.Remote control | 2.RESET |
| 3.- | 4.MENU |
| 5.+ | 6.AV2 |
| 7.AV1 | 8 .POWER |
| 9.LED | 10.LIGHT SWITCH |
| 11.IR wireless transmitter module | 12 .Monitor release button |

 Remote control

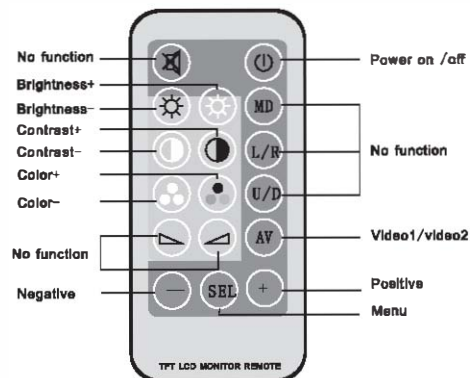

Monitor installati

- 1.First of all,unscrew the four screws on the mounting plate connected to the unit and take off the mounting plate.
- 2.Fixup the mounting plate on the suitable position if the vehicle with four screws.
- 3.Then install the unit with four screws on the mounting plate to fix the unit.

