



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?

PyleUSA.com/ContactUs

PYLE

Questions? Issues?

 
We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

PYLEPRO

PyleUSA.com

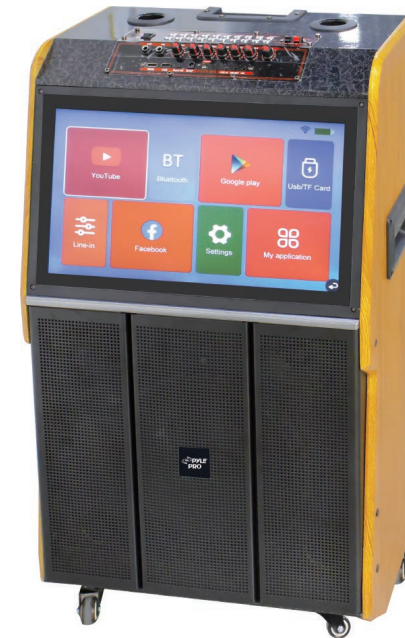

PMDJAND10

Portable Wireless BT Streaming Loudspeaker

with Touch screen and Wireless Microphone,
with Wheels and Handle Bar,

Supports USB/SD/MMC/PC/TV/MP3/Mobile Phone, etc.

USER GUIDE

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines. This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions. Meanwhile, please observe all the indications about safe operating.




1. **Protection of electric power supply line:** Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. **DO NOT** lengthen the electric shock, **DO NOT** pull or drag or the power supply line.
2. **Ventilation:** This set must be put in ventilated place. **DO NOT** put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. **DO NOT** put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
3. **Casing Dismantling:** **DO NOT** dismantle the casing. If one touches the inner components, he will probably get serious electric shock.
4. **Unusual smell:** When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plus from the outlet on the wall. Contact the sell shop or nearest repairing center.

PRODUCT FEATURES


- Wi-Fi KTV Speaker
- Portable Karaoke Machine Wireless BT Streaming Speaker
- 15.4" High-Definition Screen
- Function: USB/Micro SD/BT/WIFI Touch Screen/Remote Control/HDMI/LINE IN/LINE OUT/MIC/DC12V
- Application: Home Theater/ Karaoke/ Party/ Disco/ Outdoor Dancing
- Full-function Remote Control
- Stereo Surround, Durable, and Easy Maintenance
- Dual Wireless Microphone
- For Indoor/Outdoor Activities
- With Trolley and Rollers for Easy Transportation
- Record Voice, USB/Micro SD Card Compatible
- Built-in rechargeable 12V 7AH Lead Acid Battery

REMOTE CONTROL FUNCTIONS

 1. **SWITCH SCREEN:** (Press and hold the Standby Power button)
2. **MUTE:** Mute the sound. Press again to restore the sound.
3. **LIVE**
4. **VOD**
5. **APP**
6. **SET**
7. **PREVIOUS**
8. **NEXT**
9. **VOL - :** Decrease volume
10. **VOL +:** Increase volume
11. **MENU:** select, menu play/repeat all/single repeat
12. **MULTI MEDIA:** Video/Audio
13. **UP/DOWN/LEFT/RIGHT:** Move the selection up, down, left and right.
14. **OK**
15. **RETURN:** To return to the previous screen
16. **HOME:** Returns to the Home Screen
17. **0~9:** 0~9 play video and input password
18. **MIC PRI:** MIC PRIORITY
19. **TRACK:** SOUND TRACK: audio tracks used in video playback

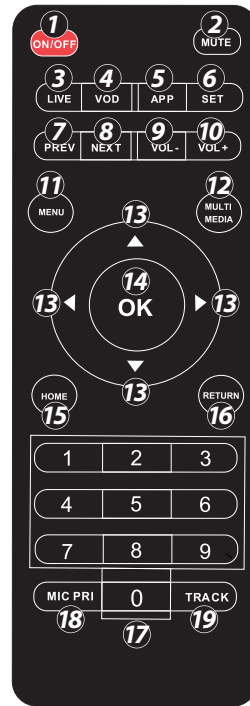

PANEL DESCRIPTION

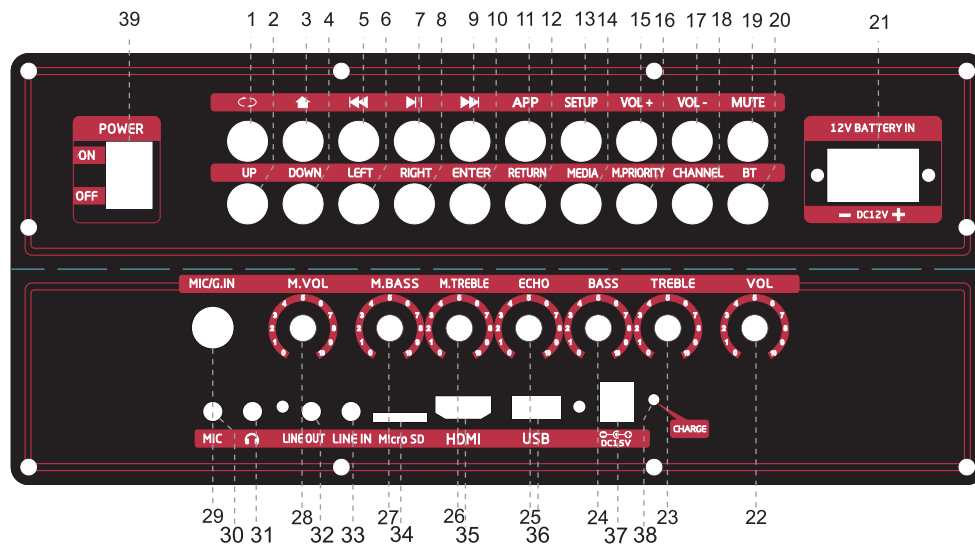 

1. **↵:** SELECT, MENU PLAY/REPEAT ALL/SINGLE REPEAT
2. **UP**
3. **🏠:** Home page
4. **DOWN**
5. **⏮:** Previous song
6. **LEFT**
7. **⏸:** PLAY/PAUSE Button
8. **RIGHT**
9. **⏭:** Next song
10. **ENTER**
11. **APP**
12. **RETURN:** Returns to the previous screen
13. **SETUP:** Setting
14. **MEDIA:** MEDIA/VIDEO/MUSIC
15. **VOL + :** Increase volume
16. **M.PRIORITY:** Microphone priority
17. **VOL - :** Decrease volume
18. **CHANNEL:** Track
19. **MUTE:** Press to mute/unmute
20. **BT:** Wireless BT Streaming ON/OFF
21. **INPUT DC 12V**

22. **VOL:** Master volume knob
23. **TREBLE:** Treble control knob
24. **BASS:** Bass control knob
25. **ECHO:** Echo effect knob (for microphone)
26. **M.TREBLE:** Microphone Treble control knob
27. **M.BASS:** Microphone Bass control knob
28. **MIC.VOL:** Microphone Volume knob
29. **MIC/G. IN:** Microphone/Guitar input
30. **MIC:** Microphone input
31. **🎧:** Earphone output
32. **LINE OUT:** Audio output
33. **LINE IN:** Audio input
34. **MICRO SD**
35. **HDMI:** HDMI output
36. **USB:** USB interface
37. **15V IN:** DC15V Charging interface
38. **CHARGE:** Charging indicator light
39. **POWER ON/OFF**

GETTING STARTED

1. Ensure the Portable Loudspeaker is turned off. Ensure all volume controls are turned all the way down. Next, connect one side of the included power cable to the Portable Loudspeaker's power inlet and the other to a grounded power outlet.
2. Ensure that the power supply complies with the power requirements listed on the identification sticker located on the bottom of your product. Turn ON the power to the Portable Loudspeaker using the power switch.
3. Slowly turn up the function keys until the desired level is reached.

WIRELESS BT CONNECTION

Switch the *Portable Wireless BT Streaming Loudspeaker* to **MODE**, then switch to **BT** (BT MODE) pairing mode and connect to a new BT device using BT Network Name: 'PyleUSA'.

WARNING:

To prevent the risk of fire or electric shock, do not expose this appliance to rain or moisture. To prevent electric shock do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

SAFETY:

Prior to connecting mains, ensure that the supply voltage is correct and the mains lead is in good condition. Avoid ingress of water or particles into the enclosure.

PLACEMENT:

Keep the unit out of direct sunlight and away from heat sources.
Place the unit in an upright position during use and storage.
Keep the unit away from moisture or dusty environments.

CLEANING:

Use a soft cloth with a neutral detergent to clean the cabinet, panel and controls.
To avoid damage, do not use solvents to clean this equipment.

WHAT'S IN THE BOX:

- Portable Wireless BT Streaming Loudspeaker
- Remote control
- (2) Wireless Handheld Microphone
- 1 Set of Charger

California Prop 65 Warning

⚠️ WARNING:

This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

TECHNICAL SPECS:

- Power Supply: 30W
- Working Voltage: 110/240V 50/60
- Sub-woofer Size: 10" -inches Woofer
- 40" HQ quantity: 383pcs
- Speaker Type: Active
- Construction Material: Wooden & ABS
- Power Source (AC): 110/240V-50/60 Hz±10%
- Direct Current: external input DC 12V
- Frequency Response: 40Hz-18KHz
- Internal Storage: 1G RAM +8G ROM
- Android Version: 7.1
- Screen: 15.4" -inches High-Definition Screen
- Resolution: 1200 x 800
- Speaker: 10" -inches Bass + 4" -inches Midrange Unit + 80 Magnetic Horn Treble
- Remote Control Battery Operated, requires (2) x 'AAA' Batteries (Not Included)
- Battery Type: 12V 7AH Lead Acid Battery
- Battery Life: Up to 2+ Hours
- Mic Nominal Current Drain: < 100mAh
- Battery Operated Mics requires (2) x 'AA' Batteries each (Not Included)
- Charging Time: 4-8 Hours
- Product Dimensions (L x W x H): 19.69" x 15.35" x 35.83" -inches

