

BLUETOOTH MEGAPHONE/BULLHORN

w/ Built-in USB Flash & SD Memory Card Readers

QUICK GUIDE

Model: PMP42BT



This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference. Make sure that it is available to all persons using this device.

SAFETY

This megaphone is intended to be used only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or device damage. Please use the megaphone as described and under supervision if used by children or minors.

- Ensure that plastic bags, packaging, etc.
- Never let children unattended use electrical devices.
- Use proper polarity is observed when inserting batteries.
- Incorrectly inserted batteries may cause damage and risk of fire.
- Leaking batteries can cause permanent damage to the device.
- Remove batteries if the megaphone will not be used for long periods of time.

OPERATING INSTRUCTIONS

Press the buttons located on the back of the megaphone to choose the desired PA modes and to power on/off the unit. Choose between '**Alarm**' and '**Music**' modes. Also located on top is the volume control slider.

Music:

While in 'Music Mode', speak through the microphone mouthpiece while holding the 'Press-to-Talk' button on the detachable handheld differential mic. The user also has the ability to use the 'PA Talk Trigger Switch' on the megaphone's handheld pistol grip. Project externally connected devices or digital media files, via inserted USB Flash or SD Memory Card, through the megaphone. Once in 'Music Mode', press the soft touch control buttons located near the pistol grip to go back, next, play or pause your audio files.

Alarm:

Pressing this button activates an automatic, continuous alarm siren. Switch to another mode to discontinue the alarm siren play.



BLUETOOTH CONNECTION

The megaphone's LED indicator will blink signaling it is ready to be paired, via Bluetooth, with your device. Press and hold the 'M' button, located on the back panel of the pistol grip, until the megaphone enters pairing mode and the LED light blinks.

The megaphone will appear as 'HC_Blue-tooth' in your Bluetooth device list. Connect to the megaphone and you will be able to instantly stream media through the megaphone's speaker.

NOTE: Control your media with the previous, next, play/pause buttons.

USB/SD/AUX CONNECTION

Switch the megaphone 'USB/SD/AUX/BT' Mode. The megaphone's LED indicator will then blink signaling it is ready for you to connect an AUX (3.5mm) cable, USB Flash Drive or SD Memory Card. Connect your desired media and you will be able to instantly stream audio through the megaphone's speaker. Control your media with the previous, next, play/pause buttons.

FEATURES & SPECIFICATIONS:

- Built-in Bluetooth for Wireless Music Streaming
- Works with Virtually Any Bluetooth Device (*iPhone, Android, Smartphone, iPad, Tablet, PC, etc.*)
- 1,200 Yard Range
- For Indoor/Outdoor Use
- Used by U.S. Armed Forces
- Maximum Power Output: 40 Watt
- SD Card & USB Flash Memory Readers
- Aux-Input (3.5mm) Jack to Connect External Devices
- Ergonomic Pistol Grip and Light-Weight Chassis
- Batteries Required: 6 x "D" Batteries, Not Included
- Battery Life: Up to 16 Hours
- Dimensions: Diameter 8.0" x Length 13.12"
- Weight: 4.8 lbs.