

PYLE

PyleUSA.com



PMP45R

Portable Megaphone with Built-in Battery
10 Second Memory Record, Detachable Handheld
Microphone, Siren Alarm Mode

USER MANUAL

PMP45R

Megaphone Speaker with Built-in Rechargeable Battery, 10 Second Memory Record, Detachable Handheld Microphone, Siren Alarm Mode

This user manual contains important information for safe operation and optimal megaphone performance. Please carefully read and follow safety notes and instructions. Save this manual for future reference. Make sure that it is available to all persons using this device.



OPERATION

- Open the back cover by pressing down on the '**Open**' Button
- Insert 6 x 'D' Batteries then close back cover until locks into position. Now, your megaphone is ready for operation.
- To activate the megaphone, press the '**ON/OFF**' button on the back cover.

- When using the megaphone, place your lips as close as possible to the megaphone when speaking. Adjust the '**Volume Control**' to the desired level without causing any howling or feedback.
- Press the '**Play**' button to play recorded voice or press the '**Siren**' button to activate emergency siren/alarm. To switch off the siren, press the same button again, or press the '**ON/OFF**' button.
- Adjust the volume control to the min. before recording. To record, press the **RECORD** button. Now your megaphone is ready for recording. The longest record time is about 10 seconds. Press the **RECORD** button again after recording is done.
- Press the **PLAY** Button to activate the recorded materials circularly.


PRECAUTIONS

- Ensure correct polarity of batteries used. Insert the batteries in the correct direction by aligning the (-) marks on the batteries with the spring in the back cover.
- Use new batteries/cells whenever possible.
- When the megaphone is not in use for a long period of time, remove the dry Batteries and replace.
- Drained Batteries or rechargeable battery will not give sufficient sound volume.

BATTERY CHARGING

1. The megaphone features a removable rechargeable battery, that plugs-in directly into the wall power outlet for charging. Once connected to the wall power outlet, the battery will begin charging automatically (average time for full-charge : **8.5 hours**). A Red light will be lit while charging and turns Green when fully charged.

2. Once fully charged, insert the battery into the megaphone using the release button in the rear of the megaphone. Be sure to slide the battery into the compartment properly, ensuring the power connection cable is exposed.
3. Once the battery is inserted, connect the battery power cable connector into the megaphone power input (You may need to partially close the open megaphone compartment to make the connection).

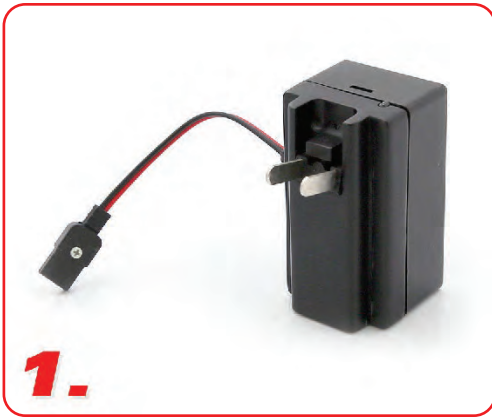

PMP45R

Megaphone Speaker with Built-in Rechargeable Battery, 10 Second Memory Record, Detachable Handheld Microphone, Siren Alarm Mode

Features:

- Compact, Portable & Powerful Megaphone Speaker
- Built-in Rechargeable Battery, Charges via Directly Wall Outlet
- *or Battery Operated by (6) x 'D' Batteries, Not Included
- Integrated Wired Handheld Microphone
- Convenient Talking & Voice Projection via Handheld Mic
- Siren Mode: Button-Activated Automatic Siren Function
- Record Mode: 10 Second Integrated Audio Memory
- Instantly Save & Replay Your Recorded Message
- Ergonomic Pistol Grip, Light-Weight Chassis
- Adjustable Audio Volume Control
- Used by U.S. Armed Forces
- For Indoor/Outdoor Use

What's in the Box:

- Megaphone Speaker
- Removable Rechargeable Battery
- Wired Plug-in Handheld Microphone

Technical Specs:

- Maximum Power Output: 40 Watt
- Audio Projection Range: 1,000 Yards
- Rechargeable Battery: 7.4V Lithium-iOn, 1500mAh (11.1Wh, 124g)
- Dimensions (Diameter x Length): 8.0" x 13.1" -inches
- Sold as: Unit

PYLE

PyleUSA.com



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?

PyleUSA.com/ContactUs

PYLE