



## PPHP129WMU

12" 1000 Watt Portable Loudspeaker System - Built-in Rechargeable Battery, 2 Wireless Mics, FM Radio, LCD Readout, USB, SD Card Readers and Bluetooth Music streaming

# User's Manual

### INDEX

OPERATION.....	1
GENERAL USE INSTRUCTIONS.....	2
SPECIFICATIONS.....	2
CONTROLS AND CONNECTIONS.....	3



- **CAUTION, TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK)**
- **THIS PRODUCT MUST BE EARTHED**
- **NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL**

### OPERATION

1. Prior to switching on, turn volume down to minimum.
2. Connect the audio source to the appropriate Input socket
3. Connect to the mains supply.
4. Switch on the audio source, followed by the active speaker.
5. Set the volume with the applicable control.
6. Adjust the bass + treble.
7. When use the speaker box by built-in battery, if you find the MP3 screen flicker which indicates the battery voltage is low. you have to turn off the speaker box and charge battery.
8. If you don't use the unit frequently, please do remember to charge the unit every three months to keep the battery in good condition.  
Note: Please turn off the product when finish charging.


### INSTRUCTIONS

- Do not overload the box to avoid damage to the speakers.
- Do not place an open fire (candles etc) on top or next to the box - FIRE HAZARD
- Only connect to an earthed mains outlet of 110Vac/60Hz.
- For indoor use only. If the box is used outdoors, you need to make sure that no humidity can enter the box.
- When not in use, unplug the unit from the mains.
- Unplug the unit from the mains prior to checking or replacing the fuse.
- Make sure that the box is placed on a stable, strong surface.
- The boxes can be hung. Use only strong and approved mounting material. During the mounting, make sure that nobody is standing below the mounting area.
- Do not place liquids on the box and protect it against humidity. Humidity can shorten the life time considerably.
- Only use suitable means of transportation if you want to move the box - BEWARE OF YOUR BACK !!
- Always unplug the unit during a thunderstorm or when it is not in use.
- If the unit has not been used for a long period of time, condensation can occur inside the housing. Please let the unit reach room temperature prior to use.
- Never try to repair the unit yourself. It does not contain any user serviceable parts.
- Run the mains lead in such a way that nobody can fall over it and nothing can be put in it.
- Set the unit to the lowest volume prior to switching it on.
- Keep the unit out of the reach of children.

### SPECIFICATIONS

	12" Speaker box
System	Active 2-way full range
Woofer	12"
Tweeter	1.34"
Power RMS	500 Watt
Impedance	4 ohm
Frequency Range	55Hz - 18KHz
Sensitivity	93dB (+/- 2dB)
Connector	6.35mm/RCA
Mic Input Level	≤15mV
Line Input/Output Level	≥250mV

## PPHP129WMU

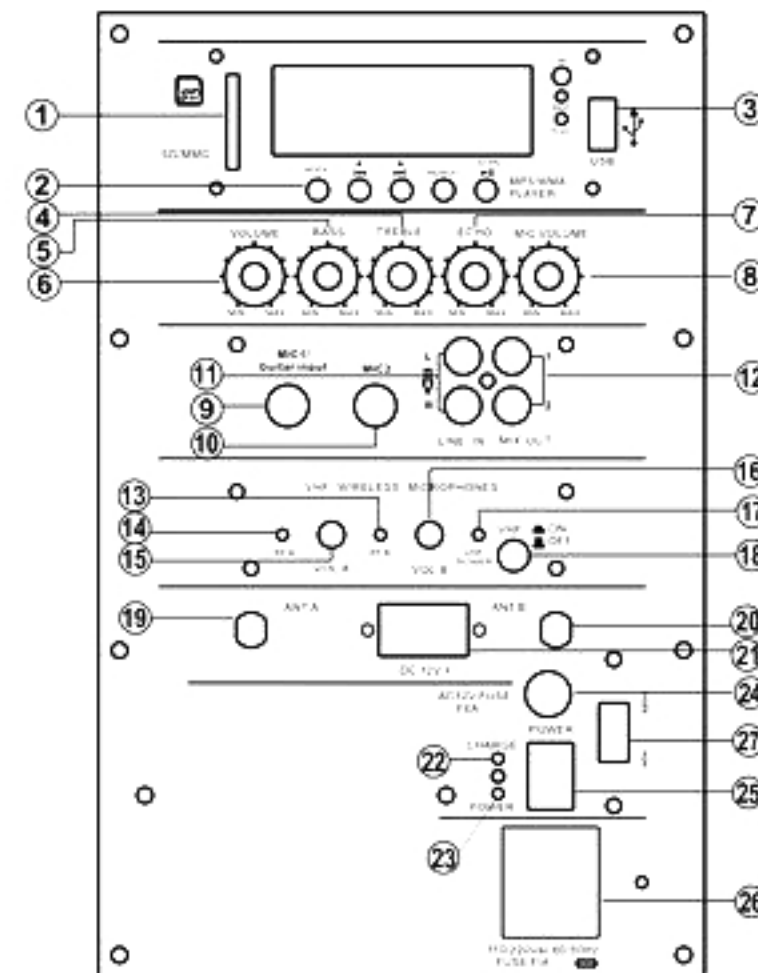

- |   |   |
|---|---|
| 1. SD/MMC card input                        | 14. Wireless microphone A channel indicator         |
| 2. MP3 control                              | 15. A channel volume control                        |
| MODE: USB/SD/FM/BLUETOOTH convertor         | 16. B channel volume control                        |
| ◀ : Previous songs                          | 17. Wireless power indicator                        |
| ▶ : PRE/NEXT under FM model                 | 18. Wireless mic power switch                       |
| ⏪ : Next songs                              | 19. Wireless microphone A channel receiving antenna |
| REPEAT : Repeat all / Random / Repeat one   | 20. Wireless microphone B channel receiving antenna |
| ▶⏸ : Play/Pause                             | 21. DC power interface                              |
| SCAN: Auto search under FM radio            | 22. Charging indicator                              |
| 3. USB input(mp3/wma)                       | 23. Power indicator                                 |
| 4. Treble control                           | 24. Fuse socket                                     |
| 5. Bass control                             | 25. Main power switch                               |
| 6. Output level control                     | 26. Fused IEC main inlet                            |
| 7. Echo control                             | 27. 110/220V switch                                 |
| 8. Mic input level control                  |   |
| 9. Guitar input /6.35mic 1 input            |   |
| 10. 6.35mm mic 2 input                      |   |
| 11. RCA Phono(R+L)line input                |   |
| 12. 6.35mm line output                      |   |
| 13. Wireless microphone B channel indicator |   |