

PYLE[®]
PyleUSA.com



Questions or Comments?
We are here to help!
Phone: 1.718.535.1800
PyleUSA.com/ContactUs



Visit Our Website

SCAN ME
PyleUSA.com

PYLE[®]
PyleUSA.com



PPHP2835B
Dual 8" Bluetooth Portable PA Speaker

USER GUIDE

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.
RETAIN THIS OWNER'S MANUAL FOR FUTURE REFERENCE.**

Features:

- True Wireless Stereo System
- Portable Speaker System
- High-Powered PA Loud Speaker Style
- Bluetooth Wireless Music Streaming Ability
- Multi-Color Flashing LED Party Lights
- Built-in Rechargeable Battery
- FM Radio with Digital LED Display
- Connect & Stream Audio from External Devices
- Aux (3.5mm) Input Connector Jack
- USB Flash Memory Reader
- 6.5mm Microphone input
- Battery Level LED Indicator Lights
- Rugged & Durable Molded Cabinet Design
- Convenient Extendable Carry Handle
- For Indoor / Outdoor Use

Bluetooth Wireless Streaming:

- Built-in Bluetooth Receiver for Wireless Music Streaming
- Works with All of Today's Latest Devices
(Smartphones, Tablets, Laptops, Computers, etc.)
- Bluetooth Wireless Network Name: PYLEUSA
- Bluetooth Version: 4.1
- Wireless Range: Up to 32' ft.

What's in the Box:

- PA Speaker System
- Remote Control
- Power Adapter

Technical Specs:

- Material: Polypropylene (PP)
- Max Power Output: 600 Watt Max
- Sound System: 8" -inch Subwoofer x2 + 1" Tweeter
- Impedance: 2.6 Ohm
- USB Interface Type: 2.0
- Digital Audio File Support: MP3
- Maximum USB Flash Support: 32GB
- Remote Control Battery Operated, 1 Piece Button Cell Battery CR-2025 (Included)
- Battery Life: Up to 3 Hours (Charge Time: Approx. 4.5 Hours)
- Rechargeable Battery: 3.7V, 2400mAh – 8.88 Wh
- Power Supply: 120/240V, Switchable (5V/2A Power Adapter)
- Dimensions (L x W x H): 9" x 8.66" x 23.2" -inches

FCC INFORMATION

WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

 
California Prop 65 Warning

⚠️ WARNING:


This product contains Lead and lead compounds which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

WARNING



 1. **DO NOT** place objects on top of the device, as they may scratch the surface.



2. **DO NOT** expose the device to dirty or dusty environments.



3. **DO NOT** insert any foreign objects into the device.



4. **DO NOT** expose the device to strong magnetic or electrical fields.



5. **DO NOT** use the device in the rain



6. Check with your local authority or retailer for proper disposal of electronic products.



 
7. **DO NOT** disassemble the device. Only a certified service technician should perform repairs.



8. The device has apertures to disperse heat. **DO NOT** block the ventilation openings; doing so may cause the device to overheat and malfunction.

Warning: Improper operation may cause personal injury, which could be fatal, and may also result in property damage.

FRONT PANEL FUNCTIONS

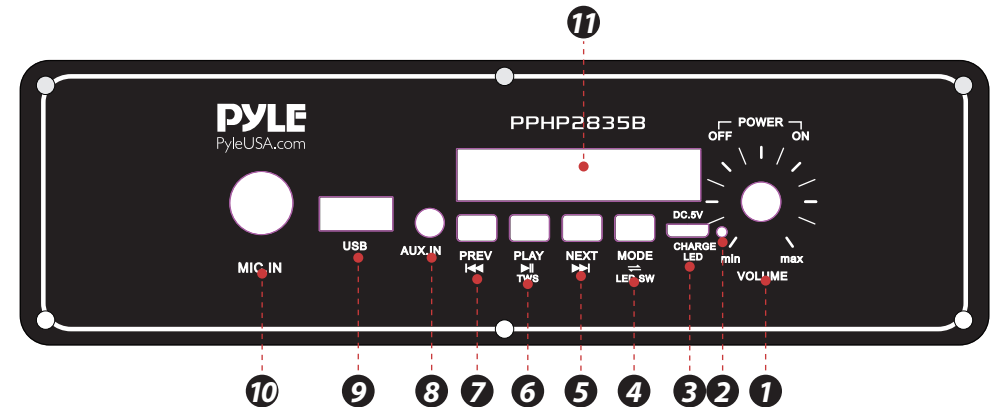

1. Master volume control
2. Charge LED indicator
3. DC 5V input jack
4. Short press to choose input signal, press and hold to turn ON/OFF light
5. Next/select saved radio station.
6. Play/Pause/TWS function/In FM mode, press and hold to search radio station automatically and save.
7. Previous/select saved radio station
8. AUX input jack
9. USB input jack
10. Microphone input jack
11. Display screen

TWS FUNCTION

For increase sound effect, our unit provides TWS function as follows:

 
Step-1: Turn ON BT mode on your device and connect the machine.

Step-2: Press and hold each control board "TWS" button more than 3's, and you will see "ON" on display, unit will start to connect the other unit automatically, now you can enjoy stereo sound, and adjusting one unit volume will affect the other unit.

Remark: After connection, press and hold again one of control board "TWS" button more than 3's, you will see "OFF" on display, unit's TWS disconnection.

REMOTE CONTROL FUNCTIONS

1. **Power:** Used to turn on and off the MP3 player power
2. **MODE:** Used to switch the AUX/USB/Wireless BT/Radio
3. Mute button
4. Play/Pause/Press and hold for TWS/In FM mode, press and hold to search radio station automatically and save
5. Next song/In FM mode, short press to select saved radio station
6. Previous song /In FM mode, short press to select saved radio station
7. EQ solution
8. Increase volume
9. Choose song number directly/In FM mode, choose FM Frequency directly
10. Choose USB or SD signal directly (Only suitable for models with USB & SD both)
11. Decrease volume
12. Repeat song

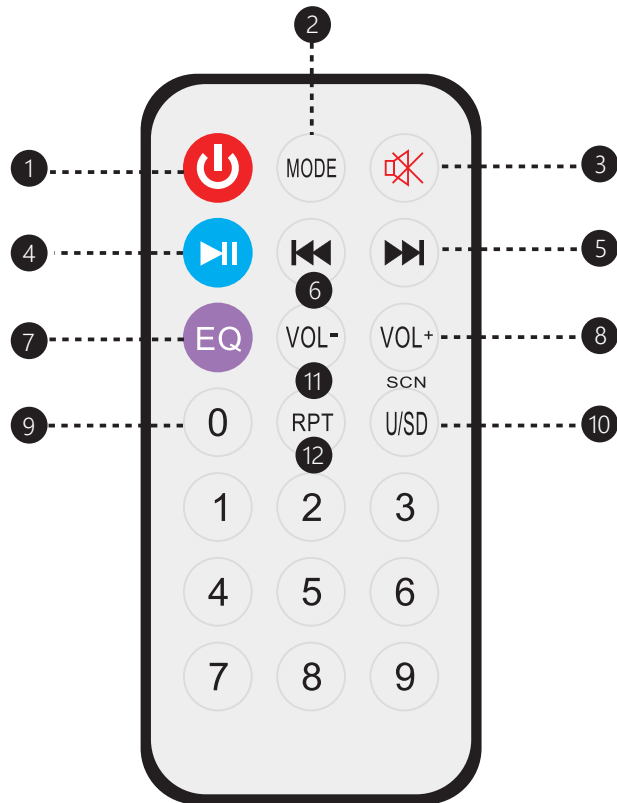

TROUBLESHOOTING

Issue	Possible Cause	Solution
No sound	<ol style="list-style-type: none"> 1. No input sound source. 2. Volume is too low. 	<ol style="list-style-type: none"> 1. Connect a sound source. 2. Adjust the volume.
Distorted Sound	<ol style="list-style-type: none"> 1. Volume is too high. 2. Speaker may be damaged 	<ol style="list-style-type: none"> 1. Lower the volume. 2. Repair or replace the speaker if damaged.
Karaoke does not work	<ol style="list-style-type: none"> 1. Microphone plug is not fully inserted. 2. Microphone switch is off. 3. Microphone volume knob is turned down. 	<ol style="list-style-type: none"> 1. Plug the microphone securely into the socket. 2. Turn on the microphone switch. 3. Adjust the microphone volume.
MP3 does not play	<ol style="list-style-type: none"> 1. Audio format on the USB drive is incorrect. 2. Improper operation has caused a process error. 3. USB drive is disconnected. 	<ol style="list-style-type: none"> 1. Convert the audio files to MP3 format. 2. Restart the device. 3. Reinsert the USB drive properly.

Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.

Start Here



Model Number:
PPHP2835B

[PyleUSA.com/pages/register](https://www.PyleUSA.com/pages/register)