 


PYLE

PyleUSA.com

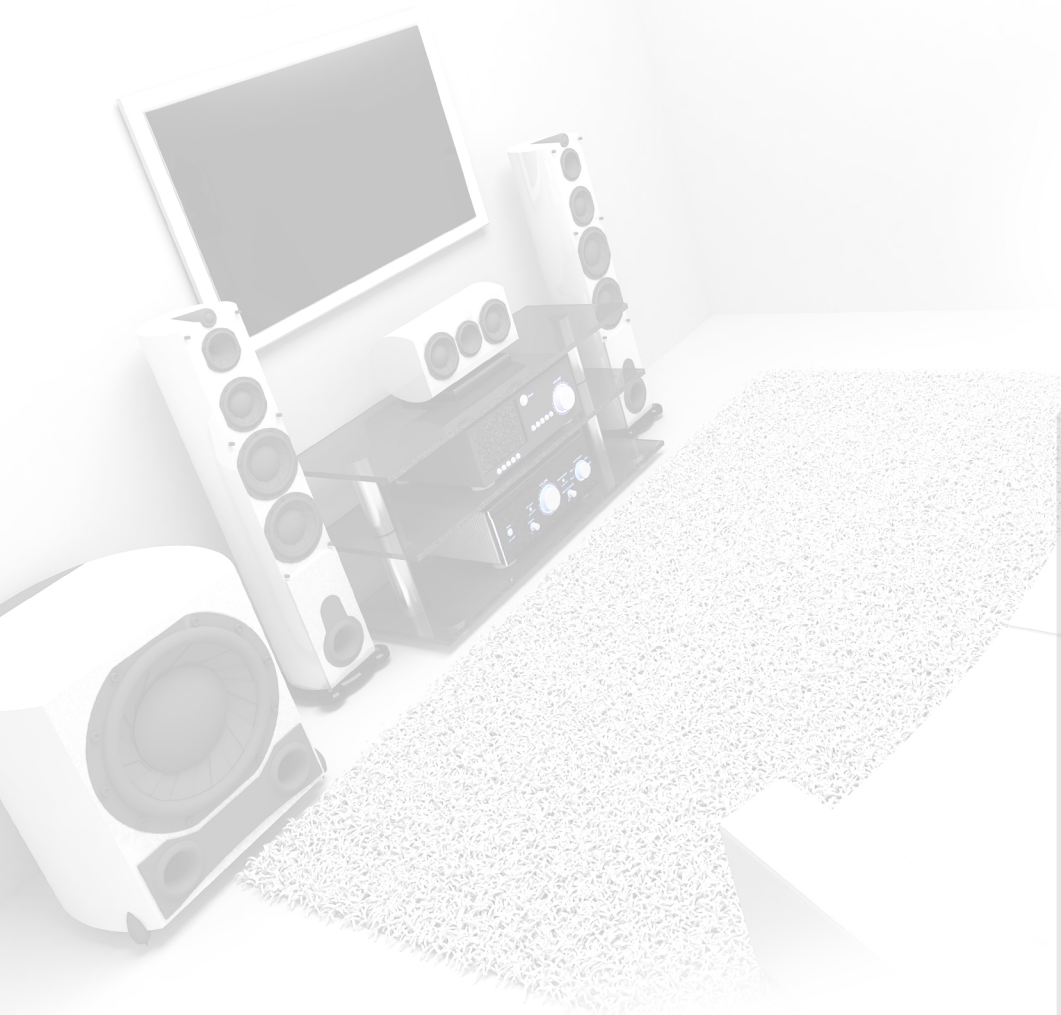

PPRE70BT

Rack Mount Bluetooth Amplifier Receiver

USER MANUAL

Safety Precautions

Read all documentations carefully before operating the equipment. Retain this manual for future reference. Follow all instructions printed on unit for proper operation.



Do not open cover (or back cover) to reduce the risk of electric shock or fire. There are no User serviceable parts inside. Refer servicing to qualified service personnel.



This symbol is used to alert the operator to the presence of important operating and precautions detailed in the documentation manual.



This symbol is used to warn operators that uninsulated dangerous voltages are present within the products enclosure that may pose a risk of electric shock.

Warning: To avoid fire or risk of electric shock, do not expose this unit to rain or moisture.

Notes:

- * Make sure power outlets conform to the power requirements listed on the back of the unit.
- * Main Voltage must be correct and the same as theat printed on the rear of the unit.
- * Do not use the unit if the electrical cord is frayed or broken.
- * The unit shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on unit.
- * The unit shall be connected to a mains socket outlet with a protective earthing connection.
- * Power plug as a equipment that separate from from supply system, it must be easy to operating.

 
 
Warning:

- * Using, adjusting or changing program control beyond this specification may cause dangerous radiation.
- * The unit should be serviced by qualified service personnel.
- * When repairing, use only same specification parts.

Notes:


- Select the voltage requirement through the voltage selector switch at the rear panel.
- Make sure that the power of the equipment is off and disconnected from the main voltage before switching the voltage selector to the required setting. We will not be responsible for damages arising from the improper installation, wiring or operation due to the fault or negligence of the user.

Control & Layout:

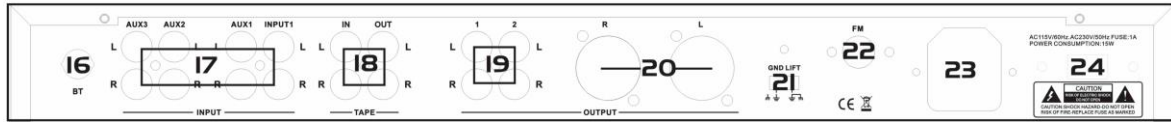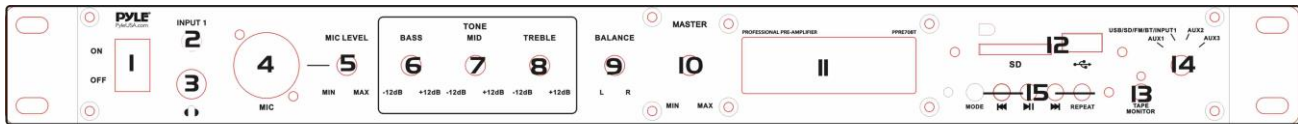

| | |
|-----------------------------|--|
| 1. POWER SWITCH | Press to switch the power unit ON or OFF. |
| 2. 3.5MM INPUT 1 | To connect with other music sources with 3.5mm Jack |
| 3. Headphone output | To connect with headphones |
| 4. XLR MIC INPUT | 1/4" /XLR combo jack for microphone |
| 5. LEVEL CONTROL | For microphone level controls |
| 6. BASS | Adjusts the bass frequency of main output |
| 7. MID | Adjusts the mid frequency of main output |
| 8. TREBLE | Adjusts the high frequency of main output |
| 9. BALANCE | Adjusts the balance of main output |
| 10. MASTER VOLUME | Adjusts the master volume of main output |
| 11. USB DISPLAY SCREEN | To show the name of the songs from USB, song time |
| 12. USD SLOT / SD CARD SLOT | USB slot capacity is up to 32G |
| 13. TAPE MONITOR | Press this button to use 'TAPE input/output from rear panel sources only. |
| 14. INPUT SELECTOR | To choose different input sources |
| 15. MP3 CONTROL BUTTON PART | <p>--MODE</p> <p>Press to select the USB/SD/FM/BT/Recording mode. The unit is set in MP3 mode and only when you press "MODE" button to go to other mode.</p> <p>--REPEAT</p> <p>There are 3 types of Repeat and they will show on the screen, and you can press this button to select the favorable repeat type, such as SINGLE / REPEAT / RANDOM / ALL REPEAT.</p> <p>Press this button for more than 3 seconds, it will go to Folder searching function, press Prev/Next buttons to go to the previous folder or the next folder. Press REPEAT button again to exit FOLDER searching.</p> <p>--PLAY</p> <p>Press to start to play the tracks. When in RECORDING MODE, press this button to start recording.</p> <p>--PREVIOUS TRACK</p> <p>Press to play the previous track from USB or SD card. When in FM mode, it is for previous station.</p> <p>--NEXT TRACK</p> <p>Press to play the next track. When in FM mode, it is for next station.</p> |

 Control & Layout:

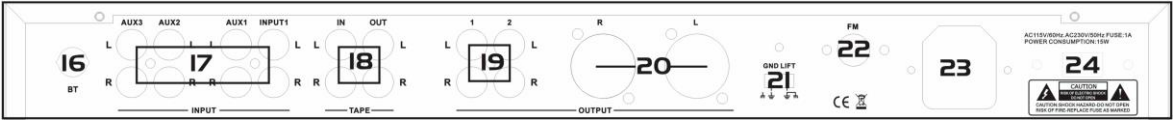

| | |
|---------------------------|--|
| 16. FM antenna | Adjust for better signal reception |
| 17. RCA INPUTS | Connect the audio output jacks of DVD/CD, to these jacks |
| 18. TAPE INPUT AND OUTPUT | Press TAPE monitor on the front panel to monitor the headphone or connect with another amplifier through REC INPUT. To connect with other audio input jacks to PLAY OUTPUT |
| 19. BALANCE OUTPUT | RCA types AUX OUT jacks |
| 20. UNBALANCED OUTPUT | XLR types AUX OUT jacks |
| 21. GROUND | Electrical ground |
| 22. TUNER ANT | Connect for FM antenna |
| 23. POWER SOCKET | To connect the power cord |
| 24. VOLTAGE SELECTOR | To select the correct local voltage |

Remote Control:

1. Press this button to turn on the MP3
2. When in FM mode, press this two buttons to select Previous or next station
3. Press these two buttons to select the previous Or next track in USB or SD or Bluetooth mode
4. Volume up or down
5. Press the numbers to select the tracks directly. The Unit takes 1-2 seconds to response
6. Press this button to select the different repeat mode. If press this button for more than 3 seconds, it will Go to FOLDER searching
7. Press this button to select the playing mode, such as USB/SD/FM/BLUETOOTH
8. EQ function, if the mp3 with EQ
9. Play and pause function for MP3





PYLE

PyleUSA.com