

PYLE

PyleUSA.com



PPRETRO25BL - PPRETRO25RD - PPRETRO25BK

Vintage/Classic Style Corded Phone
Retro Design Landline Telephone

USER MANUAL

General Safety

- Ensure that you read all of the safety instructions before using this product.
- This product has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
- Do read the operating instructions before you attempt to use the product.
- Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions.
- Switch off and remove the mains plug or mains adapter when making or changing any connections.
- Do consult your dealer if you are ever in doubt about the installation, operation or safety of your product.
- Don't remove any fixed covers as this may expose you to dangerous voltages.
- Don't continue to operate the product if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, withdraw the plug from the mains and consult your dealer.
- There are no user serviceable parts in the product. When servicing, refer to qualified service personnel.
- Don't leave the product switched on when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has standby mode.
- Don't obstruct the ventilation vents on the product, for example with curtains or soft furnishings, as this may cause overheating.
- Do not place the product in closed bookcases or racks without proper ventilation.
- Do not use the product in humid or damp conditions or allow it to be exposed to rain or moisture.
- Store the product in a clean, dry environment.
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on it.


- Position the power cable and other connected cables so that they are not likely to be walked on, pinched or where items can be placed on or against them.
- Never allow children to insert foreign objects into holes or slots on the product.
- No naked flame sources, such as lighted candles, should be placed on the product.
- Disconnect the product from the mains supply before cleaning.
- Do not use any liquids or aerosol cleaners, as this may damage the product. Use a soft, dust-free cloth.
- Contact local authorities for means of disposal.
- Make sure that other people in your household are conversant with operation of the product.

Product Safety

- Basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury.
- Use only the power source marked on the appliance.
- Unplug the appliance from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Keep the appliance away from hot, humid conditions or strong sunlight, and don't let it get wet or use this product near water e.g. near a bath, kitchen sink, swimming pool).
- Place the appliance on a stable, flat surface.
- The appliance should be kept free from excessive smoke, dust, high temperature, and vibrations.
- Operating the appliance near electrical items may cause interference. Move away from the electrical item.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

- Unplug appliance from wall outlet under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the appliance does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
- **NEVER** use your appliance outdoors.
- Do not disassemble the appliance.

Description of Parts

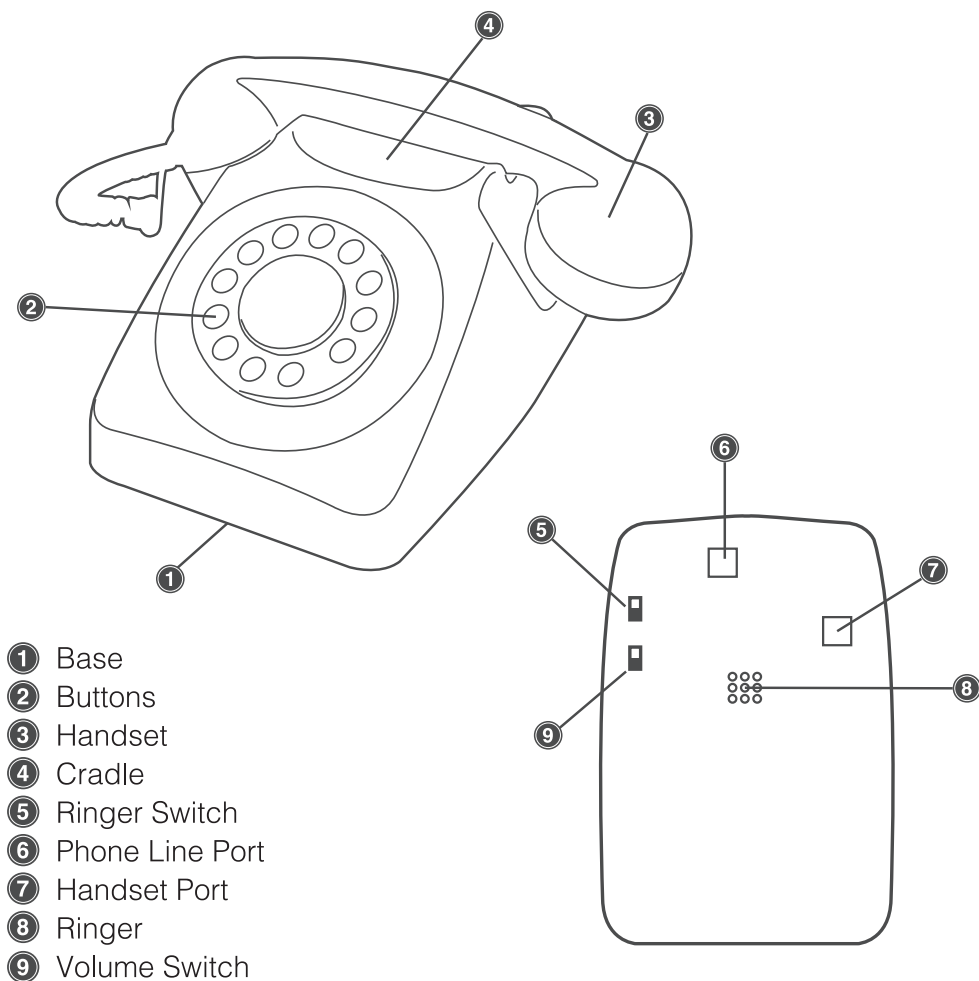

Assembly

- Insert one end of the line cord to the telephone line jack (back of the phone) and the other end to the phone socket.
- Connect the handset to the phone with the handset cord.

Functions

Function	Steps
Making a call	<ul style="list-style-type: none">• Pick up the handset.• When you hear the dialing tone, dial the desired number.• Return the handset to the cradle to end the call.
Refusing a call	Pick up the handset and place it back on the cradle.
Volume switch	Slide the volume switch to increase/decrease the volume.
Ringer switch	Slide the ringer to on/off to enable/disable the ringer.
Redial button	<ul style="list-style-type: none">• Pick up the handset.• Press the redial button and the last number dialed will dial out.

Cleaning and Maintenance

Before cleaning, unplug the phone from phone socket.

- Clean the exterior surface of the phone with a damp cloth and then polish with a soft dry cloth.
- Do not use steel wool pads or harsh/abrasive cleaners.

Guarantee

If any defect should occur due to faulty materials or workmanship contact:
www.PyleUSA.com

You will need to have your receipt of purchase to hand.

The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

PPRETRO25BL - PPRETRO25RD - PPRETRO25BK

Vintage / Classic Style Corded Phone Retro Design Landline Telephone

MODEL	PPRETRO25BL	PPRETRO25RD	PPRETRO25BK
Color	Forest Green	Red	Black

Features:

- Classic Style Home Phone
- Retro Inspired Telephone Design
- Traditional Chime 'Mechanical' Ringer
- Simple Push-Button Number Dial
- Coiled Cord Wired Handset
- Adjustable Ringer Volume Control
- Works with Universal Standard Landlines
- Used for Home, Office, Business Desk Phones

Technical Specifications:

- Ringer Switch: ON / OFF
- U.S. Standard Telephone Jack: RJ-11
- Construction Material: Injection Molded ABS
- Dimensions (L x W x H): 8.5" x 9.1" x 4.5" -inches

PYLE

PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE