


TRIPOD STAND USER MANUAL



PRJTPS37

PYLE[®]
PyleAudio.com

User Manual

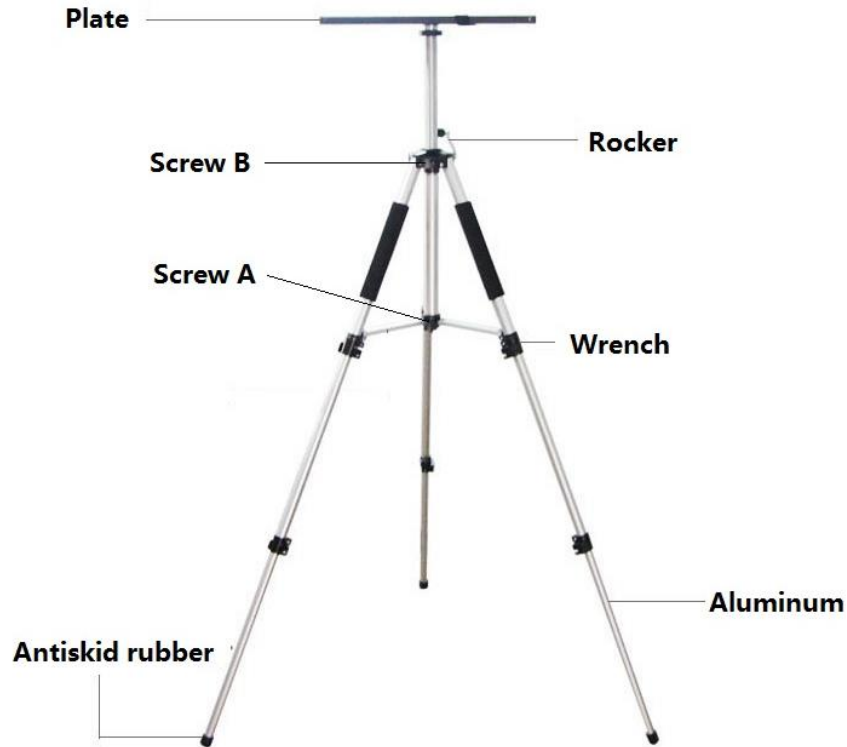

Step One: After removing the tripod from the packaging, unlock the middle wrench in order to separate the legs of the tripod (this will extend the tripod). Tighten the wrench when it is fully extended.

Step Two: Following the same method as in step one, loosen the wrenches on each leg of the tripod. Extend the legs outward as far as they can go (without stressing the tripod) and then tighten the wrenches again.

Step Three: Put the tripod on the ground and test the weight by putting some pressure on the top. None of the tripod feet should move or be loose.

Step Four: Slowly tighten "Screw A"

Step Five: Set the plate onto the tripod stand and fix it to the projector. Raise the plate until it is at the desired height and then tighten "Screw B". Make sure everything is completely secure before placing the projector on to the tripod.