

**PYLE**<sup>®</sup>  
PyleUSA.com

# AUTOMATIC COIN COUNTER

## User Manual



**PRMC620**



# FORWARD

This manual uses for telling you how to operate the machine. Before using it, please read this manual carefully and know about all the options for this machine.

# CONTENTS

<b>I.</b>	<b>APPEARANCES</b> .....	<b>2</b>
<b>II.</b>	<b>DESCRIPTION</b> .....	<b>3</b>
<b>III.</b>	<b>SPECIFICATIONS</b> .....	<b>4</b>
<b>IV.</b>	<b>FUNCTION DEFINITIONS</b> .....	<b>4</b>
<b>V.</b>	<b>FEATURES</b> .....	<b>4</b>
<b>VI.</b>	<b>OPERATION</b> .....	<b>4</b>
<b>VII.</b>	<b>ERROR TREATMENT</b> .....	<b>6</b>

# I. APPEARANCES

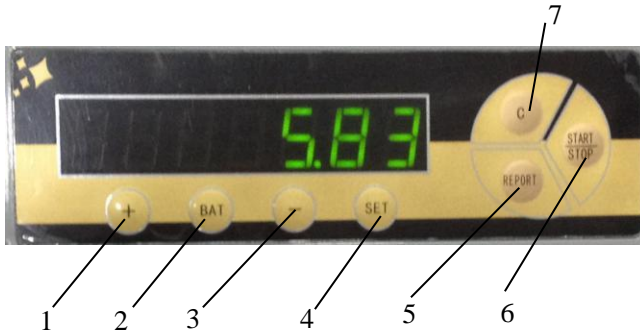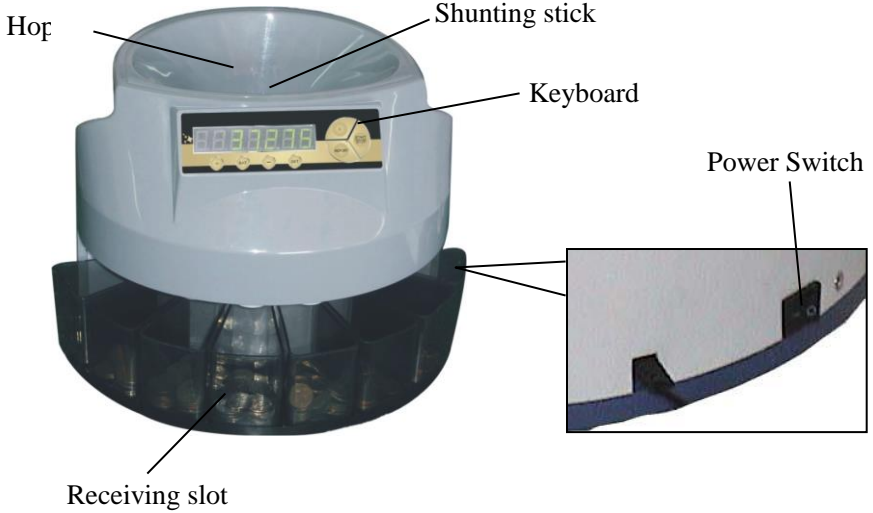

1	“+ ”KEY	5	REPORT KEY
2	BAT KEY	6	START&STOP KEY
3	“ - ” KEY	7	CLEAR KEY
4	SET KEY		

## II. DESCRIPTION

### 1. Hopper

The place for putting the coins

### 2. Shunting stick

Use for rolling the coins and indicate the capacity of the hopper

### 3. Keyboard

Control display. Used to preset optional batch size (up to 4 digits).

### 4. Receiving Slot

The place for receiving the different value coins.

### 5. Power Switch

To control the power source.

### 6. Bat key

Used to set the batch number (up to 4 digits)

### 7. “+ ”KEY

Used to add the number of presetting the batch number

### 8. “ - ” KEY

Used to reduce the number of presetting the batch number

### 9. Set Key

Used to preset the number of the different value coins

### 10. Clear Key

Used to return to display total value menu.

### 11. Report Key

Used to display the individual value of different coins

### 12. Start & Stop Key

Used to start counting or stop counting.

## III. SPECIFICATIONS

Ambient temperature:	0°C ~ 40°C
Ambient Humidity:	30 ~ 80%
Hopper capacity:	300 ~ 500 units
Each receiving slot capacity:	80 ~ 150 units
Batch preset number display:	3 Digits LED
Counting number display:	4 Digits LED
Power Source:	AC220V/50HZ
Power Consumption:	45W (MAX)
Dimensions:	355mm×330mm×266mm
Net weight:	4.5KG
Counting speed:	216units/min

## IV. FUNCTION DEFINITIONS

### 1. SET OPTION

It uses for presetting the number of the different value coins.

### 2. REPORT OPTION

It uses for giving a report about the number of the different value coins after counting.

## V. FEATURES

1. Convenient operation
2. Batch count mode and free count mode

## VI. OPERATION

1. Put the machine on the horizontal and then turn on the power switch.

**2. Select the count mode**

This machine can work in two ways: free count and batch count mode .The count mode can be selected by presetting the batch number.

◆ **Free Count Mode**

In this mode, the machine counts all the coins in the hopper with no stoppage until one of coins receiving slot is full. This mode machine will preset the Batch Number itself when power up.

◆ **Batch Count Mode**

In this mode, the machine counts a batch coins according to the presetting number. This count mode will be set by presetting an expected number on the Batch Number Display. Before counting, please use the “SET” KEY to select which kind of the coins you want to preset and then use “+”,“-“ and “BAT” KEY to preset the expected number.

- 3. Put the coins to the hopper, and the coins should not be piled up higher than the top of the shunting stick one time and then it press the “START&STOP” KEY to start counting.**
- 4. When finish counting, please press the START&STOP KEY to stop the machine, or it will auto stop after about 20 seconds.**
- 5. If you want to get the result of each kind coins, press the “Report” Key and then the machine will display the individual number for the each kind of coins, and then press “C” KEY it will return to display total value of all the coins.**

## VII. ERROR TREATMENT



If the machine isn't put on the **horizontal** or it **shakes** too much when it's working, sometimes a coin will fall in a smaller Coin Channel by error and then it will cause a jam. To settle this error, please push the coins in the jam-packed channel with the finger and then let them down from the gap between two coin channels just as the picture above.

### ***NOTICE:***

**Sometimes if the coins can't fall to the counting plate when the machine is working, please use a stick or others to help them.**

