

PYLE
PyleUSA.com



Questions or Comments?
We are here to help!
Phone: 1.718.535.1800
PyleUSA.com/ContactUs

Visit Our Website



SCAN ME
PyleUSA.com

PYLE
PyleUSA.com



PSBT65A
**Compact & Portable Wireless
BT Streaming PA Speaker**

USER GUIDE

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.
RETAIN THIS OWNER'S MANUAL FOR FUTURE REFERENCE.**

Features:

- Compact, Portable & Powerful PA Speaker
- High-Powered Audio Karaoke Sound System
- Built-in Rechargeable Battery
- Bluetooth Wireless Audio Streaming
- Digital Audio Recording Mode
- Sound System: 6.5" Subwoofer, 3" Treble Speaker
- Rear Panel Button Control Center
- Includes Wireless Microphone
- 1/4" Microphone Input
- Aux (3.5mm) Input
- Connect & Stream Audio from External Devices
- USB Flash + Micro SD Memory Card Readers
- MP3 Digital Audio File Playback
- Audio Configuration: Echo
- LCD Digital Display Screen
- External 12V Power DC Input Connector
- 35mm Speaker Stand Mount
- Perfect for Karaoke, Public Events, Crowd Control, etc.

Bluetooth Wireless Streaming:

- Built-in Bluetooth for Wireless Music Streaming
- Works with All of Your Favorite Devices
(iPhone, Android, Smartphone, iPad, Tablet, Computer, etc.)
- Bluetooth Wireless Network Name: 'PYLE PSBT65A'
- Bluetooth Version: 3.0
- Wireless Range: 33'+ ft.

⚠ WARNING: Cancer and Reproductive Harm - www.P65warnings.ca.gov

What's in the Box:

- PA Speaker
- Handheld Microphone
- Wall Power Adapter

MP3 Audio Recording Ability:

- It's Easy: Mode Button Record Activation
- Record Audio as Streamed through the Speaker System
- Ability to Record Vocals via Microphone
- Records to USB Flash & SD Memory Card
- Audio File Type Created: .mp3
- Easy Transfer to PC & Mac

Technical Specs:

- Power: 600 Watt
- Wireless Frequency Mode: VHF
- Sensitivity: 95dB (+/-2dB)
- Impedance: 4 Ohm
- S/N Ratio: >50dB
- 1/4" TS/Unbalanced with 3.5mm TRS Stereo Jack
- T.H.D.: <1%
- Rechargeable Battery: 4400mAh, 3.7V Lithium
- Battery Operated Microphone: Requires (2) x 'AA' Batteries
- Digital Audio File Compatibility: MP3, WMA, ACC
- Maximum USB/Micro SD Support Size: 32 GB
- Power: 110/220V (9V Power Adapter)
- Speaker Dimensions (L x W x H): 10.6" x 9.0" x 13.0" -inches


Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.



PyleUSA.com/register

IMPORTANT SAFETY INSTRUCTIONS

1. **Read and keep these instructions.**
2. **Heed all warnings.**
3. **Follow all instructions.**
4. Do not use this apparatus near water.
5. Clean only with a dry cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
8. **Do not defeat the safety purpose of the polarized or grounding plug:**
A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. Apparatus should not be exposed to dripping or splashing, and no objects filled with liquids should be placed on the apparatus.
16. Use only with the battery specified by the manufacturer.
17. The power supply cord set is to be the main disconnecting device.

WARNING



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operation and maintenance instructions in the literature accompanying this unit.

FOR OUTDOOR USE:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

UNDER WET CONDITIONS:

Apparatus should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on the apparatus.

SERVICE INSTRUCTIONS:

CAUTION - These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

TIPS TO PROLONG THE LIFE OF RECHARGEABLE BATTERIES

1. Store the portable system with batteries in a fully charged condition. It takes 8-10 hours to fully charge.
2. The battery prefers a partial rather than a full discharge. A partial discharge reduces stress and prolongs battery life.
3. Avoid frequent full discharges because this puts additional strain on the battery.
4. Avoid keeping the battery at full charge and high temperature.
5. Fully charge the system at least once every 3 to 6 months. The battery may not charge if not charged for prolonged periods of time.
6. Do not freeze the battery. Store in a dry, cool place away from heat. Elevated temperatures reduce battery lifespan.
7. Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and the number of charge cycles vary by use and settings.

TROUBLESHOOTING

Users may try to solve common problems by following these guidelines. If the problem persists and cannot be resolved, please contact Customer Service for assistance.

PROBLEM	POSSIBLE CAUSE	SOLUTION
No Sound or Faint Sound From Speaker	Volume turned down	Adjust volume
	Power switch is turned off	Turn power switch on
Power Indicator Not ON	Power switch is turned off	Turn power switch on
	Rechargeable Battery is discharged	Plug into AC outlet to recharge
	Rechargeable Battery is "dead"	Replace battery and plug into AC outlet to recharge
Distorted Sound From Speaker	Volume set too high	Reduce volume
	Excessive wind noise breath "pops"	Use windscreen on wireless & wired microphone
	Input signal too strong	Adjust input signals
Excessive Feedback	Microphone too close or directly in front of the speaker	Move microphone away from the speaker
	Volume set too high	Recharge
	Microphone too far from sound source (requiring the volume to be turned up to compensate)	Speak closer to the microphone or move microphone closer to sound source
Weak, Distorted Sound. Power Indicator Flickers	Batteries level is low	Plug into AC outlet to recharge
Excessive Hum or Noise	Input Cable not shielded	Use shielded cable
Shortened Battery Life	Old or overused battery	Recharge or replace battery
	Battery is not charged for over 3~4 months	Recharge or replace battery
Battery CHARGE Indicator Not Flickering when plugged into AC Outlet	Rechargeable Battery is "dead"	Recharge or replace battery
	Battery is not charged for over 3~4 months	Replace battery

OVERVIEW



- | | |
|---------------------------|-------------------------------|
| 1. Input Mode switch | 9. 3.5 aux input |
| 2. Record | 10. USB and Micro SD input |
| 3. Cycling mode | 11. Microphone volume control |
| 4. Previous song | 12. Echo volume control |
| 5. Pause and play | 13. Music Volume control |
| 6. Next song | 14. Charging and indicator |
| 7. External battery input | 15. Microphone input |
| 8. Power on/off | |