



**PYLE**  
PyleUSA.com



## ***PSBV28HB***

### **35" 2.1 Channel Convertible Soundbar**

Wireless BT Soundbar Speaker with Remote Control

***USER GUIDE***



## TABLE OF CONTENTS

<i>IMPORTANT SAFETY INSTRUCTIONS</i> .....	2
<i>IMPORTANT</i> .....	2
<i>DESCRIPTION OF THE APPLIANCE</i> .....	4
<i>Remote Control Function Keys</i> .....	5
<i>Wireless BT Streaming Connectivity</i> .....	7
<i>AUX CONNECTION (3.5 mm JACK)</i> .....	7
<i>SPECIFICATIONS</i> .....	8

### **Important Safety Instructions**



#### **IMPORTANT**

***Please read these instructions carefully and retain for future reference.***

- To prevent the risk of fire or electric shock, keep this sound bar away from water, rain and moisture.
- To prevent any risk of electric shock, never remove the cover or the rear panel of the device.
- If the appliance breaks down, have it repaired by a professional.  
No part of this device can be repaired by the user.

#### **WARNING!**

**Danger! Device powered on. Do not open. Risk of electric shock! No part of this device can be repaired by the user. Maintenance and repair of this device should be entrusted to a professional.**

As a safety measure, ask the manufacturer or the after-sales service to replace the appliance's electric cable if it is damaged.

The device must be installed in accordance with current regulations.

This sound bar has been specially developed for LED/LCD/Plasma TVs. It should not be installed on CRT (Cathode Ray Tube) televisions to avoid picture interference.



## **Installation**

- Install the device on a flat, rigid and stable surface. The speaker may fall and cause serious injury to a child or adult. A fall can seriously damage the device.
- The sound bar and subwoofer should be kept away from heat sources such as radiators, stoves or other devices that produce heat.
- To prevent the risk of overheating, do not install the sound bar on another device.
- Do not place any object under the device (eg. CDs or magazine).

## **Ventilation Instructions**

- To prevent any risk of overheating, install the appliance in a sufficiently ventilated space.
- Make sure that the ventilation grids are not blocked.
- Do not expose the soundbar to high temperatures, and protect in from water, humidity and dust.
- Protect the device from leaks or splashes.  
Do not place objects containing liquids (eg. vase) on top of the device.
- Do not place objects liable to damage it (eg. objects containing liquids or lighted candles) near the device.
- Do not place open flames (eg lighted candles) on top of the appliance.

## **Power Supply**

- Unplug the sound bar when you are not using it for long periods of time.
- For safety reasons, ask the manufacturer or the after-sales service to replace the appliance's electric cable if it is damaged.
- This appliance must be connected to an electrical network of 110~240V TO Hz.
- The electric cable must remain accessible because you will need to unplug it to switch off the appliance.
- To connect the device to the mains, use only the supplied electric cable.
- Do not operate the device with a battery other than the one already installed.  
This sound bar must be connected to a power outlet of the same voltage as that specified on the device.

**CAUTION:** There is a risk of explosion if the battery is incorrectly installed.  
Do not attempt to replace the battery with another model.

- The batteries (whether the supplied batteries or the battery already installed) should not be exposed to excessive heat (eg sunlight, flames or other heat source).
- If you notice that after fully recharging the battery, its life is reduced by half, carry out the next recharge under supervision.

**Warning:** A damaged battery presents a danger of overheating.

When performing any maintenance or repair, ask the service center/workshop to use the factory authorized spare parts. Replacement with unauthorized parts may result in fire, shock, or other hazards.


Out of respect for the environment, comply with local regulations on battery collection (check with the store where you purchased the device).

Clean only with a soft, damp cloth. Unplug this product from the wall outlet before cleaning.


### ***What's in the Box:***

- Main Speakers
- AC/DC Power Cord
- Remote Control


### ***DESCRIPTION OF THE APPLIANCE***

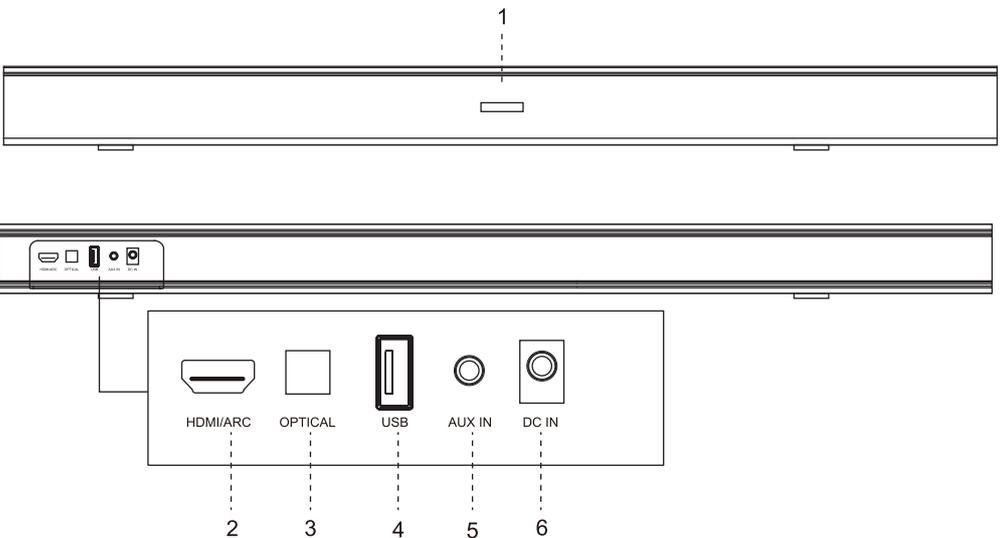

1. LED Indicator
2. HDMI/ARC
3. OPTICAL
4. USB IN
5. AUX IN
6. DC IN
7. PLAY
8. NEXT/V+
9. ON/OFF
10. SOURCE
11. PRV/V-
12. Subwoofer
13. LED pairing indicator
14. AC Power input: 110-240V -50/60Hz

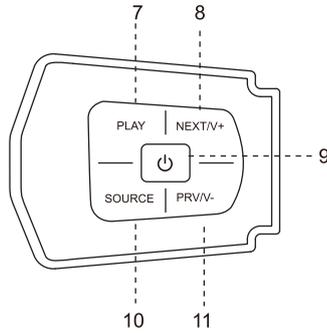


## Subwoofer

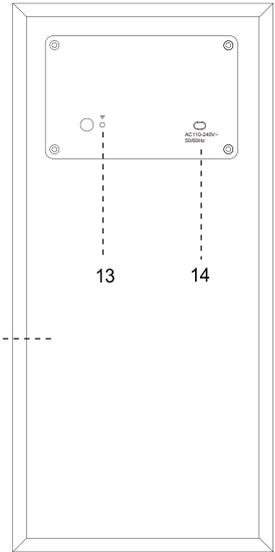

## Remote Control Function Keys

1. POWER
2. MODE
3. VOLUME +
4. PREVIOUS
5. PLAY/PAUSE
6. VOLUME -
7. MUSIC
8. FILM
9. TREB
10. RESET
11. MUTE
12. NEXT
13. NEWS
14. BASS

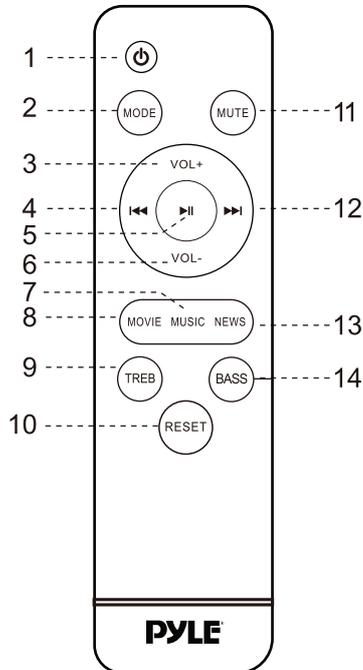

## CONNECTION TO THE TV

### Optical Source

Make sure the soundbar is connected to the TV or other device via optical cable. Press the Power/Standby button on the side of the soundbar to switch to optical mode (or via remote control).

### HDMI source

Make sure the soundbar is connected to the TV or other device via an HDMI cable. Press the Power/Standby button on the side of the soundbar to switch to HDMI mode (or Via the remote control).

## PAIRING MODE OF SUBWOOFER AND SOUNDBAR

### Pairing the subwoofer and sound bar

1. Turn on the subwoofer by connecting it to a power source. The blue LED on the back of the device will start to flash slowly. Press the WPS Auto Pairing button. The subwoofer will enter pairing mode and the blue LED will start blinking rapidly.
2. Turn on the soundbar by connecting it to a power source. Press the on/off button on the sound bar (1). The sound bar goes into "pairing" mode. It will try to connect with the wireless subwoofer.
3. Within 30 seconds, the blue LED on the back of the subwoofer will stop flashing and stay on. This indicates that the subwoofer and the sound bar have been successfully paired.
4. The subwoofer will automatically remember the pairing for future use.

**Warning:** If the subwoofer is on, but the standby mode is activated or the device is disconnected from its power source, after 5 minutes the blue LED indicator will turn solid red. This indicates that the subwoofer is in standby mode. To avoid sound quality problems caused by wireless signal interference, please keep the system at a suitable distance from other 2.4Ghz wireless devices. The maximum connection range is 10 meters.



## **Wireless BT Streaming Connectivity:**

- Built-in BT for Wireless Music Streaming
- Simple and Hassle-Free Pairing
- Works with All of Today's Latest Devices (Smartphones, Tablets, Laptops, computers, etc.)
- Wireless BT Version: 5.0
- Wireless BT Network Name: "PyleUSA"
- Wireless Range: 32.8' ft.

1. Turn ON the sound bar by connecting it to a power source. Press the On/Standby button on the remote control (1). The soundbar's LCD screen will display "BT" and the letters will flash regularly.
2. Activate the Wireless BT function on your device (Smartphone, Tablet etc.) and make sure that the Wireless BT mode is activated. Look in the list of Wireless BT devices: PyleUSA.
3. Once paired, the letters "BT" on the LCD screen will stop flashing and stay on.

## **USB CONNECTION**

1. Turn on the soundbar by plugging it into a power source and pressing the Power/Standby button on the soundbar or remote control (mode).
2. Plug in your USB stick. The unit will automatically play files and start playing music on the sound bar. The LCD screen will display the word USB.
3. You can control playback from the remote control (Volume, tracks, play/pause, stop).

**Note:** Support USB driver up to 32GB and Mp3 file format.  
The USB port does not support charging.

## **AUX CONNECTION (2.5 mm JACK)**

Use the 3.5mm AUX socket to connect a computer, smartphone, tablet, or any other external sound source with a 3mm jack output.

1. Turn on the sound bar by connecting it to a power source. Press the Power/Standby button on the side. Press until the LCD screen displays the letters "AUX".
2. Use a 3.5mm jack cable to connect the soundbar to an audio source.

**Note:** You will need to adjust the device volume and volume independently.



## ***Features:***

- Built-in Class D Stereo Power Amplifier
- (2) 2" Full-range Drivers
- (2) 6.5" Subwoofer Drivers
- Built-in BT Technology
- 3.5mm Auxiliary Input
- Optical Input
- USB Input
- HDMI ARC Input
- Built-in LED lights

## ***Technical Specs:***

- MAX Power: 500W
- RMS Power: 120W
- AC Power Adapter: Input: 100-240V, 50/60Hz; Output: DC 24V
- Impedance: 4 Ohm
- Frequency Response: Bass: 20Hz-150Hz, Soundbar: 120Hz-20kHz
- Total Harmonic Distortion: Bass:  $\geq 0.5\% @ 60W$ , Soundbar:  $\geq 0.5\% @ 60W$
- Supported Media Files: MP3 Audio
- AUX (LINE) Input: 2-Channel Analog Audio, 3.5mm
- Remote Control Battery Operated, Requires (2) x 'AAA' Batteries (not Included)
- Product Dimensions (L x W x H): 36" x 2.6" x 2.6" -inches



### California Prop 65 Warning

**⚠️ WARNING:**

This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov)





# PYLE

PyleUSA.com



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

PYLE

***Questions? Issues?***

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)

