




PSLWPMP50 - PSLWPMP100  
ELECTRONIC WINE  
**AERATOR**

**USER MANUAL**

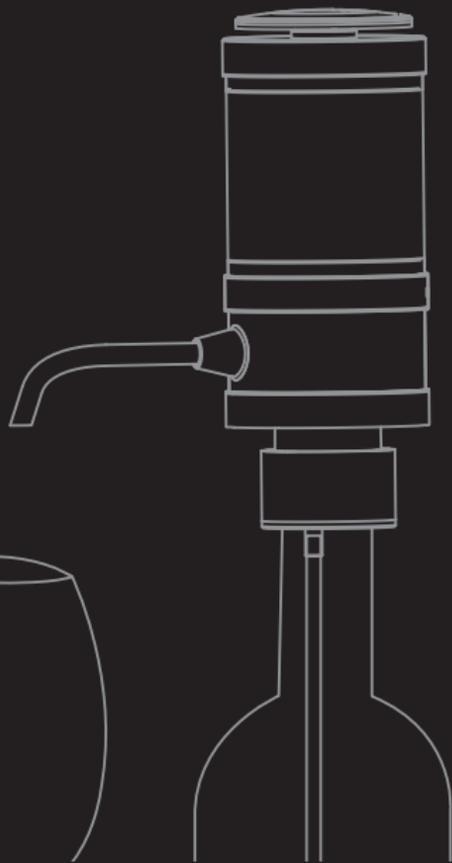

[www.PyleUSA.com](http://www.PyleUSA.com)

## CATALOG

1. Clean Before First Use
2. Brief Introduction
3. User Instructions
4. Clean and Store

English

Don't forget to register with us online to receive your free 1 year warranty!

<http://www.pyleaudio.com/ProductRegistration.aspx>

## CLEAN BEFORE FIRST USE


We suggest that you run clean water through the Aerator before first use. The product is designed to seal on a standard wine bottle mouth opening and will only push water through the tube and spout if used in a sealed state.

1

### SPECIFICATIONS

<b>SIZE</b>	Φ60*162.5 MM ( TUBE AND SPOUT NOT INCLUDED )
<b>WEIGHT</b>	218 G ( BATTERIES NOT INCLUDED )
<b>POWER SOURCE</b>	6 X AAA BATTERY
<b>WATERPROOF</b>	IP44

## BRIEF INTRODUCTION

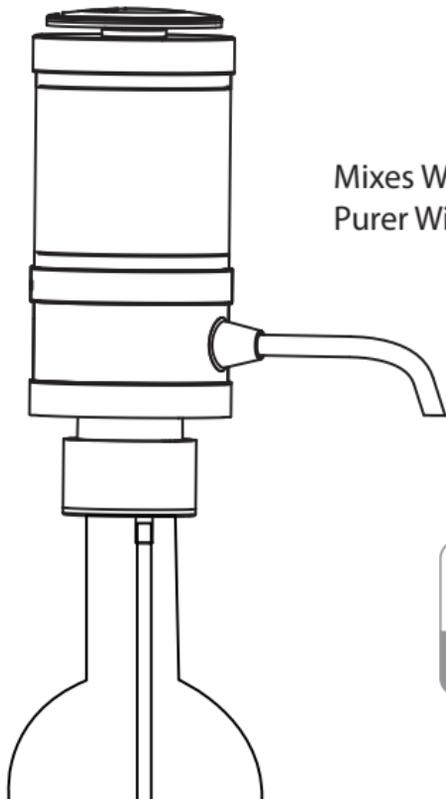

Mixes Wine & Air to Provide a  
Purer Wine Taste & Experience!

6×




Battery Operation




One-touch  
operation


## BRIEF INTRODUCTION

**PART A.**  
(Top Cover)

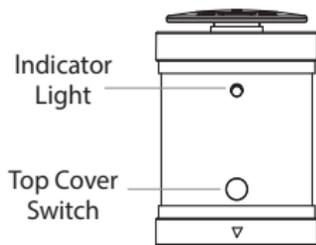

**PART B.**  
(Electronic  
Body Assembly)


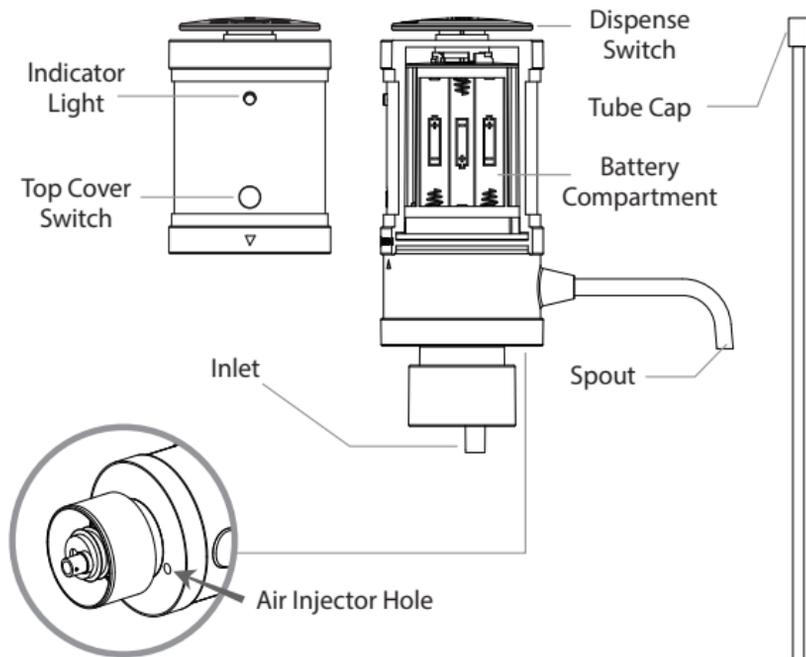


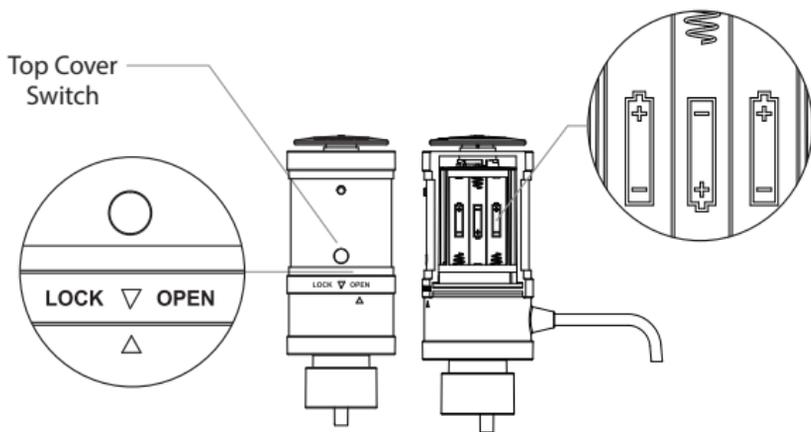



Remove the Top Cover from the Electronic Body Assembly by pressing the Top Cover Switch and turn the cover to the right (counterclockwise) and pull the cover up and off the Electronic Body Assembly to expose the battery compartment

Insert 6 x AAA 1.5V batteries. Follow the polarity instruction in the battery compartment. With the "-" (negative) end of the battery against the spring.

- Open the bottle of wine and insert the tube of Wind Aerator into the bottle and gently press the Aerator down over the bottle mouth
- Place your glass under the spout, and press the Dispense Switch on the top of Electronic Body Assembly to dispense instantly an erated wine directly into your glass. Indicator Light over the spout go red when working.
- Release the dispensing button before your remove the glass from under the spout.

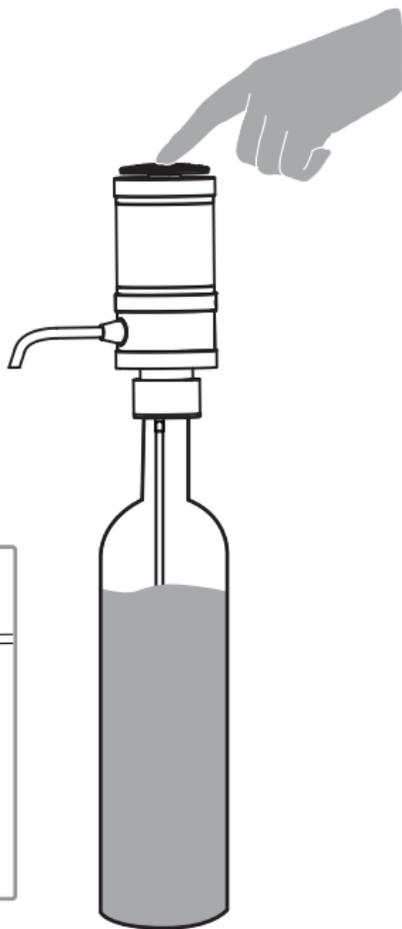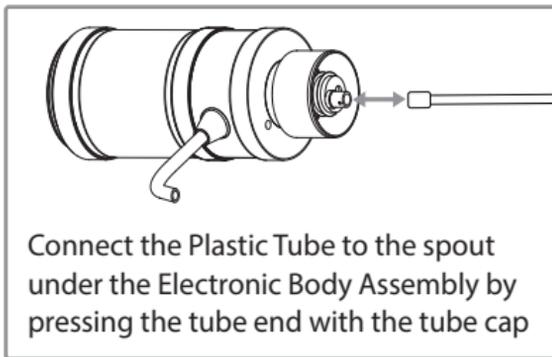

## CAUTIONS

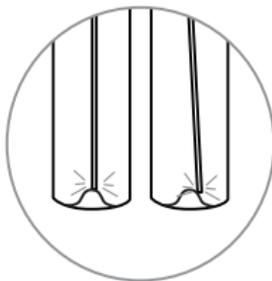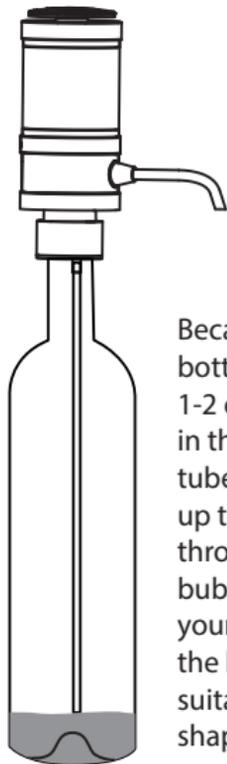



If the activation button is not fully depressed, the dispensing speed of the wine and the aeration amount will be reduced.

Because of the indented base shape of most wine bottles, using a fully dispensed bottle will leave 1-2 ounce of wine in the bottle. As the liquid level in the bottle reaches the bottom of the plastic tube, a frothy mix of air and wine will be pushed up the tube. To prevent this last bit of wine drawn through the Wine Aerator from spraying wine bubbles from the spout, please put the mouth of your glass up close to the spout when you reach the bottom of your bottle. The Plastic Tube is suitable for most of wine bottle, only few special shape of the bottle will not match.

## CLEAN AND STORE

### CLEAN AND STORE

1. After use immediately clean and dry.
2. Two clean Channel, make sure Dispense Switch on Top Cover is locked before cleaning.
3. Do not use detergents to clean the Aerator channel. Add a little lemon juice or vinegar to the rinsing water in the bottle if you want to improve the cleaning effect of flushing with water.
4. Remove the battery if you will not use it for a long time.
5. Wipe clean and dry then store in the original product packaging.
6. This product is not a toy and contains small parts that is not suitable for children under 5 years of age.

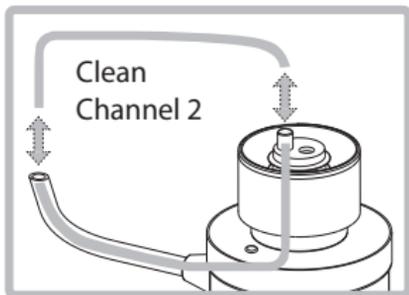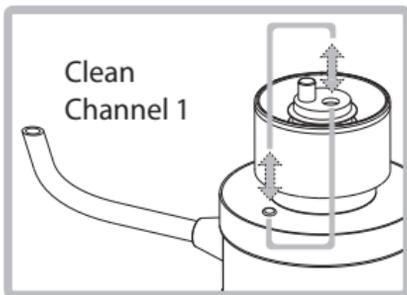

# nutrichef

by **PYLE**



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

**PYLE**