

# Pure Clean\*



## **PSTMH14** Portable Garment Steamer User Manual

**Portable Garment Steamer  
PSTMH14  
Instruction manual**

**IMPORTANT SAFEGUARDS**

**ALWAYS FOLLOW BASIC SAFETY PRECAUTIONS WHEN USING ELECTRICAL PRODUCTS.**

**WARNING**

**To reduce the risk of burns, electrocution, fire or injury read all instructions before using.**

- Check the water level and operating steam button to prevent the risk of contact with hot water emitting from steam vents.
- Use appliance only for its intended use.
- Do not immerse the appliance in water or other liquids to avoid the risk of electric shock.
- Never pull cord to disconnect from outlet. Unplug cord completely from socket before putting away.
- Always disconnect appliance from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate appliance with a damaged cord, or if the appliance has been dropped. Do not disassemble or attempt to repair the appliance to avoid the risk of electric shock.
- Return to Service center for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used.
- Do not leave appliance unattended while in use. Close supervision is necessary for any appliance being used by or near children.
- Burns could occur from touching steamer. Uses carefully and never turn the steamer appliance upside down.
- Never drop or insert any object into any opening or nozzle mouth.
- Do not use outdoors or operate where aerosol products are being used or where oxygen is being administered.
- Surface of this appliance may be a little hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the steam nozzle directly on the surface or on the appliance power cord while it is hot or plugged in.
- Unplug this appliance before filling or emptying. Do not fill water surpass the maximal level.
- Do not operate another high wattage appliance on the same circuit to prevent circuit overload
- Do not use an extension cord to operate the appliance. If an extension cord is necessary, a 15 ampere rated cord must be used to avoid circuit overload. Cords rated for less amperage may overheat. Ensure cord is properly aligned and away from passerby.

## SAVE THESE INSTRUCTIONS

### PERFECT STEAM FEATURES:

- Best choice for traveling.
- Safe to use on all kinds of fabrics
- Quick heat-up feature emits steamer within 2 minutes.
- Easy-fill water tank, provide 6-8 minutes continuous steamer.
- Automatically reset power 0W when it is short of water

### Instructions for Use

1. Unscrew the nozzle head. Fill the tank with water to the desired level, never surpass the maximum level. When you finish filling, lock the head back on.

**NOTE:** Only fill the tank with cold water, DO NOT use hot water. Distill water is recommended.

2. Turn the ON/OFF switch to the ON position. The switch light indicates the steamer is on. After 2 minutes steam will come out from nozzle.

3. This unit has a reset function, when the unit runs out of water it will reset power to 0W for safety. The indicator light is still on. If you wish to continue your steaming session:

- Turn ON/OFF switch to "OFF" position, indicator light is off.
- Remove and refill water tank by following step 1 under instructions for use.
- Turn ON/OFF switch to "ON" position

4. When you're done with your steaming session place the ON/OFF switch in the "OFF" position and remove the plug from the outlet.

**Note:** Never turn the unit upside down, it should not surpass 45° especially when the unit is on working.

### Cleaning and Maintenance

- Unscrew the head and allow the steamer to cool for at least 10 minutes.
- Empty any excess water from the water tank and allow it to air dry before replacing the head and setting it back in the unit.

### Storage

- Store in cool, dry place

**Note:** *DO NOT wrap the power cord around the unit. Put away the cord loosely.*

## Removing Mineral Buildup:

One common problem with the steamer is mineral buildup caused by the high mineral content in municipal water. Mineral residue inside of the internal heater can cause intermittent steaming or in severe cases no steaming at all.

The best way to avoid this is to use distilled water in the unit. The procedure below can be used to clear mineral buildup. If you are unable to use distilled water we recommend you use this procedure monthly to help avoid mineral buildup.

- Turn the unit off and unplug the power cord
- Make a mixture of 50% vinegar and 50% water. In most cases 1 cup of this mixture will be sufficient.
- Slowly pour the water-vinegar mixture into the reservoir. And pour it out three minutes later.
- If the procedure above does return the unit to normal operation, the unit may need servicing.

## Trouble shooting the steamer

PROBLEM	CAUSE	SOLUTION
Steamer fails to heat	Steamer not plugged in. Auto shut off engaged	Plug in to electrical outlet or fill the reservoir with water.
No steam	Water level is low	Turn ON/OFF. Switch OFF and refill water container
Water sprays from nozzle	Fill too much water over the maximum level	Pour some water out until the water level is under the maximum level
Nozzle gurgles	Condensation near the nozzle(Normal phenomenon)	Hold the steamer vertically and shake the body to allow water to drain back into reservoir
Steamer is intermitted	Sediment build-up in container	Follow the procedure for remove mineral build-up

**NOTE: Water mineral content and conditions will vary in different areas. To insure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water container.**



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

**PYLE**