

# SereneLife



*PSTMH17*

**Compact Handheld Fabric Steamer**

Wrinkle Remover with Self-Regulated Temperature Control

***User Manual***

## IMPORTANT SAFETY INSTRUCTIONS



### **WARNING:**

To reduce risk of fire, electrical shock or injury, the following basic safety precautions should always be followed when using an electrical appliance.



### **WARNING:**

To reduce the risk of electrical shock, this appliance uses a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not correctly fit in the outlet, contact a licensed electrician to install a proper outlet. DO NOT attempt to modify the plug or defeat this safety feature.

**Any appliance is electrically live even when switched off.**

**To reduce risk of electrical shock:**

1. Always unplug power cord immediately after using.
2. Do not place or store unit where it can fall or be pulled into a sink or tub.
3. Do not place in, or drop into water or other liquid.
4. If unit falls into water, immediately unplug power cord.

Do not reach into the water

**This instruction manual contains important information about safety, usage, and disposal. Use the product as described and keep this manual for future reference.**

### **Safety Instructions**

- This steamer should not be used by children. Only allow dependents to use the steamer when under proper supervision.
- Never leave the steamer unattended when it is hot, switched on, or connected to power.
- Use carefully and never turn this unit upside down as there may be hot water left in the reservoir which has a risk to burn yourself.
- To reduce the risk of contact with hot water emitting from steam vents, check the water level and operating steam button if **ON** or **OFF** before every use.
- Use appliance only for its intended purpose.
- To reduce the risk of electrical shock, do not immerse unit in water or other liquids.

- Never pull out the cord to disconnect from the outlet, instead, grasp the plug and pull to disconnect completely before putting it away. Place the cord loosely when storing.
- After use, unplug steamer and empty any remaining water from the tank to avoid leakage.
- Do not operate unit with a damaged power cord or if the unit has been dropped or damaged. To avoid risk of electrical shock, do not disassemble unit; contact customer service for examination and repair. Incorrect reassembly can cause a risk of electrical shock when unit is used.
- Do not allow power cord to touch hot surfaces during use. Loosely bundle cord when storing. Always allow Compact Fabric Steamer to cool (10-15 minutes for complete cooling) and empty water tank before storing.

### **DANGER**

- **DO NOT** disassemble or attempt to repair the **Compact Handheld Fabric Steamer**. Return to qualified service center for examination and repair. Incorrect reassembly or repair can cause a risk of electrical shock or injury to persons when the Steamer is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave appliance unattended while connected.
- Burns could occur from touching hot parts, hot water or steam. Use care when you empty a steam appliance. Do not turn unit upside down- there may be hot water in reservoir.
- Never drop or insert any object into the steam vents of the nozzle.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Surfaces of this appliance may be hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in.
- Unplug this appliance before filling or emptying. Do not overfill.
- To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- Do not use an extension cord to operate the appliance. If an extension cord is absolutely necessary, then a 15 amp rated extension cord should be used. Be careful when arranging the cord so it cannot be pulled or tripped over.

## APPLIANCE DESCRIPTION



### USING YOUR COMPACT HANDHELD FABRIC STEAMER

- Unscrew the nozzle head. Fill the tank with water to the desired level. Be careful not to overfill. When you finish filling, lock the head back on.



**NOTE:** Only fill the tank with cold water, **DO NOT** use hot water. Distilled water is recommended.

- Turn the **ON/OFF** Switch to the "**ON**" position. The switch light indicates the steamer is **ON**. Steam will emit from the nozzle in 2 minutes .
- This unit has a reset function, when the unit runs out of water, it will reset to power **OW** automatically for safety, indicator light is still **ON**.

**If you wish to continue your ironing:**

- Turn **ON/OFF** switch to **OFF** position, indicator light will be **OFF**.
  - Remove and refill water tank by repeating steps 1 above.
  - Turn **ON/OFF** switch to **ON** position
- Once Pressing tasks are complete, immediately set **ON/OFF** Switch to "**OFF**" position. Immediately unplug power cord from electrical outlet.

**NOTE:** Never turn the unit upside down, never tilt this unit over than 45° especially when the steamer is **ON**.

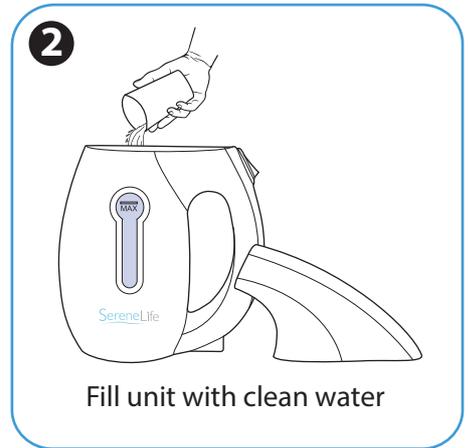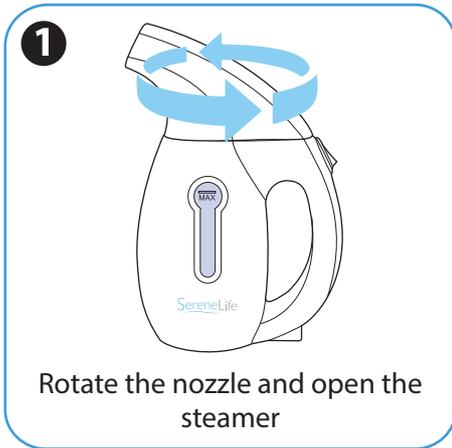


5




**DO NOT** use it as a facial steamer!  
**NEVER** use the steamer on clothes that are being worn.  
Hang garment from a clean rust-free hanger.

6

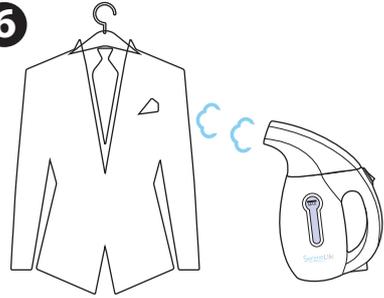

Direct Steam Nozzle towards bottom of garment. Steam will rise along inside and outside of material, removing wrinkles. Slowly slide Steam Nozzle upward from bottom to top of garment.

7

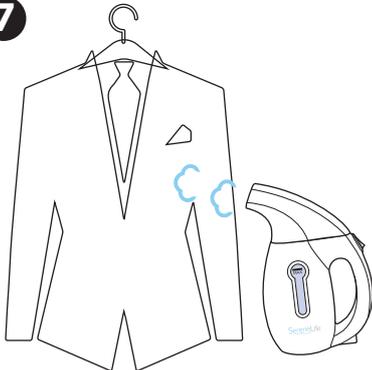

Direct Steam Nozzle away from garment and smooth material with your free hand.

8



Repeat as necessary until garment is fresh and wrinkle-free.

**CAUTION:**

**Always be sure that Steam Nozzle is pointed in a safe direction (away from yourself, other people, pets and plants) when steaming.**

## **MAINTENANCE AND CARE**

1. Turn the unit **OFF** and unplug the power cord. Unscrew the head and wait for at least 10 minutes for cooling.
2. Drain any water remaining in the water tank and wait it air to dry before replacing the head and install it back to the unit.

## **STORAGE**

**Store Compact Handheld Fabric Steamer in a cool, dry location.**

### **NOTE:**

**DO NOT wrap the power cord around the unit, place it loosely.**

## **REMOVING MINERAL BUILDUP**

One common problem in clothes steamer is the mineral buildup caused by the high percent of mineral in the water as the geologic problem. Mineral residue inside of the internal heater can cause intermittent steaming or no steaming at all in some case.

The best way to avoid this problem is to use de-mineralized or distilled water in the unit. The procedure below can be used to clear mineral buildup. If you are unable to use de-mineralized water or distilled water, we recommend you use this procedure monthly to avoid mineral buildup.

**IMPORTANT: Unit should remain unplugged during cleaning procedure.**

1. Turn the unit off and unplug the power plug.
2. Make a mixture of 50% vinegar and 50% water. In most cases, 1 cup of this mixture will be sufficient.
3. Slowly pour the water-vinegar mixture into the reservoir, wait 3 minutes then pour it out.
4. If the procedure above does not return the unit to a normal operation, the unit may need to be checked by the product supplier.

### **Note:**

**MINERAL-BUILDUP WILL CAUSE SPITTING. WE SUGGEST YOU TO CLEAN THE STEAMER REGULARLY TO AVOID SPITTING OR WATER LEAK.**

## TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The steamer does not heat up	No power or water	Plug it into the power outlet or fill the reservoir with water
No steam	Insufficient water	Turn ON/OFF switch to OFF and refill water container
Water sprays from nozzle	Too much water over the maximum line	Pour some water out until the water level is under the maximum line
Nozzle gurgles	Water drop near the nozzle (Normal phenomenon)	Hold the steamer vertically and shake the body gently to allow water to drain back into reservoir
Intermittent steam	Sediment build-up in the container	Follow the procedure in removing mineral build-up

**NOTE:** Water mineral content and conditions may vary in different areas. To ensure long life and continued steaming ability, never store it without cleaning and removing remaining water from the reservoir and water container when not in use.

## **FEATURES:**

- Quick, Convenient & Safe Wrinkle Reduction
- Fully-Automatic Continuous Steam Production
- Self-Regulated Temperature Control
- Kills Germs & Removes Odd Smell of Fabric and Toys
- Cleans and Refreshes Window Curtains
- Steam Clean Upholstery And Other Furniture Fabric
- Hassle-Free Operation & Simple Plug-in Design
- Anti-Wrinkle: Freshens Garments and Removes Wrinkles & Creases
- Uses Tap Water - No Chemicals or Cleaning Solutions Required
- Lightweight and an Ideal travel Steamer
- Easy and Safe to Use, Removes Wrinkles Easily for Over 10 mins.
- Used for Clothing, Fabric, Linens, Furniture and More


## **WHAT'S IN THE BOX:**

- Garment Steamer
- Power Cord

## **TECHNICAL SPECS:**

- High-Powered Heating Element: 800 Watt
- Reaches Max. Temp of 212 °F
- Steam Output Time: 90 seconds
- Provides up to 9-11 Minutes of Steam on Full Tank
- Water Tank Capacity: 180mL
- Power Cord Length: 8 ft.
- Power: 120V, 50/60Hz
- Dimensions (L x W x H): 5.91" x 3.35" x 8.66" -inches



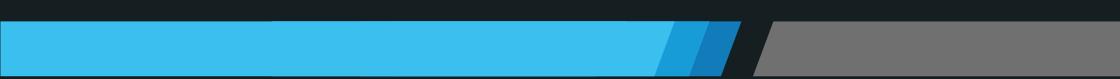

# SereneLife

**Questions? Issues?**

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)

