

- For safety, please use the smaller size earplug than your normal size earplug when doing outdoor sport and make sure you can hear the outside sounds:

L size ➡ M size

M size ➡ S size

- For safety, please do not use the headset when you are driving a car, a motorcycle, ship, a bike, or walking on the street. Please follow the local laws and regulations.

## About PSPWP6BK



Swimming earbuds

 


Land use earbuds

Power ON/OFF  
Play/Pause

Vol-


Vol+

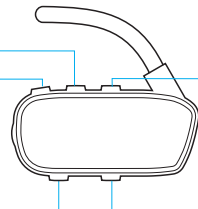

Previous Next

## Wearing

 
Please put swimming goggles against the connecting rod at the point near ear.

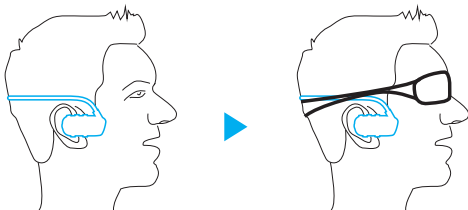

**Note:** When swimming, please do use the swimming waterproof earbuds. Please choose earbuds according to your wearing comfort.


## Charging

 1. Please connect the player to computer via the USB clip.

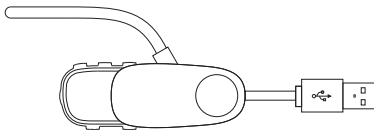

2. Be sure to dry the water on the main body before connecting a computer or charging. Clean the metallic contacts regularly to prevent the poor contact when for battery charging and data transferring.

 
Suggest cleaning by  
eraser or toothbrush

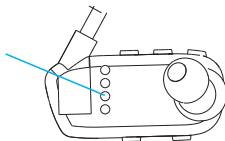

## Blow Off The Water Film



 The volume may come down when swimming, it's because it forms a thin water film on the waterproof net or speaker film.



Take off the waterproof earbuds, blow off the water film.



Squeeze the earbuds to let the water come out.

- Put the player in dry place for more than 10 hours air drying, the volume will be normal.

## Precautions

- Do not use the player in an extreme environment. the player may not work on temperature over 104°F or below 23°F or in very dry environment.
- Do not impact the player with hard object. otherwise it would cause surface scratched, battery falling or other firmware damage
- Do not disconnect the player when it is formatting, uploading, downloading otherwise it would cause "program error" or "computer dis-recognition"
- Do not repair, dismantle or rebuild the player without permission from the manufacturer.
- Reduce the volume to avoid hearing damage.
- We are not responsible for any personal data losses or other indirect losses cause by improper operation, software, hardware, product maintenance or other accident.

## Listen to Music



- **Power ON/OFF**  
Click and hold 4 seconds

- **Play/Pause**  
Click once

- **Volume up**  
Click once
- **Fast Volume up**  
Long press

- **Volume down**  
Click once
- **Fast Volume down**  
Long press

## Operating

- **Next**  
Click once
- **Fast forward**  
Long press
- **Previous**  
Click once
- **Fast backward**  
Long press



### Shuffle Play Mode ON:

When the player is on, press ►||, then press ►►.

### Shuffle Play Mode OFF:

When in Shuffle Play Mode. press ►|| then press ◀◀ the player will be in normal play mode.

**Note:** MP3 player keys are multi-functional. The pressing modes contain Long Press and Press. Different operating modes stand for different functions.



## Troubleshooting

No response after pressing;  
Stop automatically while playing;  
System power off automatically when starting.

- Please charge.

No sound from the player.

- Make sure the volume is not in "0" level.
- Damaged Mp3 files may cause some noise and failure in playing music.
- Please make sure the music file is complete.

Unable to download music.

- Check if the USB line is broken or not connected well.
- Check if the driver is installed appropriately.
- Check if there is blank memories inside.

Can not be read by computer

- Check if the USB wire is broken or not connected well.
- Check if the operation is incorrect.
- Check if the driver software is installed well.

 
Failure to play the compressed MP3

- Damaged Mp3 files may cause some noise and failure in playing music. Please make sure the file is completed.

## Product Specification

- IP Rating: IPX8
- Dimensions: 140mm x 43mm x 110mm
- Weight: 27g
- USB Interface: USB 2.0 (High speed)
- Battery: Lithium battery
- Memory: 8GB
- Music format: MP3, WMA
- File Format: FAT16, FAT32
- Mp3 bite rate: 8Kbps~320Kbps
- Earphone output power: 5mW+5mW
- Frequency response: 20Hz-20KHz
- S/N: >70dB
- Distortion: <0.3%
- Operating environment: 41°F—104°F
- Operating time: 10 hours

## Packing List

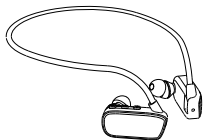

MP3 Player



USB Clip



Swimming Earbuds



Manual



Land Use Earbuds

# flex<tr>reme



## PSWP14BK

Waterproof MP3 Player with Headphones

## USER MANUAL

**PYLE**  
PyleUSA.com