

Visit Our Website



SCAN ME

PyleUSA.com

PYLE®

PyleUSA.com



PSWP8BK

Waterproof MP3 Music Player Headphones

USER GUIDE

FEATURES:

- Waterproof Marine Grade Construction
- Convenient & Detachable MP3 Control Unit
- Instantly Transfers Music Files and Charges via USB
- Built-in 8GB Memory & FM Radio
- Ideal for Active & Water Sports
- Universal Fit for All Head Shapes
- Easy-to-Use Push Button Controls
- Built-in Rechargeable Battery
- One Size Fits All Headband Style
- USB Charging Port
- LED Indicator Lights
- Compatible with Mac & PC

WHAT'S IN THE BOX

- MP3 Player Headphones
- (3) Pairs of Changeable Earbud Tips for Land Use
- (2) Pairs of Changeable Earbud Tips for Water Use
- USB Extension Cable

California Prop 65 Warning

WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

TECHNICAL SPECIFICATIONS

- Waterproof Rating: IPX8 Marine Grade
- Safe for Use in Water up to 10 Feet Deep
- Supported Audio Formats: MP3, WMA, WAV & More
- Charging Time: Approximately 2.5 Hours
- Battery Life: Up to 6 Hours Playback
- USB Interface: 2.0
- Dimensions (W x H): 4.9" x 1.0"
- Weight: 1.1 oz (including battery and headphones)
- Operating Temperature: 32°F – 176°F
- Storage Temperature: 32°F – 176°F
- System Compatibility: Windows ME / 2000 / XP / Vista / 7, Mac OS 9.X or higher


BEFORE YOU BEGIN

Important: Please read before operating

To remove the MP3 unit from the frame:

1. Gently squeeze the frame with one hand.
2. With your other hand, slide the MP3 player out.

⚠ Do NOT remove it the way shown in Picture —this incorrect method may cause permanent damage and void your warranty.

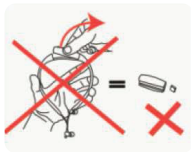

PROPER HANDLING INSTRUCTIONS

Correct: Hold both ends of the headphone frame when putting on or removing.

Incorrect: Do NOT pull the headphone cables. This may break the internal copper wires, causing no sound. Damage due to cable pulling is not covered under warranty.

SAFETY GUIDE

1. Use only as described in this manual. Avoid using during activities that require full attention.
2. Do not disassemble or modify. Doing so voids the warranty.
3. Avoid dropping or subjecting to excessive shock.
4. Keep away from heat sources and extreme temperatures.
5. Avoid exposure to strong magnetic fields.
6. Do NOT use while driving, biking, or walking in traffic.
Obey local safety laws.
7. The manufacturer is not responsible for data loss.
8. Avoid listening at high volumes to prevent hearing damage. If you can't hear someone speaking 3 feet away, your volume is too loud.
9. Always insert and remove the USB connector and MP3 unit carefully.
10. Never connect to a computer while wet. This may cause damage or electric shock.
11. Keep USB port clean and dry.

12. Clean with a soft, dry cloth only.
13. Keep out of reach of children under 6—choking hazard.
14. Never use solvents or harsh chemicals to clean the unit.

USE THE CORRECT EARBUDS

This device comes with five sets of earbuds:

- **Land use:** Small, Medium, and Large
- **Water sport use:** Small and Medium

INSTALLATION

To ensure a watertight fit:

- Push the earbud all the way over the TWO ridges (A) and (B) until reaching position C.
- Always insert snugly before entering the water.
- For best fit, gently pull your ear back while inserting.

If water enters and affects sound quality, allow earphones to dry completely for full restoration.

CONTROLS OVERVIEW

Power / Play / Pause

- **Power ON:** Press and hold for 5 seconds. Blue LED turns on.
- **Power OFF:** Press and hold for 5 seconds while on.
- **Play/Pause:** Press once to toggle.

PROPER HANDLING INSTRUCTIONS

Correct: Hold both ends of the headphone frame when putting on or removing.

Incorrect: Do NOT pull the headphone cables. This may break the internal copper wires, causing no sound. Damage due to cable pulling is not covered under warranty.

SAFETY GUIDE

1. Use only as described in this manual. Avoid using during activities that require full attention.
2. Do not disassemble or modify. Doing so voids the warranty.
3. Avoid dropping or subjecting to excessive shock.
4. Keep away from heat sources and extreme temperatures.
5. Avoid exposure to strong magnetic fields.
6. Do NOT use while driving, biking, or walking in traffic.
Obey local safety laws.
7. The manufacturer is not responsible for data loss.
8. Avoid listening at high volumes to prevent hearing damage. If you can't hear someone speaking 3 feet away, your volume is too loud.
9. Always insert and remove the USB connector and MP3 unit carefully.
10. Never connect to a computer while wet. This may cause damage or electric shock.
11. Keep USB port clean and dry.

12. Clean with a soft, dry cloth only.
13. Keep out of reach of children under 6—choking hazard.
14. Never use solvents or harsh chemicals to clean the unit.

USE THE CORRECT EARBUDS

This device comes with five sets of earbuds:

- Land use: Small, Medium, and Large
- Water sport use: Small and Medium

INSTALLATION

To ensure a watertight fit:

- Push the earbud all the way over the TWO ridges.
- Always insert snugly before entering the water.
- For best fit, gently pull your ear back while inserting.

If water enters and affects sound quality, allow earphones to dry completely for full restoration.

CONTROLS OVERVIEW

Power / Play / Pause

- Power ON: Press and hold for 5 seconds. Blue LED turns on.
- Power OFF: Press and hold for 5 seconds while on.
- Play/Pause: Press once to toggle.

Volume +

- Tap to increase volume.
- Press and hold to switch to FM mode (if available).

Volume -

- Tap to decrease volume.
- While in MP3 mode: Press to switch between shuffle and ordered play.
- While in FM mode: Press and hold to auto-scan channels.

Forward / Backward

- **Forward:** Skip to next track or FM station.
- **Backward:** Go to previous track or FM station.

Reset

- Use a pen point or similar tool to press reset.
Designed to prevent accidental presses.

LED Indicator Lights

- **Power ON:** Blue light
- **MP3 Playback:** Blinking blue
- **FM Mode:** Blinking yellow
- **Charging:** Red flashing
- **Fully Charged:** Solid blue
- **Low Battery:** Solid red

OPERATING INSTRUCTIONS

STEP 1: Remove MP3 Player from Frame

Gently bend the earframe and slide the MP3 player out in the direction of the green arrow.

STEP 2: Charging

1. Plug the MP3 player into a USB port (make sure it's facing the correct direction).
2. Or use the included USB extension cable.
3. Charging starts automatically. A full charge takes 2–3 hours.

Red LED blinks while charging, blue LED stays solid when full.

STEP 3: Download Music

1. Connect the MP3 player to your computer using the USB cable.
2. Open "My Computer" or "Finder" and locate the "MP3 Player" drive.
3. Copy music files (MP3, WMA, WAV, etc.) into the drive.

 DO NOT disconnect the USB cable during file transfer.

Always eject properly.

MAINTENANCE & STORAGE

- Clean with a soft, lint-free cloth.
- Store in a cool, dry place.
- Never use chemicals, solvents, or alcohol-based cleaners.
- Do not expose to direct sunlight for long periods.
- Allow to dry thoroughly after water exposure before storing or charging.
- Do not tightly wrap cables to avoid internal wire breakage.

TROUBLESHOOTING

- **If the MP3 player does not power on**, make sure it is fully charged. Then, press and hold the power button for 5 seconds to turn it on.
- **If there is no sound**, check the cable connections, ensure the volume is turned up, and try using the reset function.
- **If water has entered the earbuds and the sound quality is affected**, allow the earphones to dry completely before using them again.
- **If the MP3 player is not recognized by your computer**, ensure the USB plug is inserted in the correct direction and try using a different USB port.
- **If the charging indicator light does not turn on**, inspect the USB cable and port to ensure they are functioning properly and securely connected.



REGISTER PRODUCT

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.

Start Here



Model Number:
PSWP8BK

PyleUSA.com/pages/register

PYLE[®]

PyleUSA.com



Questions or Comments?

We are here to help!

Phone: 1.718.535.1800

PyleUSA.com/ContactUs