



PyleUSA.com



Questions or Comments? We are here to help! Phone: 1.718.535.1800 PyleUSA.com/ContactUs



PT390BTU Digital Home Theater Bluetooth Stereo Receiver



READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT. RETAIN THIS OWNER'S MANUAL FOR FUTURE REFERENCE.

System Features:

- 4-Channel Receiver System
- Powers Up to 4 Speakers
- Bluetooth Wireless Streaming Ability
- AM/FM Radio with Digital LCD Display
- USB Flash & SD Memory Card Readers
- MP3 Digital Audio File Compatibility
- Aux (3.5mm) Input Connector Jack
- (4) Pair Speaker Terminal Binding Posts
- (2) 1/4" Microphone Inputs
- (2) Pair RCA (L/R) Audio Input Connector Jacks
- (2) Pair RCA (L/R) Audio Output Connector Jacks
- Connects to TV, Home Theaters, External Speaker Systems
- Radio Station Auto Scan, Tuning Control
- Built-in Ventilation Cooling Fan
- 50 Radio Station Memory Pre-Sets
- Main Volume/Balance/Treble/Bass Controls
- Microphone Volume/Bass/Treble/Echo Controls
- Includes Antennas, Audio Cable, Remote Control

Bluetooth Connectivity:

- Instantly Receives Wireless Music Streaming
- Works with all of Your Favorite Devices (iPhone, Android, Smartphone, iPad, Tablet, etc.)
- Bluetooth Version: 3.0

What's in the Box:

- Home Theater Receiver
- Remote Control
- AM/FM Antennas
- Power Cable

California Prop 65 Warning

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

Technical Specs:

- Power Output: 300 Watt MAX
- Impedance: 8 Ohm
- T.H.D.: <1%
- S/N Ratio: >76dB
- Input Lvl. Impedance: 350mV/47k
- Tone Characteristics: +/-12dB
- Input Sensitivity: 300mV/33k
- USB/SD can play what file types: MP3, WMA, WAV
- Maximum USB/SD Card support size: 8GB
- Frequency Response: 20Hz-20kHz
- Battery Operated Remote, Requires (2) x 'AAA', Not Included
- Power Supply: 110/220V Switchable
- Dimensions (L x W x H): 16.9" x 12.2" x 4.7" -inches

FCC INFORMATION

WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

Please take a few minute to read the instruction manual and operating instructions. This will tell you how to use the receiver system. Here, you will find unit features and operation instructions to ensure trouble free use and installation. Please retain these operating instructions for future reference.



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK. DON'T EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

THIS DEVISE IS INTENDED FOR CONTINUOUS OPERATION!

*Designs and specifications are subject to change without notice. *Caution: Please use 4 Ω speakers.

Before Use

1. Ensure that the power line voltage is AC 110V/220V

If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

2. Protect the Power Cord

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



3. Do not block any ventilation openings.



4. Keep the unit free from moisture, water, and dust. Do not place objects filled with liquids, such as vases, on the unit.



5. Operating Environment

Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked)



6. **Install this sound system in a well ventilated, cool, dry, clean place.** Do not install this unit in a poorly ventilated area, or in locations exposed to

high humidity or direct sunlight (or strong artificial light)

7. Avoid metals dropping in the unit

Avoid metals dropping into the unit, like needle, hairpins, smaller metal objects



8. **DO NOT OPEN THE UNIT** as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the unit, contact your dealer or service company.



9. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry or slightly damp cloth.



OPERATION

- 1. **POWER:** Use this button to turn the speakers ON or OFF. **Caution:** Make sure all connections are secure and the main volume is set to the minimum level before turning ON the unit.
- 2. **INPUT SELECT:** Select the input source: CD/DVD, USB, Radio, or Wireless BT Streaming.
- 3. **MICROPHONE VOLUME (MIC VOL):** Adjust the "MIC VOL" knob to increase or decrease the karaoke microphone volume.
- 4. ECHO: Adjust the "ECHO" knob to achieve a desirable echo effect.
- 5. **TREBLE/BASS:** Turn the TREBLE/BASS knob to adjust the treble or bass tone of the master channel.
- 6. **MASTER VOLUME:** Turn the MASTER VOLUME knob to the right to increase the volume, or to the left to decrease it.

How to Replace the Preset Radio Stations

Use the remote control to set the radio stations.

NOTE: The preset radio stations cannot be deleted, but they can be replaced.

Operation Steps:

- 1. Press TUNER MODE on the remote control.
- 2. Press AM/FM and select FM.
- 3. Press PRE/NEXT to select the stations you do not want to keep.
- 4. Press TUNING to choose the radio stations you want to save.
- 5. Press **MEMORY** to save the new stations.

By following these steps, you can replace the preset radio stations.


Wireless BT Playback

- 1. Make sure the unit is powered ON.
- 2. Set the input mode to BT.
- 3. Use your smartphone or other compatible Wireless BT-enabled device to search for available Wireless BT networks. The PT390BTU will appear in the network list as '**PT390BTU**'.
- 4. **Connect and pair:** Connecting does not require a password. If prompted, enter '0000' (four zeros).

Note:

- 1. In Wireless BT Streaming mode, control the volume using both your unit and your Wireless BT device.
- 2. The Wireless BT Streaming range may be affected by electronic interference or obstacles between your unit and the Wireless BT device.


CONTROLS & FUNCTIONS FRONT PANEL

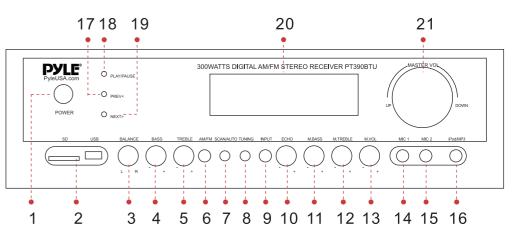

- 1. Power **ON/OFF** key
- 2. USB/SD signal input
- 3. Music balance knob
- 4. Music bass knob
- 5. Music treble knob
- 6. Tuner **AM/FM** conversion button
- 7. Tuner automatic search button
- 8. Tuner fine-tuning button
- 9. Audio input select key
- 10. Mic Echo volume knob
- 11. Mic Bass knob

- Mic Treble knob
 Mic Master Volume knob
 Mic 1 input
 Mic 2 input
 Ipod/mp3 signal input
 USB/SD Prev button
 USB/SD Play pause button
 USB/SD Next button
 VFD Display
- 21. Music Master Volume knob

BACK PANEL

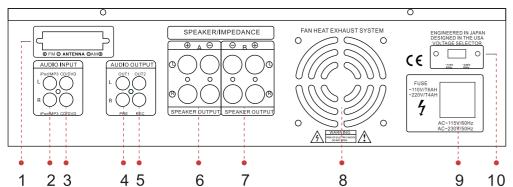

6. R-LSpeaker a output jack

7. R-L Speaker b output jack

9. Power line (~110V /220V)


8. Take out the breeze fan export

10. 110V/220V selection switch

- FM/AM Radio antenna
 Ipod/mp3 Signal input
 Dvd Signal input
 Audio Output 1
- 5. Audio Output 2

REMOTE CONTROL

- 1. CD/DVD Audio Input Select key
- 2. Tuner Audio Input Select key
- 3. Tuner Automatic Search key
- 4. Tuner Memory key
- 5. Tuner Stereo/Mono key
- 6. USB/SD player key
- 7. Audio Mute key
- 8. None
- 9. IPOD/MP3 Audio Input Select key
- 10. AUX/USB Audio Input Select key
- 11. Tuner FM Select key
- 12. Tuner AM Select key
- 13. USB/SD Next key
- 14. USB/SD Prev. key
- 15. Tuner tuning + select key
- 16. Tuner tuning select key
- 17. Music Volume + key
- 18. USB/SD pause key
- 19. Music Volume key

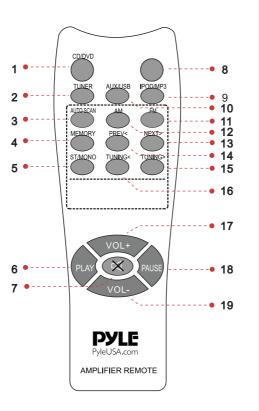

TROUBLESHOOTING

If you experience any of the following difficulties while using the unit, use this troubleshooting guide to help you remedy the problem, should any problem persist, consult your nearest dealer.

PROBLEM	POSSIBLE CAUSE
No power	 The ac power cord is disconnected Wall socket poor connection or the wall socket is inactive
No sound	 Disconnected speakers and components. Make sure you select the correct component on the unit Volume control at lowest level Speaker wire short or open
One master speaker NO sound	 Bad or Incorrect speaker connections Balance not in center Speaker wire short or open
Bad Sound	 The place is unfit for the speakers Bad or incorrect speakers connections Treble and bass controls are too low
Microphone has no sound	 Microphone volume is too low Microphone not turned ON Microphone wire short or open
Severe hum or noise	 Check that the speakers and components are connected securely The plugs and jacks are dirty

Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support.

Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.

