 


BOOMROCK

PYLE

PyleUSA.com

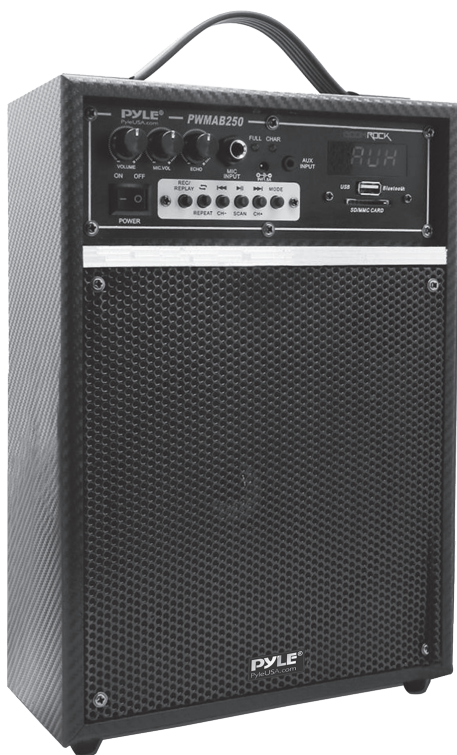

 
PWMAB250BK - PWMAB250RD **300 Watts Wireless BT Portable PA** **6.5" Speaker System**

with USB/SD/FM Radio/Rechargeable Battery,
Remote Control and One wired Microphone

USER MANUAL


**Read all documentations carefully before operating the equipment.
Retain this manual for future reference.**

Panel Design

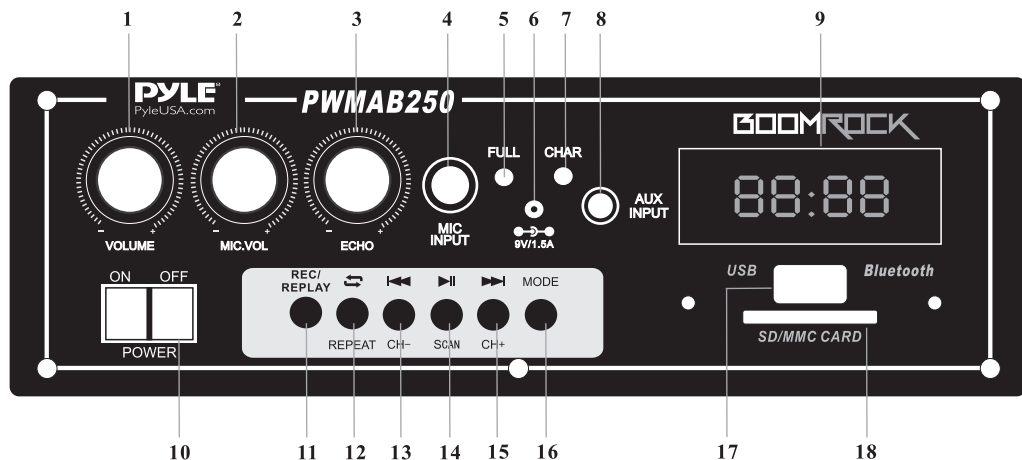

- | | |
|-------------------------------------|------------------------------------------------|
| 1. Master volume controller | 12. Repeat function |
| 2. Mic volume controller | 13. Previous song selector |
| 3. ECHO controller | Previous radio station |
| 4. MIC input slot | 14. Play for Mp3 or other audio sources |
| 5. Full indicator lights | Auto scan for radio stations |
| 6. AC input | 15. Next song selector |
| 7. Charging indicator lights | Next radio station |
| 8. Aux input | 16. Input selectors |
| 9. Display screen | 17. USB input for Mp3 player |
| 10. Power ON/OFF switch | 18. SD/MMC card input for Mp3 player |
| 11. Rec/Replay function | |

 Remote Control

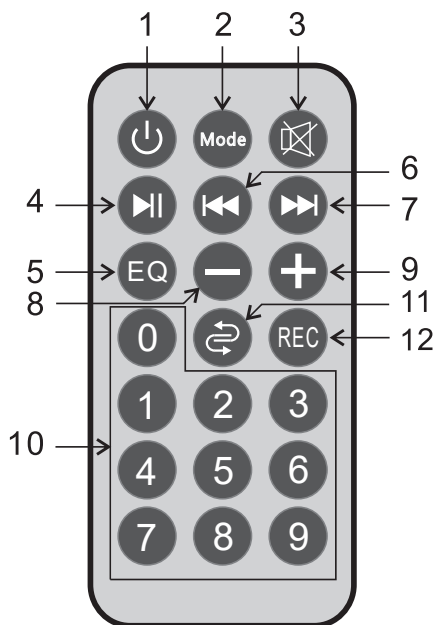

1. **Power:** ON/OFF
2. **Mode:** Press this button to select AUX/USB/BT/FM input mode. When you are recording-Press and hold this button more than 3 second, unit will delete the recorded files.
3. **Mute**
4. **Play/Pause function**
FM MODE: Press this button once, unit will auto scan radio station.
5. **EQ**
6. **PREVIOUS**
USB/SD MODE: Previous song
FM MODE: Previous station
7. **NEXT**
USB/SD MODE: Next song
FM MODE: Next station
8. **Volume -**
9. **Volume +**
10. **0-9 USB/SD or preset radio statons selector**
11. **Repeat function for USB/SD**
12. **Recording function:** Press and hold this button more than 3 seconds, unit will record what you say, then short press this button once, unit will play the recorded files. Use **PREVIOUS/NEXT** to select the recorded files.

Instructions

Power ON/OFF

The PA speaker can be powered when connected to main power or using the internal 9V battery.

1. Connect the power cable to the top of the unit.
2. Connect the other end of power cable to main power.
3. Turn **ON** the switch for the main power.
4. The unit will automatically power **ON** when connected to main power.

Notes:

If you wish to use the internal battery to power the unit, just simply turn on the Battery switch located on the top of unit to ON.

Charging

Before using the PA speaker for the first time, charge the unit at least 8 hours.

1. Connect the power cable to the top of the panel.
2. Turn off the battery switch on the top of the panel.
3. Recharge indicator light will light when unit is charging.

Notes:

The internal battery will charge while the unit is being operated and the power switch is ON. It is better to charge the unit while the power switch is off.

Using the Wired Microphone

You can connect the wired microphone to this unit using the MIC INPUT located on the top of control panel.

1. Turn **OFF** the unit.
2. Connect your wired microphone to the **MIC INPUT** located on top of the control panel.
3. Adjust the microphone volume by tuning the **MIC VOL/ECHO** knobs located on top control panel.

Notes:

You can use the wired microphone and wireless microphone at the same time.

Connecting a Guitar

You can connect your Guitar to unit using the 1/4" GUITAR INPUT plug.

1. Turn **ON** the unit.
2. Connect your guitar cable to **GUITAR INPUT** port on top control panel.
3. Adjust the volume by turning the **GUITAR VOL** on top control panel.

USB/SD Card Playback

You can play music from USB stick or SD Card using the USB/SD slot on the PA speaker.

1. Turn **ON** the unit.
2. Insert your **USB or SD** card into the slot.
3. Once inserted the **USB or SD** card unit will begin automatic play.
4. You can use the **PRE/NEXT/PLAY/PAUSE** to control and play music.

Notes:

The speaker system can play the following audio file formats: MP3, MP4, WMA.

The USB/SD Card no more than 32GB. Operation may be slower when searching large memory files. It will need several seconds to respond when your USB/SD Card is full of contents.

Wireless BT Playback

You can connect your Wireless BT phone or other devices to the PA speaker.

1. Turn **ON** the unit.
2. Press the **INPUT** button which located on top control panel, near the USB/SD slot.
3. The Wireless BT is active when you hear two "**tone**" indicator sound.
4. Use your Wireless BT phone or other devices to search for the PA speaker. It will be displayed as **PYLE SPEAKER**.
5. Connect your devices with **PYLE SPEAKER**, it will pair with unit automatically.
6. You do not need code and get connected with unit.
7. Play music on your phone or device, sound will come from the speaker through the Wireless BT connection.
8. You can use the **VOLUME** to adjust the sound level for Wireless BT, also you can adjust the Wireless BT music sound through your own phone or other device.

Notes:

If there is no sound through the PAspeaker during Wireless BT, Check the volume controller both on the unit and on your phone or other device.

Using the Radio

1. Turn **ON** the unit.
2. Press **Mode** button (Unit/Remote control) to select FM mode.
3. Press "**Scan**" button which was located on front panel, unit will auto search and store the radio stations with the strongest signal.
4. Press **PRE/NEXT** button to select desired radio station.

Ensure that you have the extended the antenna located on the rear of the speaker. It will ensure the best possible radio quality and signal strength.

Use of the External Battery Option

To use the PA speaker longer than the internal battery life, you can connect the PA speaker to a external 9V Battery Source.

1. Find the **INPUT DC 9V** on the top control panel.
2. Use the correct cable connect the **INPUT DC 9V**.

Notes:

The PA speaker will consume the internal battery first, when it is low, the **LOW BATTERY** indicator light located on the control panel will turn on, you can use the external 9V battery to power on the unit. The external 12V battery will also charge the internal battery while in use.

Recording and Repeat function

When you insert USB or SD card, insert the Microphone, press Record/Replay button more than 3 seconds, the unit will record what you say, then short press this button, unit will replay the recorded files. Use PRE/NEXT to select the recorded files. If you don't want to keep the recorded files, press and hold MODE button for 3 seconds, unit will delete the recorded files.



WARNING:

This product can expose you to a chemical or group of chemicals, which may include "**Lithium Carbonate**" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.

Features:

- Built-in BT for Wireless Audio Streaming
- Works with All of Your Favorite Wireless BT Devices (iPhones, Androids, Smartphones, iPads, Tablets, PC, etc.)
- Instant Karaoke: Includes Microphone & 1/4" Mic Input
- USB Flash Drive & SD Memory Card Readers
- AUX (3.5mm) Input for Connecting External Devices
- Built-in Rechargeable Battery (3 Hour Battery Life)
- FM Radio
- Volume, Mic Volume, Echo Controls
- Convenient Carry Handle

What's in the Box:

- Portable Bookshelf Speaker
- Handheld Microphone
- Wired Microphone Cable
- Audio Connection Cable
- Remote Control
- Power Cable

Technical Specs:

- 300 Watt Peak Power - 150 Watt RMS @ 4 Ohm
- Sound System: 6.5" Woofer and 1" Tweeter System
- Frequency Response: 20-20kHz
- Wireless BT Operation Range: 65 Feet
- Rechargeable Battery: 7.4V Lithium, 1800mAh 2.5Wh
- Power Supply: 110V/220V Switchable
- Unit Dimensions (L x W x H): 8.5" x 4.0" x 12.5" -inches

PYLE

PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com