

PYLE[®]
www.PyleAudio.com



SoundBox
SPLASH PWPBTN65

Bluetooth & NFC Portable Speaker System

USER MANUAL

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	2
BEFORE USE.....	4
COPYRIGHT	Error! Bookmark not defined.
BUTTONS AND CONTROLS	4
USB CHARGING.....	5
BLUETOOTH/NFC CONNECTIVITY.....	5
<i>turn on the apparatus</i>	5
<i>To TURN OFF THE APPARATUS</i>	5
<i>GETTING CONNECTED USING BLUETOOTH</i>	5
<i>GETTING CONNECTED USING NFC</i>	6
<i>ENJOY MUSIC FROM AN EXTERNAL DEVICE</i>	6
SPECIFICATIONS.....	7

IMPORTANT SAFETY INSTRUCTIONS



WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Also, do not remove the cover or back. No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol is intended to alert user to the presence of non-insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



This symbol is intended to alert user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. Read through the manual before operating.
2. Heed the instructions.
3. Follow all instructions in the manual.
4. Keep the manual for future reference.
5. Do not use the apparatus in places that are extremely hot, cold, dusty or humid.
6. Do not keep the apparatus in a high humidity area such as a bathroom, kitchen sink or pool. Keep the apparatus away from heaters, stoves, etc. Never leave the apparatus in an area exposed to direct sunlight where there could be a considerable rise in temperature.
7. The apparatus should not be exposed to dripping or splashing, and no objects filled with liquids such as vases, should be placed on the apparatus.

8. Do not block any ventilation openings. The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains and the like.
9. Install the apparatus in accordance with the manufacturer's instructions.
10. Clean the cabinet with a soft cloth slightly moistened with a mild detergent solution. Do not use strong solvents which may cause unpredictable damage to the apparatus.
11. Do not use attachments/accessories not recommended by the product manufacturer as they may be hazardous.
12. Power-supply cords should be routed so that they are not likely to be trapped in any way. Also protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the pointers where they exist from the apparatus.
13. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operation instructions.
14. The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use. To be completely disconnect the power input, the mains plug of apparatus should be disconnected from the mains.
15. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
16. If the apparatus is not used for a period of time, unplug the power cord.
17. If the remote control unit is not used for a period of time, remove batteries from the remote control unit and store them in a cool dry area.
18. If it is lightening, unplug the power cord to prevent the unit from unnecessary damages.
19. This product should be moved with care to avoid damage or injury.
20. Never try to disassemble batteries. Neither put batteries under the direct sunlight nor throw them into fire or heater. As all of these may cause unnecessary damages to you.
21. Refer all servicing to qualified service personnel. Servicing required when the apparatus does not operate normally or has been damaged in any way such as the power cord or plug is damaged, liquids spilled into the apparatus, any hard object fallen on the apparatus, the apparatus has been dropped, the apparatus has been exposed to rain or moisture.
22. The marking information is located at the back of the apparatus.
23. Minimum distance 5 cm around the apparatus for sufficient ventilations
24. Do not place any flame sources such lighted candles on top of the apparatus.
25. Attentions should be drawn to the environmental aspects of batteries disposal.
26. Use the apparatus in moderate climates.




Caution:

1. Use of controls and adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
2. If this product develops trouble, contact qualified service centers, and do not use the product in defective states.

BEFORE USE

1. Choose unit installation location carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.
2. Do not open the cabinet as this might result in damage to the circuitry or electrical shock. If a foreign object should get into the set, contact your dealer.
3. When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.
4. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry cloth.
5. In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as while on vacation.
6. Keep this manual in a safe place for future reference.

BUTTONS AND CONTROLS

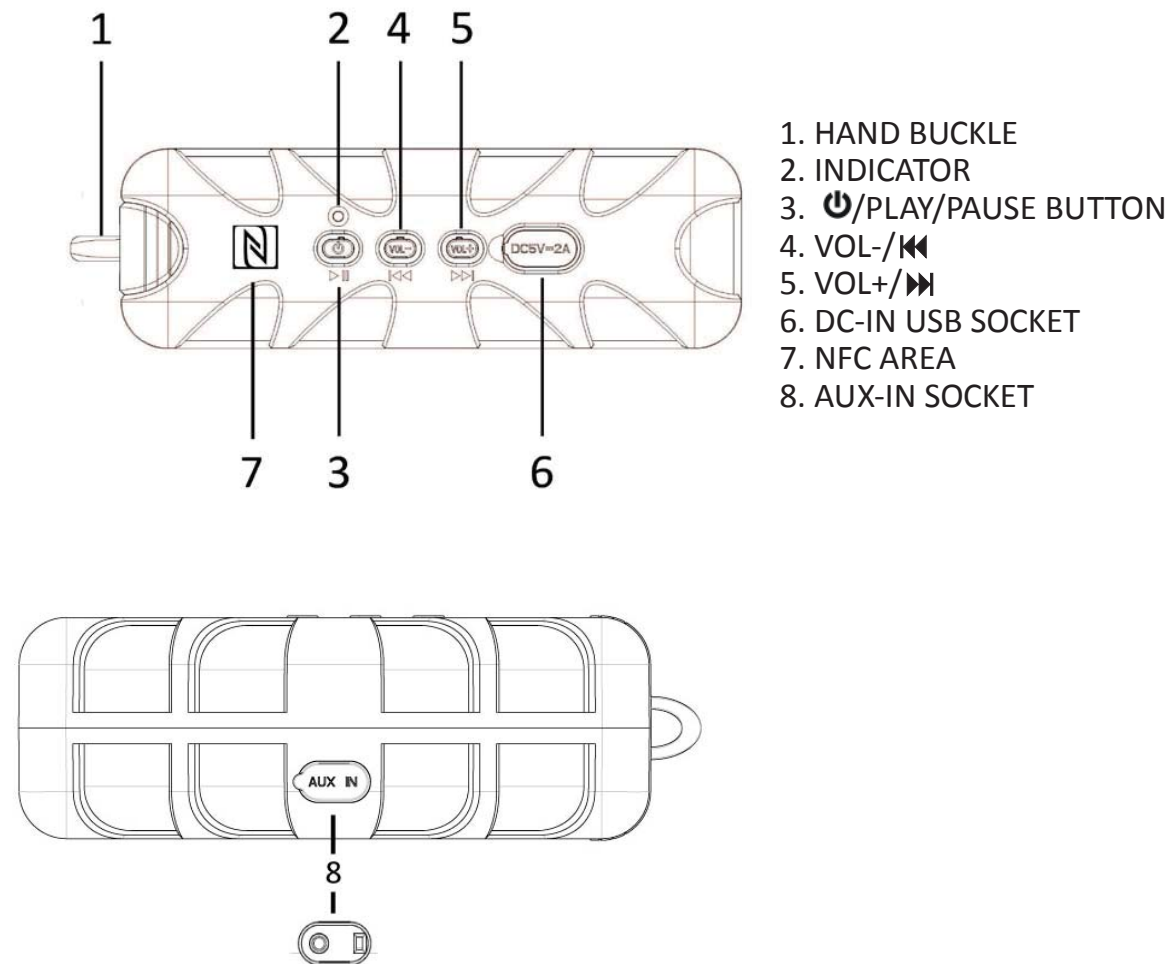

USB CHARGING

The apparatus can be charged by some devices that have USB socket. Before using, you'd better charge your speaker first.

1. Plug the USB cable into the USB socket of the apparatus and plug the other end of USB cable into the USB socket of the computer or other devices that have the USB socket;
2. Commonly, it will take 3 hours to charge the apparatus.


USB Charge voltage is 5V.

Note: The indicator will light red when charging. When the apparatus is fully charged, the indicator won't light.

BLUETOOTH/NFC CONNECTIVITY


External devices which have a built-in Bluetooth feature or Near Field Communication (NFC) can be connected to this apparatus and play through the speakers.

TURN ON THE APPARATUS

Press and hold the  button to turn on the apparatus and you will hear a rising tune "do do do do". The indicator will light up and flash when the apparatus is on.

Note: If there is no Bluetooth connection for a long time, you will hear a falling tune "do do".

TO TURN OFF THE APPARATUS

Press and hold the  button again until you hear a falling tune of "do do do do" and the indicator won't light.

GETTING CONNECTED USING BLUETOOTH

1. Set the Bluetooth function of your external device when the apparatus is on.
2. Set to search Bluetooth device on your external device.
NOTE: The effective distance between your external device and this apparatus is 5 meters.
3. Wait for a while then find the "PWPBTN65" on the paired devices list on your external device and press "PWPBTN65".

If sometimes A window will ask you a password. Fill in "0000" then press "OK" on your external device.

4. A few seconds later your Bluetooth connection is success. You can hear a series of




rising tune and the indicator will stop flashing.

GETTING CONNECTED USING NFC

1. If your device supports NFC, switch NFC on.
2. Touch the NFC area of the speaker with the NFC area of your device. When the NFC connection is success, the indicator will stop flashing.
3. To close the connection, touch the NFC area of the speaker with the NFC area of your device again and the indicator will start flashing.

Note: Some device may ask for confirmation on connection. For details on NFC, see your device user guide.



ENJOY MUSIC FROM AN EXTERNAL DEVICE

1. The light will stop flashing if you get your external device paired. (See “Getting connected”);
2. Turn on the music player program on your external device and set it play. Or press  button to set it play.
3. Press and hold the VOL- button to reduce the volume;
4. Press and hold the VOL+ button to increase the volume;
5. Just press the VOL- button to skip the start of the previous song;
6. Just press the VOL+ button to skip the next song;
7. Press the  button to pause
8. Press the  button again to restart to play.

Note: However, some buttons may not work due to the variable music player program.

AUX-IN FUNCTION

The apparatus can play music from some devices that have Aux-in Socket.

1. Plug the Aux-in cable into the Aux-in socket of the apparatus and plug the other end of Aux-in cable into the Aux-in socket of the computer or other devices that have the Aux-in socket;
2. Turn on the unit and it will play music automatically.
3. Press and hold the VOL- button to reduce the volume;
4. Press and hold the VOL+ button to increase the volume;
5. Press the  button to pause
Press the  button again to restart to play.

SPECIFICATIONS

AMPLIFIER section		
Output Power	2.5W X 2
Frequency Response	60 to 20,000 Hz
SPEAKER SYSTEM section		
Type	1-way
Impedance	4 Ohm
Output Power	2x3.0w
GENERAL		
Power Requirements	The built-in lithium battery voltage 3.7V Lithium battery capacity:1400mA
Dimensions (W x H x D)	2.6" x 2.7" x 7.9" inches Without hand buckle 2.6: x2.7" x 8.5" inches With hand buckle
USB Charge	USB charge voltage 5V
Standard Accessories	USB Cable AUX IN Cable