 


SereneLife

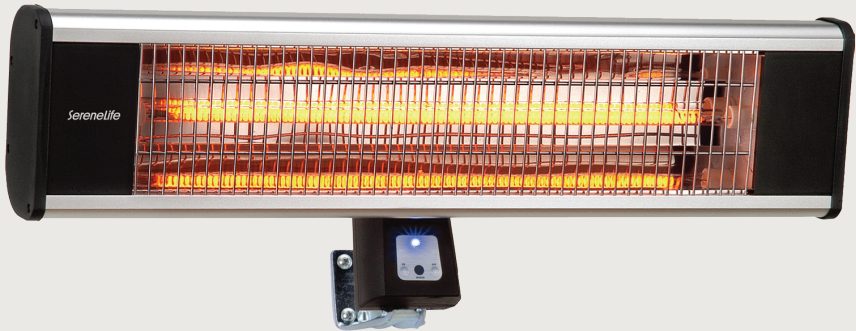

SLOHT28

**wall mounting
patio heater**

user guide

visit our website



SCAN ME
serenelifehome.com

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE REFERENCE. FOR HOUSEHOLD USE ONLY.

Features:

- Secure Locking System
- High Rated Aluminum Reflector
- Offers Sun-like Infrared Heating
- Includes Mesh Grille Front
- Odorless, No Gas or Propane Use
- Remote Control Wall Mounting Heater
- Dust and Waterproof Design
- Anodized Extruded Aluminum Alloy Housing
- High-Efficiency Carbon Fibre Heating Elements
- One Power Settings
- IP65 Approved

What's in the Box:

- 1500 Watt Electric Patio Heater
- (4) Tapping Screw ST4 x 30
- (1) Wall Bracket
- (1) Remote Controller
- (4) Plastic Plug

Technical Specs:

- Construction Material: Aluminum Alloy Frame
- Power Supply: 1500W
- 1 Heat Levels: 1500 Watts
- Heating Area: 18 sq. ft.
- Maximum Amperage: 12.5 Amps
- Battery Life: Up to 2+ Hours
- Battery Operated Remote: 1.5V, (2) x 'AAA' Batteries (not included)
- Power Cable Length: 2 Meters, 120V
- Heat Warm Range: Around 10-15 Square Meters
- Product Dimensions (L x W x H): 25.6" x 8.5" x 9.6" -inches

CALIFORNIA PROP 65 WARNING

WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

IMPORTANT INSTRUCTIONS:

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1. Read all instructions before using this heater.**
2. Use extreme caution when any heater is used by or near children or invalids, or whenever the heater is operating and unattended.
3. Do not operate the heater after it malfunctions. Disconnect power at the service panel and have the heater inspected by a qualified electrician before reuse.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause electric shock, fire, or damage to the heater.
5. Do not block air intakes or exhaust openings in any manner to prevent fire risk.
6. Heaters contain hot, arcing, or sparking components inside. Do not use in areas where gasoline, paint, or flammable vapors or liquids are stored or used.
7. Maintain a clearance of 39.4 inches (100 cm) from walls and 11.8 inches (30 cm) from the ceiling.
8. This heater is hot when in use. To avoid burns, do not touch hot surfaces. Keep combustible materials (furniture, papers, clothes, curtains, etc.) at least 3 feet (0.9 meters) from the front and away from the sides and rear.
9. The heater must be installed at least 6.9 feet (2.1 meters) above the floor.
10. The unit stays hot for a period after shutdown. Do not touch during this time.
11. Do not place the unit near curtains or other flammable materials.
This can result in fire.
12. Do not cover the unit during operation or immediately after it is shut down.
13. Do not wrap the power supply cord around the unit.
14. Handle the unit carefully. Avoid vibration or impact.
15. Ensure the unit is securely grounded during operation.
16. If damaged, the unit must be repaired by a professional repair team.
17. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to prevent hazards.
18. Do not position the heater directly below a power socket.
19. Keep the area clear of boards or flammable material during assembly.

20. Do not use the heater with a programmer, timer, or any device that switches it on automatically. Fire risk exists if covered or improperly positioned.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless supervised or instructed by someone responsible for their safety.
22. Children should be supervised to ensure they do not play with the appliance.
23. The head of the unit gets hot during use. Unplug and wait for it to cool before cleaning.
24. Do not use the heater near a bathtub, shower, or swimming pool.
25. Do not use this unit where corrosive or volatile air is present (e.g., dust, steam, gas).
26. Do not use the unit to dry clothes or towels.
27. Do not use the unit as a sauna heater.
28. Do not use the unit as a storage heater.
29. Do not use the unit for animal propagation or raising.
30. Do not use the unit in a central heating system.
31. Do not immerse the unit in water for cleaning.
32. Plug the unit into a socket that is easily visible and accessible.
33. It is normal for two dark spots to appear on the surface of the heating elements, or for the element surface to turn white within the first few minutes of use. This does not affect performance.
34. Never place the heater or its electrical cord under rugs or carpeting. Keep cords clear of walkways to prevent tripping or contact.
35. To disconnect, turn controls off, switch off power at the main panel, then unplug from the outlet.
36. Use this heater only as described in this manual. Misuse may result in fire, electric shock, or injury.
37. Avoid using extension cords. If necessary, use a No. 14 AWG minimum size cord rated for at least 1875 watts.
38. The surface becomes very hot when operating. Keep children and adults away to avoid burns or clothing ignition.
39. Supervise young children in the area while the heater is in use.


SAVE THESE INSTRUCTIONS

PREPARATION

- 1. Prepare a Phillips (cross-head) screwdriver.
- 2. Read this manual carefully before installation and use. Keep it in a safe place for future reference.

PARTS DESCRIPTIONS

No.	Part Name	No.	Part Name
1	Control Box	4	Plastic Plug
2	Wall Bracket	5	Screw Knob M6*12
3	Tapping Screw ST4*30	6	Remote

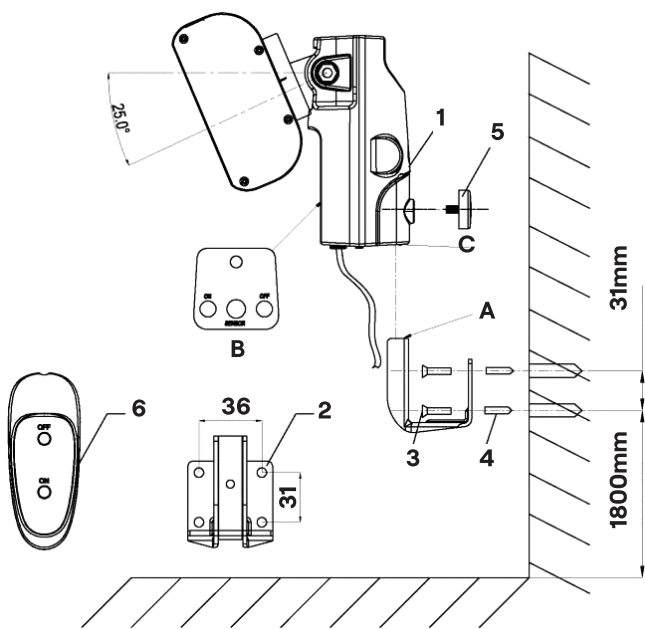

INSTALLATION

- 1. Drill 4 holes as shown in the installation diagram. Insert the Plastic Plugs (#4) into the holes. Align the Wall Bracket (#2) to the holes and secure it with the Tapping Screws (#3).
- 2. Insert the Wall Bracket into the corresponding slot (Section C) of the Control Box. Secure them using the Screw Knob M6 x 0.47 in. (#5).


OPERATIONS

1. Plug the unit into a power outlet. Ensure the power supply matches the rated voltage. The blue indicator light will begin flashing to show the heater is in standby mode.
2. Press the ON button on the control panel or remote controller to turn on the heater. The blue indicator will stay lit.
3. When the heater is no longer needed, press the OFF button on the unit or remote, and unplug the unit.

GROUNDING INSTRUCTIONS


This heater is designed for 120V use. It includes a three-prong plug (see figure A). An adapter (figure C) is available to connect the plug to a two-slot outlet. The adapter's green grounding lug must be connected to a permanent ground (e.g., a grounded outlet box). However, using a three-slot grounded receptacle is highly recommended over using an adapter.

Grounding Methods

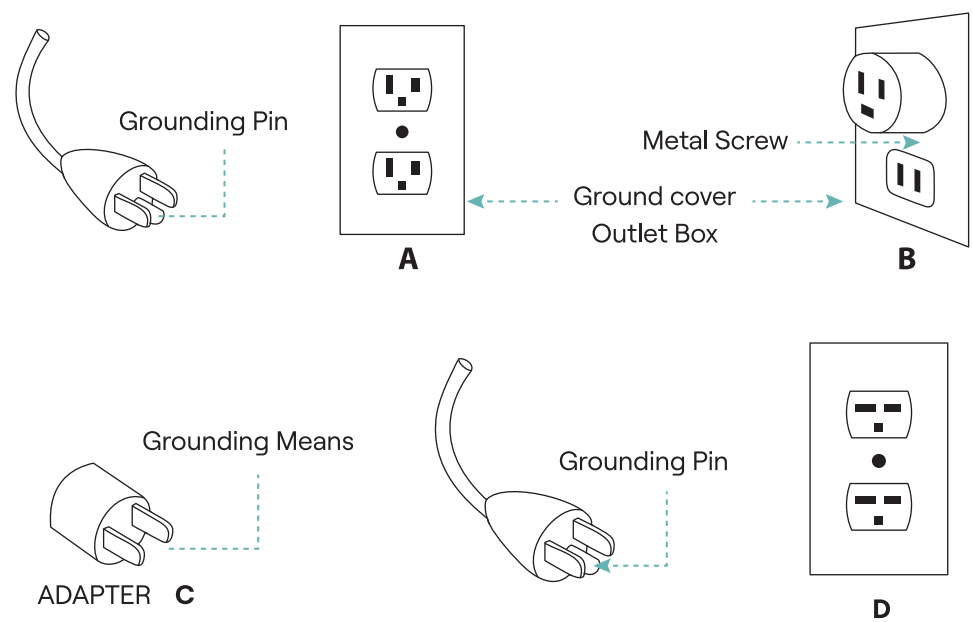

Cleaning and Maintenance

1. Before cleaning, ensure the power is turned off at the circuit breaker and the heating element has fully cooled.
2. To maintain the heater's appearance, wipe it occasionally with a dry duster. During periods of disuse (e.g., summer), wipe it with a damp cloth once it has cooled.
3. Do not use abrasive powders, furniture polish, chemical or abrasive products, or metallic scourers, as these can damage the surface.
4. All servicing should be performed by qualified personnel.
5. Do not disassemble the unit during cleaning.

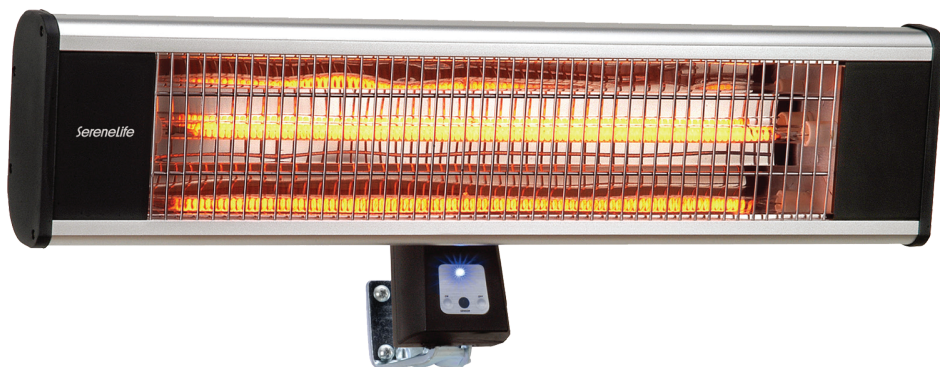

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Model Number:

SLOHT28

[Serenelifehome.com/pages/register](https://serenelifehome.com/pages/register)



questions? comments?

We are here to help!

Phone: 1.718.535.1800

[serenelifehome.com/contact us](https://serenelifehome.com/contact-us)