

Start Here



Serenelifehome.com/
register

SereneLife



SLPUMP30

Electric Air Pump Compressor/Inflator

USER GUIDE

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE REFERENCE.
FOR HOUSEHOLD USE ONLY.

TABLE OF CONTENTS

FEATURES AND TECHNICAL SPECS 3

PRODUCT INTRODUCTION 3

DETAILS OF ACCESSORIES 4

SAFETY INSTRUCTIONS 4

INFLATION OPERATION 5


DEFLATION OPERATION 6

PRECAUTIONS 6

TROUBLESHOOTING 7

MAINTENANCE AND STORAGE 7

REGISTER PRODUCT 7

**WARNING:**

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

Features:

- Compact & Portable Air Compressor
- Air Deflator Feature Quickly Deflates, Removes Air
- Hassle-Free 'Insert & Pump' Operation
- Simple Electric Plug-in Design
- Integrated, Wired Power Cable
- Powered via Car Power Outlet / Cigarette Accessory Jack
- Digital LCD Display & Button Controls
- Adjustable PSI Air Pressure Settings
- Long Flexible Air Hose
- Convenient Carry Handle
- Disassembles for Space-Saving Vehicle Trunk Storage

Technical Specs:




- Power Output: 110Watt Max
- Selectable Pressure Units: PSI / Bar
- Adjustable Air Pressure: 0-20 PSI (Up to 1.378 Bar)
- Air Hose Length: 3.3' ft.
- Car CigPower Cable Length: 9.8' ft.
- Air Flow Capacity: 350L/min(A) and 70L/min(B)
- Power: DC 12V
- Dimensions (L x W x H): 9.8"x6.9"x6.1" -inches

Product Introduction

SLPUMP30 is an intelligent DC electric pump with a preset pressure LCD screen. It can be used for inflatable tents, SUPs, etc. Thanks to the intelligent pressure system, for example, if a pressure value is preset, when the pressure reaches the set value, the pump will automatically stop inflating.

 
List of Accessories

Please ensure the following accessories are in the box before use. If anything is missing, please contact your local supplier.

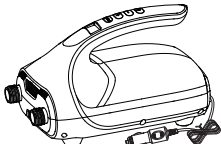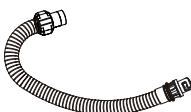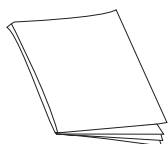Air pump	Hose	User Guide
		

Details of Accessories

 

 
 
1. Inflation inlet
2. Deflation outlet
3. DC plug
4. Pressure value LCD screen
5. Pressure unit toggle button
6. Pressurizing button
7. Decompressing button
8. On/Off button
9. Hose
10. Air tap
11. Flexible conduit adaptor

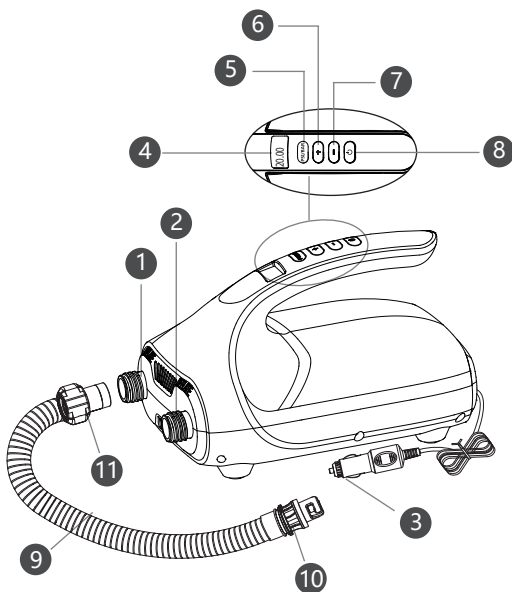

SAFETY INSTRUCTIONS

- **Warning:** To reduce the risk of injury, keep out of reach of children. Always supervise children or incapacitated individuals when using or near this air pump.
- **Warning:** Keep packaging materials away from children.
- **Warning:** This product is not intended for individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless supervised or instructed by a responsible person.
- **Warning:** Before moving, maintaining, repairing, or adjusting this product, unplug the DC plug from the socket.
- **Warning:** Do not bury the wire in soil. Place it in a safe environment where it won't be damaged by mowers or other equipment.
- **Warning:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified personnel to avoid risk.
- **Warning:** Do not plug in or unplug the DC plug while standing in water or with wet hands.
- **Warning:** Before inflating, check the maximum pressure rating of the inflatable item. Exceeding it may damage the item.
- **Warning:** Use of this product is limited to what is described in the instruction manual.
- **Warning:** Before use, check the car cigarette lighter socket for rust or debris. Poor electrical conduction may cause overheating, which can damage the product.

Inflation Operation

- Connect the end of the hose with the flexible conduit adapter to the air pump's inflation inlet, and twist clockwise to tighten (Figure 1).
- Attach the other end of the hose to the air tap of the inflatable item (step 2, Figure 2), and twist clockwise to secure. Then insert the inflation valve into the air bag and twist clockwise to fix it (step 2, Figure 2).
- Plug the DC plug into the 12V DC socket.
- Press the pressure unit toggle button  to select your preferred unit.
- Press the "+" or "-" button to set the desired pressure value (range: 0–20 PSI; 1 PSI = 0.0689 BAR).
- After setup, press the power switch button  to begin inflation.
- During inflation, you can press the "+" or "-" button to adjust the pressure, press the unit toggle button  to switch units, or press the On/Off  button to stop.
- When the pressure reaches the preset value, the pump will automatically stop.
- After inflation is complete, unplug the DC plug from the 12V socket.
- Remove the hose from the air pump and the inflatable item, then store it safely.
- **Notice:** The factory default pressure is 10 PSI (10 PSI = 0.689 BAR).
On your next use, the previously set value will appear by default.
- **Notice:** If no operation occurs within 2 minutes after the pump is powered on, it will enter standby mode. Press the power button to activate.

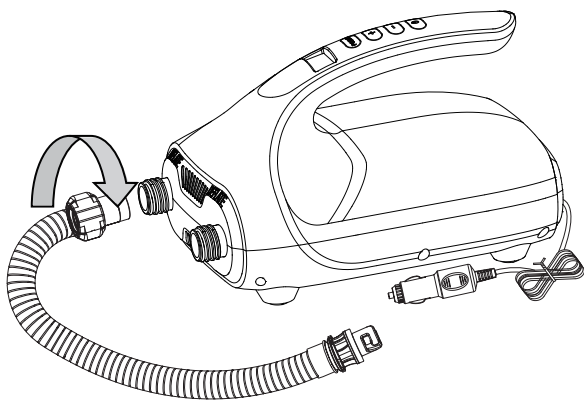 


Figure 1

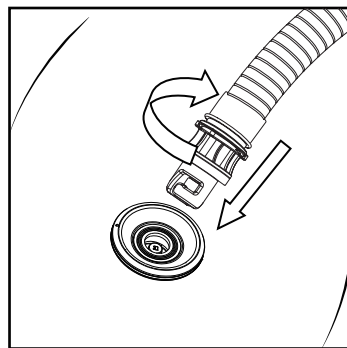 


Figure 2

Deflation Operation

1. Remove the hose from the inflation inlet.
2. Connect the flexible conduit adapter end of the hose to the deflation outlet (2).
Twist clockwise to secure.
3. Ensure the other end of the hose is still attached to the inflatable.
4. Press the On/Off Button to start deflation.
5. Once the air is fully discharged, press the On/Off Button again to stop the pump.

Precautions

- Use only a 12V DC power source (see Figure 3).
- Do not block the air inlet at the bottom of the pump.
Ensure it remains unobstructed.
- Follow local waste disposal regulations. Do not discard the pump randomly.
- Do not use the pump with a damaged hose. Replace it immediately.
- Do not remove the hose during inflation, as high pressure may cause injury.
- Do not operate the pump for more than 15 minutes continuously.
Allow it to cool for 30 minutes after extended use.
- Do not use the pump if any part is damaged.
Contact a qualified technician for repairs.
- Do not expose the pump to rain or submerge it in water.
- For safety, do not point the inflation inlet toward your face or body.
- Do not leave Electric Air Pump unattended during inflation.

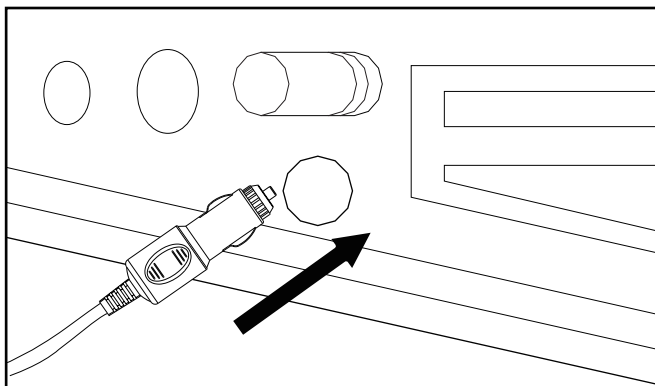 


Figure 3

TROUBLESHOOTING

Fault	Cause	Solutions
The air pump cannot start	<div>1. Power source not connected properly</div> <div>2. Fuse in DC plug is burnt</div> <div>3. Motor overheated or overloaded</div>	<div>1. Make sure the power cord is connected to the 12V socket</div> <div>2. Replace the fuse</div> <div>3. Allow motor to cool and restart</div> <div>4. If unresolved, contact the manufacturer or authorized service provider</div>
Slow or abnormal inflation	<div>1. Hose is blocked or cracked</div> <div>2. Hose not properly connected to pump or air bag</div>	<div>1. Replace or unblock the hose</div> <div>2. Reconnect the hose securely</div> <div>3. If unresolved, contact the manufacturer or authorized service provider</div>

MAINTENANCE AND STORAGE

- After use or when moving, maintaining, or adjusting the product, unplug the DC plug first.
- Allow the pump to cool before storage.
- Do not expose to rain or immerse in water.
- Store in a dry, ventilated place.

SUGGESTIONS

The product warranty is one year. It is recommended to use original accessories only. Any damage caused by non-original accessories is not covered under warranty.

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Model Number:
SLPUMP30

[SereneLifeHome.com/pages/register](https://www.SereneLifeHome.com/pages/register)

SereneLife



Questions or Comments?

We are here to help!

Phone: 1.718.535.1800

Serenelifehome.com/ContactUs