



# ELECTRONIC SAFE

## USER MANUAL

### OPENING YOUR SAFE FOR THE FIRST TIME

Upon first use, users should open the safe with the emergency key.

- **To do this:** Remove emergency lock cover, insert the emergency key, and turn it counterclockwise.
- Turn the knob counterclockwise to open the door.

**CAUTION:** Finish operation, pull the emergency key out and keep it in a safe place.

### INSERTING THE BATTERIES

- Open the door with the emergency key
- Insert 4 X 1.5V batteries into the battery compartment. Upon inserting, the buzzer will beep and the green light will flash.
- If both green and red light are on, it indicates the batteries are low and should be replaced.

### SETTING USER CODE

- With the door open, press the reset button (*the red button on the battery compartment*), input the 3- to 8-digit user code and press the “**enter**” button or the “**lock**” button.
- 2 buzzer beeps with green light flashes indicates the new user code is stored.

### OPENING DOOR WITH USER CODE

Input your user code. After each press, the buzzer will beep and the green light will flash, press the “**enter**” button or the “**lock**” button. After the correct code is entered, there will be 2 buzzer beeps and the green light will flash, rotate the knob counterclockwise within 5 seconds to open the door.

**CAUTION:** A wrong code input will activate 3 buzzer beeps.

### CLOSING DOOR

Turn the knob clockwise to close the door.

### MOUNTING METHOD

- Fix the safe in a place which is not easy to move.
- Drill holes for expansion bolts (*or clamping screws*) in the right place.
- Turn the expansion bolts counterclockwise to separate.
- Use the expansion bolts (*or clamping screws*) to secure the case to the wall.
- Make sure the case is mounted in place as required and then tighten screws.

**CAUTION:** Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

### AUTOMATIC LOCK

3 continuous wrong inputs will activate the warning beep for 20 seconds.

Another 3 continuous wrong inputs will activate the warning beep for 3 minutes.

**CAUTION:** The keypad will be disabled during the beeping. You can only stop the beeps by opening the safe with emergency key or removing the batteries.