

compact electronic safe box user guide

Features:

- Heavy-Duty, Rugged & Reliable Safe Box
- Electronic Lock System with Mechanical Override
- Includes (2) Keys for Manual Safe Access
- Digital Touch Button Control Pad
- Customizable Password/Key Code Setting
- Reinforced Solid Steel Wall Construction
- Dual Security Steel Door Locking Bolts
- Corrosion & Stain-Resistant Powder Coat Finish
- Pre-Drilled Anchor Holes for Wall/Floor Mounting
- LED Low Battery Indicator
- Perfect for Home, Office or Business Use

What's in the Box:

- Safe Box
- (2) Keys
- Mounting Bolts
- (4) x 'AA' Batteries

Technical Specs:

- Construction Material: Engineered Steel Alloy
- Battery Operated Digital Panel: Requires (4) x 'AA' Batteries

OPENING YOUR SAFE FOR THE FIRST TIME

Upon first use, users should open the safe with the emergency key.

- **To do this:** Remove the emergency lock cover, insert the emergency key, and turn it counterclockwise.
- Turn the knob counterclockwise to open the door.

CAUTION: Finish the operation, pull the emergency key out, and keep it in a safe place.

visit our website



SCAN ME
serenelifehome.com



CALIFORNIA PROP 65 WARNING

⚠️WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov



questions? comments?

We are here to help!

Phone: 1.718.535.1800

serenelifehome.com/contact-us

INSERTING THE BATTERIES

- Open the door with the emergency key.
- Insert 4 X 1.5V batteries into the battery compartment. Upon insertion, the buzzer will beep, and the green light will flash.
- If both the green and red lights are on, it indicates the batteries are low and should be replaced.

SETTING USER CODE

- With the door open, press the reset button (the red button on the battery compartment), input the 3- to 8-digit user code, and press the "enter" button or the "lock" button.
- 2 buzzer beeps with green light flashes indicate that the new user code is stored.

OPENING DOOR WITH USER CODE

Input your user code. After each press, the buzzer will beep, and the green light will flash. Press the **"enter"** button or the **"lock"** button. After the correct code is entered, there will be 2 buzzer beeps, and the green light will flash. Rotate the knob counterclockwise within 5 seconds to open the door.

CAUTION: A wrong code input will activate 3 buzzer beeps.

CLOSING DOOR

Turn the knob clockwise to close the door.

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

MOUNTING METHOD

- Fix the safe in a place that is not easy to move.
- Drill holes for expansion bolts (or clamping screws) in the right place.
- Turn the expansion bolts counterclockwise to separate.
- Use the expansion bolts (or clamping screws) to secure the case to the wall.
- Make sure the case is mounted securely. Use the clamping screw when there is a wooden wall surface.

CAUTION: Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

AUTOMATIC LOCK

- Three continuous wrong inputs will activate the warning beep for 20 seconds.
- Another three continuous wrong inputs will activate the warning beep for 3 minutes.

CAUTION: The keypad will be disabled during the beeping. You can only stop the beeps by opening the safe with the emergency key or removing the batteries.

Start Here



Model Number:

SLSFE12

Serenelifehome.com/pages/register