

SereneLife



SLSWNG200

Outdoor Weave Web Swing for Kids
Indoor/Outdoor Swing - Heavy Duty Circular Fractal
Weave Web Tree Swing for Children - Black

Safety and Assembly Instructions

IMPORTANT

**READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS.
KEEP FOR FUTURE REFERENCE**



WARNING! CHOKING HAZARD-SMALL PARTS, NOT FOR CHILDREN UNDER 3 YEARS. **WARNING!** MAXIMUM WEIGHT SHOULD NOT EXCEED 600LBS.

WARNING! DO NOT USE WITHOUT ADULT SUPERVISION!

WARNING! ADULT ASSEMBLING REQUIRED!

ESSENTIAL INFORMATION

- Recommended for children 3+ years
- The activity toys is intended for outdoor use.
- **Warning!** Only for domestic use.
- Do not leave child unattended while in use.
- **CAUTION:** Use only under adult supervision.
- Good safety practices should be followed at all times.
- Read all instruction before using this product.

INSTALLATION INSTRUCTIONS

- Adequate overhead clearance is essential, a minimum of 13 feet from ground level is recommended, provide clearance for wires, ceiling fans and other possible hazards.
- Lateral clearance is essential, place the swing away from walls structures, furnitures, and other play areas, maintain a clear space on all sides of the swings, a minimum of 8feet from the frame edge.
- The swing is under heavy tension, 2 adults are required to set it up, use appropriate clothing and shoes, failure to follow these instructions may lead to injury or damage to the swing.
- Hang it firmly before using.
- The owner and supervisors of the swing are responsible to make all users aware of practices specified in the usa instructions.

You may also follow the SereneLife Set Up Instructions Video For Spider Web Tree Saucer Swing: <https://youtu.be/XRoeWAHdOHA>

- Instructions that activity toys (for example paddling pools, swings, slides, climbing frames) shall not be installed over concrete, asphalt or any other hard surface.
- To check all nuts and bolts for tightness and tighten when required. To check all coverings for bolts and sharp edges and replace when required.
- To check swing seats, chains, ropes and other means of attachments for evidence of deterioration.
- To replace defective parts in accordance with the manufacturer's instructions.

ASSEMBLY INSTRUCTIONS

- Place all from the box in a clear area and position them on the floor in front of you.
- Remove all packing material from your area and place them back to the box, do not dispose of the packing material until assembly is completed. Read each step carefully before beginning.
- Adjust the rope height, and make sure the swing platform is level, then you can start to swing.

Step 1.

Place the swing on the floor, one small socket to one big socket, as below.



Step 2.

Turn on the screws to the 4 joints one by one tightly as below.



Step 3.

Finished! ready for swing



USER SAFETY INSTRUCTIONS

- 1. Read the instructions carefully before use.**
2. Before starting to use the swing, make sure the rings are strongly attached, so that a release or slipping of the rope is safely excluded.
3. The height of the attachment points of the swing should be in the way to make sure sit comfortable. Please ensure the bottom line of the swing to the ground not less than 14inch.
4. Maximum capacity is 600LBS.
5. The swing is not permitted to be used as a hammock- maximum tilt of 45 degree.
6. Do not place anything under the swing.
7. Do not jump on the swing or jump to the swing.
8. The swing should be set only by adults, children (under 12 years old) use this swing must be under supervision of adults.
9. Put soft padding under the swing if the ground is hard.
10. Check the swing, before facilities, the fixing ring and hanging points carefully, a secure fit is required before using.
11. When the rope broken or loosen, swing is not allowed for next using.

CARE AND MAINTENANCE INSTRUCTIONS

Inspect the swing before use, the following conditions could represent potential hazards.

1. Swing hooks and suspension must be greased regularly. Also check swing hooks and ring for rust points, which could affect their strength. Replace if any doubt.
2. Check the swing seats and trapezes for cracks or breaks.
3. Check swing ropes for fraying or extreme wear resulting from the twisting of the swing accessories, in order to assess this you need to unwind the ropes at the point of suspected wear in order to check the

- swing rope fibers carefully for breaks. Replace if any in doubt.
4. The swing can be package in a bag (plastic or other material) after using, and make sure the swing is dry. Do not store it under sun.
 5. The maintenance information should be followed at the beginning of each season as well as regular intervals during the usage season.

SWING SAFETY AND ACCIDENT PREVENTION

As in most recreational sport, participants may be injured, this section covers the most common accidents responsibilities of the supervisors and users in accident prevention are also outlined.

The following are reasons why accidents happen:

- Attempting to jump to the swing, it will be easy fall off and injury, each time, the users should step onto the swing carefully.
- Always stay in the center of the swing net, injury may result from hitting the frame when control lost. Be sure the foam cover in good condition.
- Loss of control, a user who loss control will increase his/her chance of injury, do not swing big degree to avoid any falling and injury.
- Alcohol and drug use, because alcohol and drug use impairs the jumpers coordination, loss of control as well as injuries are greatly increased.
- Poor maintenance of the swing. Make sure you inspect the swing before use, check for puncture and sharp burrs on the body, and the rope doesn't have rust or broken.

WARNING!

1. Keep children away from the swing during assembly.
2. Keep fingers away from the ends of the rails in the connecting area.

SLSWNG200

Outdoor Weave Web Swing for Kids Indoor/Outdoor Swing - Heavy Duty Circular Fractal Weave Web Tree Swing for Children - Black

Features:

- Heavy Duty Circular Fractal Weave for Comfortable Ride
- Set-up Indoor/Outdoor (Requires Assembly)
- Built-in Steel Hooks to for Safe and Secure Ride
- Large and Comfortable Swing with Adjustable Rope
- Portable and Easy to Assemble
- Sturdy Steel Tube Frame Wrapped with PE Rope
- Stylish Bohemian Inspired Design
- Perfect for Camping, Picnics and Outdoor Parties

What's in the Box?

- (4) Steel Tube Sections
- (2) Adjustable Ropes
- Mini Wrench
- Manual

Specifications:

- Material: PE Rope
- Base Size (D): 40.0" -inches
- Material of Rope: PE
- Rope Length: 5.25ft.
- Rope Thickness: 0.39" inches
- Steel Tube Size: 1.26" x 0.04" -inches
- Weight Capacity: Up to 600 lbs.
- Sold as: 1



SereneLife

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

