

SLTWF15LED QUICK GUIDE

POLYRESIN LED TABLETOP FOUNTAIN








HOW TO INSTALL:

- 1. Connect the water-pipe and pump. See picture 1
- 2. Put pump into the fountain.
- 3. Pour into the water and made the water over the pump.
- 4. Switch on the power

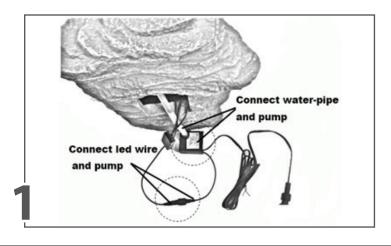





Be careful not to spill water onto the plug of the pump. **DO NOT** allow the pump to run dry!

TROUBLESHOOTING:

1. If your fountain pump fails to operate please check the following:

- Make sure the pump is plugged into the socket properly.
- Check the water level in the fountain. Running the pump without sufficient water can damage the pump.
- Check the setting of the flow control on the pump. See picture 2. Check the pump outlet nozzle and the water tube for dirt and debris. Clean if necessary.
- Make sure the pump is connected to the water tube tightly. Check the fountain tubing for kinks and obstructions
- The pump may be "air locked". Plug and unplug the pump several times to clear any air that may have been trapped.
- 2. If the water does not flow out of the fountain, it may be caused by kinked or loose water tubes, make sure water tubes are properly connected.