


Visit Our Website



SCAN ME
serenelifehome.com

serenelifeTM

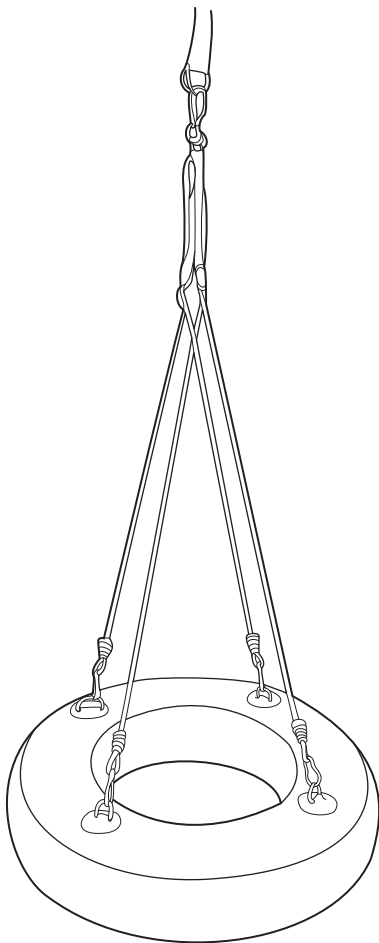

SLSINFSWN99









36" Inflatable Tire Swing with Hang Kit

USER GUIDE

About SereneLife

SereneLife products are designed to create a more comfortable living space, indoors and out. Our team presents innovative lifestyle solutions throughout the year that promote simplicity and serenity.

We're committed to delivering the most dependable products so you can live a better, more serene life.

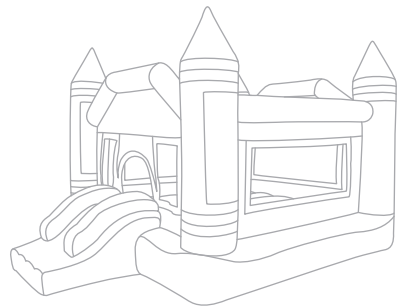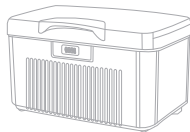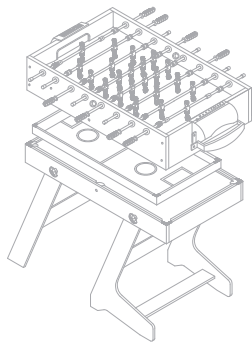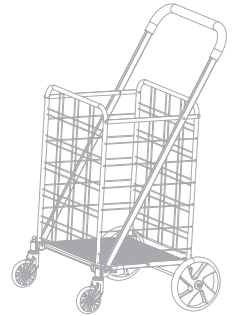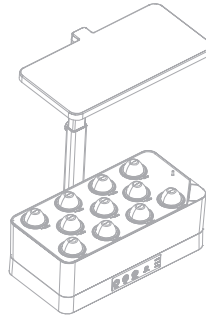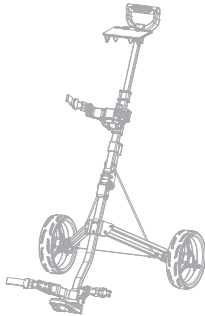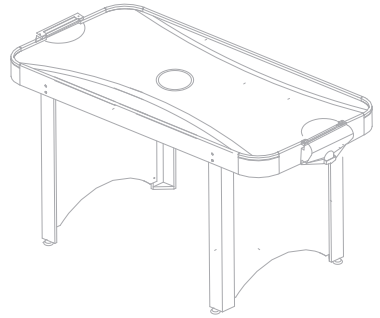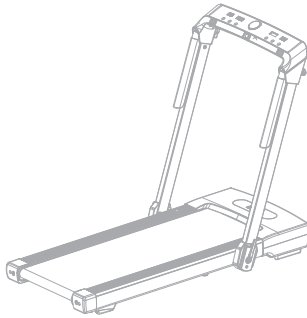

CONTENTS

FEATURES AND TECHNICAL SPECS 4

SAFETY AND ASSEMBLY INSTRUCTIONS 5

PARTS LIST 6

ASSEMBLING STEPS 6

INFLATING THE SWING 7

REPAIR KIT 9

STORAGE 9


ENSURING SAFETY OF THE SWING 9

MAINTAINING THE SWING 10

DISPOSING OF THE SWING 10

REGISTER PRODUCT 11

READ AND SAVE THESE INSTRUCTIONS

**WARNING:** Cancer and Reproductive Harm - www.P65warnings.ca.gov

Features:

- Universal Hanging Kit: Mounts to Trees & Posts
- Easy to Set Up: Takes 5-10 Minutes
- Inflates in 3 Minutes with Included Hand Pump
- Easy to Store and Transport with Included Carry Bag
- For Indoor/Outdoor Use
- All-Season Resistant: Safe to Leave Outside
- Accommodates Up to 2 Riders
- Marine Grade Waterproof IPX6 Rated Construction
- Weatherproof, Water-Resistant, & UV-Resistant Tire Seat
- Puncture-Resistant Inflatable Tire Seat
- Flat Valve for Safety and Convenience
- Durable Thick-Braided Swing Rope
- Attachable Swivel for 360 Degree Spinning
- Super Sturdy Construction for Spinning Swing Safety
- Includes Repair Kit with 2 Patches and Wrench

What's in the Box:

- (1) Inflatable Tire Swing
- (1) Heavy Duty Hand Pump
- (2) 51" to 71" Adjustable Thick Braided PE Ropes
- (6) Heavy Duty Carabiners
- (2) Swivel Spinners
- (2) Webbing for Tree
- (1) Carry Bag
- (1) Repair Kit

Technical Specs:

- Swing Seat Inflated Size (Length x Width x Height): 36" x 36" x 8" -inches
- Packed in Carry Bag Dimensions (Length x Width x Height): 12" x 12" x 26" - inches
- Swing Seat Construction Material: 20cm Dropstitch + 0.7mm Thick PVC Tarpaulin
- Adjustable Hanging Rope Construction Material: Thick Braided PE Ropes
- Adjustable Hanging Rope Length: 51" Up to 71" -inches

Safety and Assembly Instructions

IMPORTANT

**READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS.
KEEP FOR FUTURE REFERENCE.**



WARNING! CHOKING HAZARD-SMALL PARTS, NOT FOR CHILDREN UNDER 3 YEARS.

WARNING! MAXIMUM WEIGHT SHOULD NOT EXCEED 220LBS.

WARNING! DO NOT USE WITHOUT ADULT SUPERVISION!

WARNING! ADULT ASSEMBLING REQUIRED!

ESSENTIAL INFORMATION

- Recommended for children 3 years and older.
- Do not leave the child unattended while in use.
- **CAUTION:** Use only under adult supervision.
- Good safety practices should be followed at all times.
- **READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT.**








Hanging hardware not included. Ideally, the swing body should be hung over grass, sand, wood chips, or other soft surfaces. Under no circumstances should it be hung over concrete, asphalt, or other hard surfaces. The distance from the ground should not exceed 15.7 inches; the maximum fall height should not be more than 18 inches.

Two S-hooks are attached to the rope to allow for adjustment of the rope length. Please be sure to examine the ropes regularly. If the color of the rope has faded, frays easily, or gives off a powdery material when rubbed between the fingers, we recommend you replace the rope.

The equipment should be hung in such a way that a distance of at least 6.5 feet is clear on either side. It can be hung on an A-frame or swing set, or on a tree limb with a diameter of at least 9.8 inches.


WARNING! Small parts for assembly by an adult.

PARTS LIST

	Description	Image	QTY
A	Inflatable swing		1
B	Belt with 2 D-rings		2
C	Rope with adjustable buckle		2
D	Carabiner		6
E	Hand pump		1
F	Repair kit		1
G	Carry bag		1

ASSEMBLING STEPS



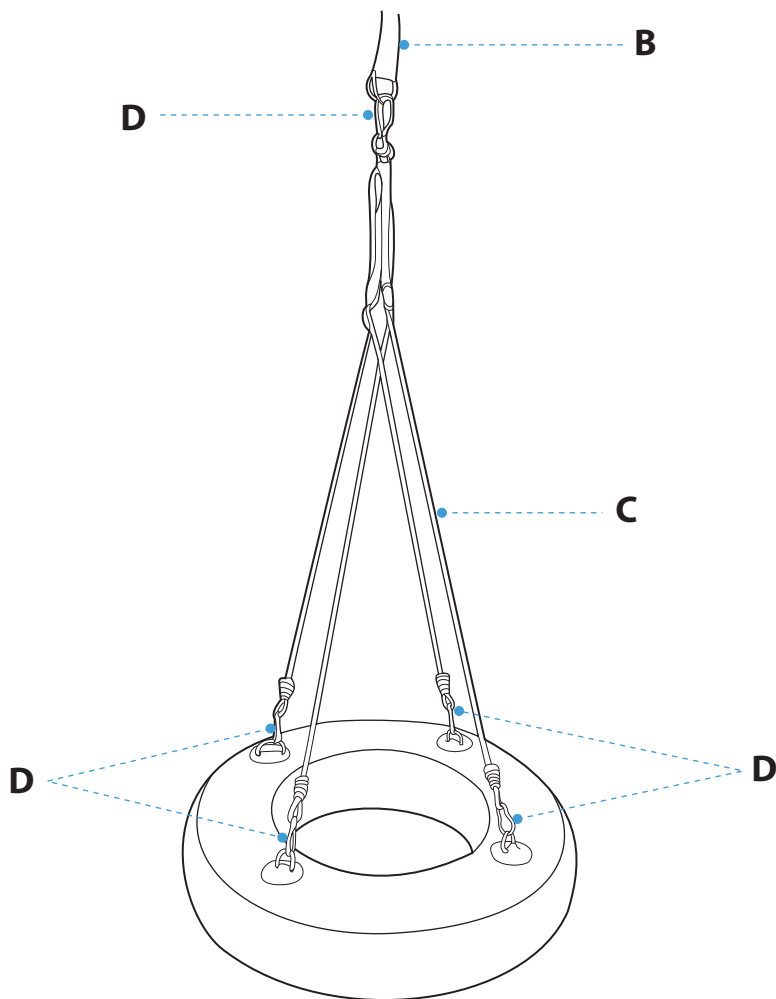


INFLATING THE SWING

1. **Unfold the swing from the packaging:** Choose a smooth and clean surface to unfold the swing. Roll out the swing until it is laying flat with the top side facing up.
2. **Valve operation:** Follow the instructions below for valve operation and correct inflation and deflation procedures. To close off the valve for inflation, make sure that the center valve pin is in the "up" position. If it is in the "down" position, press the valve pin to the "up" position.

To open the valve for deflation, press down on the valve pin (no need to turn it) to ensure the center valve pin is in the "**down**" position. Be careful of any sand or debris around the valve area when deflating, as small particles could become airborne with the release of the air pressure. Always lock the valve cover over the valve stem when in use. This will prevent accidental air release and entrance of any particles into the air chambers.


3. Inflation steps

- a. Unscrew the valve cap, press down the valve pin to open the valve, and let the air flow naturally into the product. Press down the valve pin again to close the valve in the "**up**" position.

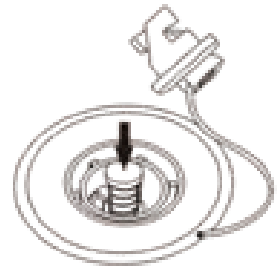


- b. Make sure the pump hose is connected to the "**inflate**" outlet.

- c. Connect the pump nozzle into the valve receptacle with a half-twist motion (clockwise).

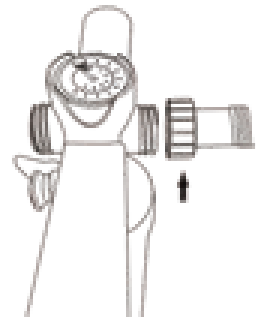

- d. Start pumping air into the swing by sliding the pump piston up and down.
Inflate until you reach the required pressure: minimum 5 psi for proper swing operation and maximum of 8 psi for this product.

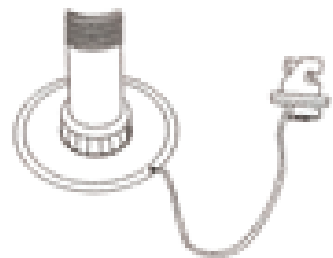

- e. After inflation, tighten the valve cap. Only the valve cap can ensure final air tightness.

REPAIR KIT

If your swing needs repair, use the patches in the repair kit and follow these steps:

1. Deflate the swing completely, lay it flat, and wait for it to dry.
2. Cut a patch that is 2 inches larger than the tear or rip all the way around.
3. Use alcohol to clean the repair area.
4. Apply three coats of adhesive to the patch and the swing.
Wait 5 minutes between each coat.
5. Place the patch over the tear or rip. The adhesive will react quickly, so make sure the positioning is precise. Use the roller to ensure the patch lies flat and even.
6. Wait 24 hours before re-inflating the swing.

STORAGE

1. Avoid storing your product in direct sunlight.
2. If you have to store your product inflated between uses, attach your pump to make sure the product is carrying the correct air pressure.
3. Do not roll up the product too tightly when storing it while deflated.

Ensuring Safety of the Swing

- Clearance distance should be 13 feet around the swing. Do not use the equipment until properly installed. This swing should not be used in any other manner other than its intended use. Adult supervision is required. Adults should verify that the hanging ropes are secured and cannot be looped back on the swing.
- **It is important for adults to instruct children to:**
 - Dress appropriately while using the swing (avoid ponchos, scarves, and other loose-fitting clothing that may be potentially hazardous).
 - Sit in the center of the swing with full weight on the seat if swinging alone.
 - Avoid swinging empty seats.
- **DO NOT**
 - Walk close to, in front of, behind, or between moving swings.
 - Twist ropes or loop them over the top support bar, as such action may reduce the strength of the rope.
 - Get off the swing while it is in motion.
 - Climb on the swing when it is wet.
 - Attach additional items to the swing that might cause a strangulation hazard.
 - Wear a bicycle or sport helmet while on the swing.

Maintaining the Swing

At the beginning of each play season, adults should:

- Tighten all hardware.
- Check all protective coverings on pipes, edges, and corners.
Replace if they are loose, cracked, or missing.
- Check all moving parts, including the swing seat and ropes, for wear, rust, or other deterioration. Replace as needed. The hardware used for this swing (binding post, screw, S hook, lock washer, flat washer, and metal ring) can be found at local hardware stores.
- Check metal parts for rust; if found, repaint using a non-lead-based paint that meets ASTM requirements.
- If the swing is hung from a swing set frame, lubricate all metallic moving parts that are attached by a metal connection.
- If the swing is hung from a tree branch, rake and check the depth of loose-fill protective surfacing materials (such as mulch or sand) to prevent compaction and to maintain appropriate depth (minimum 9.84 inches); replace as needed.

Once a month during the play season, adults should:









- Tighten all hardware.
- Check all protective coverings on pipes, edges, and corners.
Replace if they are loose, cracked, or missing.
- Check all moving parts, including ropes, for wear or other deterioration.
Replace as needed.

At the end of each play season, or when the temperature falls below 40°F, adults should:

- Remove the swing from its outdoor location.
- Store the swing in a dry environment.

Disposing of the Swing

To dispose of the swing, first disassemble it. Dispose of it in a way that ensures no unreasonable hazards exist at the time the swing is discarded. This conforms to ASTM consumer safety performance specifications for home playground equipment.

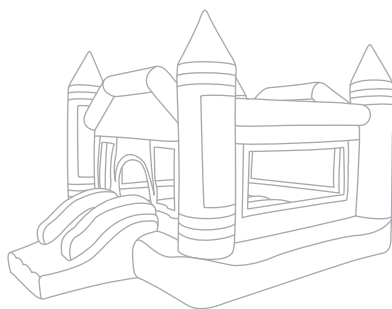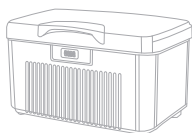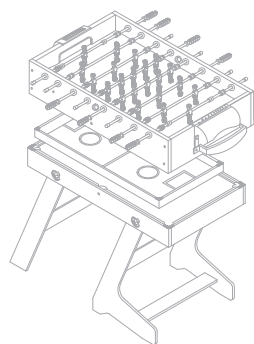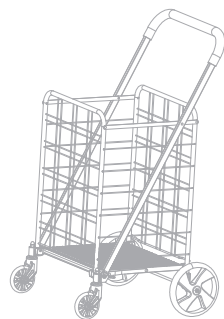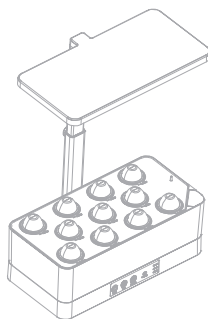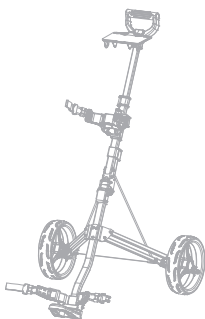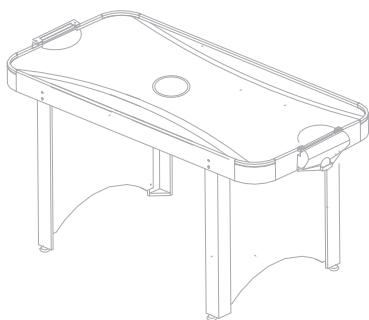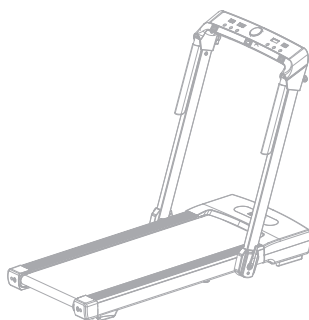

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support.

Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.



Serenelifehome.com/register

serenelife™



Questions or Comments?

We are here to help!

Phone: 1.718.535.1800

Serenelifehome.com/ContactUs